



Philips PowerLife
Steam iron

Steam 40g/min;130g steam boost

SteamGlide soleplate
Safety Auto off + Anti-calc
2400 Watts



GC2965/80



Built for powerfull ironing

With electronic safety shut-off

For great results day after day, you want an iron that never lets you down. With its new SteamGlide soleplate, constant high steam output and Calc buster pill, this practical iron gives you value for money that lasts!

Powerful performance

- 2400 Watt enables constant high steam output

Comfortable ironing

- Vertical steam for crease removal in hanging fabrics
- Cord freedom with the 360 degree swivel solution

Easy gliding on all fabrics

- SteamGlide soleplate is Philips premium soleplate

Safe ironing

- 3 ways of automatic shut-off

Easily removes creases

- Continuous steam output up to 40 g/min
- 130 g steam boost to remove stubborn creases easily

PHILIPS

Highlights

2400 Watt

**2400 W
max**

2400 Watt enables constant high steam output.

Up to 40 g/min of steam



Philips steam iron with continuous steam output of up to 40 g/min gives you the perfect amount of steam to efficiently remove all creases.

Steam boost up to 130 g



The steam boost can be used for vertical steaming and tough creases.

Cord freedom


Cord freedom with the 360 degree swivel solution

SteamGlide soleplate



SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistancy, glides excellent and is easy to clean.

Vertical steam

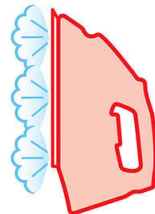

**Vertical
shot of steam**

This Philips iron has a vertical steam function, for crease removal in hanging fabrics.

Automatic shut-off

**Safety
auto
off**

Iron shuts off automatically when the iron is hold still for 30s on soleplate, 30s lying on a side or standing on its heel rest for 8 minutes.

Specifications

Easy to use

- Water tank capacity: 300 ml
- Safety auto off
- Drip stop
- Cord freedom (swivel): 360 degree cord freedom
- Extra stability: Rubber bumper
- Power cord length: 1.8 m outside Europe, 1.9 m within Europe

Weight and dimensions

- Product weight: 1.2 kg
- Product dimensions: 29.5 x 11.6 x 19.5

Fast & powerful crease removal

- Soleplate: SteamGlide
- Vertical steaming
- Spray
- Variable steam settings

Technical specifications

- Voltage: 220-240 V

Calc management

- Suitable for tap water
- Calc clean solution: Double active calc clean

Comfortable ironing

- Cord length: 1.8 m

Crease removal

- Continuous steam: Up to 40 gr/min
- Steam Boost: Up to 130 gr/min



Issue date 2021-11-11

Version: 1.1.2

© 2021 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com