

Philips Series 2200  
Fully automatic  
espresso machines

- 2 beverages
- Classic Milk Frother
- Glossy Black
- Touch display

EP2221/40



## 2 delicious coffees from fresh beans, with ease

Thanks to the intuitive touch display

Enjoy the delicious taste and aroma of coffee from fresh beans, at the perfect temperature, thanks to our intelligent brewing system. The classic milk frother allows you to create a silky smooth cappuccino or latte macchiato with ease.

### **A variety of coffees customized to your taste**

- Delicious milk froth thanks to the classic milk frother
- Easily adjust to your taste with 12-step grinder levels
- Easy selection of your coffee with intuitive touch display
- Adjust aroma strength and quantity via My Coffee Choice

### **High quality coffee from fresh beans**

- Keep your beans fresh for longer thanks to the aroma seal
- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup\*\*

### **Effortless use and cleaning for everyday enjoyment**

- Up to 5000 cups\* without descaling thanks to AquaClean
- Easy cleaning thanks to fully removable brew group
- Dishwasher safe parts for your convenience
- Automatic descaling for your convenience

**PHILIPS**

# Highlights

## AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups\*, while enjoying clear and purified water.

## Classic milk frother



The Classic Milk Frother dispenses steam, allowing you to easily prepare silky smooth milk froth for your cappuccino. What's more? With only two parts, the Classic Milk Frother is also easy to clean.

## Intuitive touch display



The irresistible taste and aroma of coffee from fresh beans is just one touch away. Our intuitive touch display allows you to easily select your favorite coffee.

## My Coffee Choice




Adjust the strength and quantity of your beverage with the My Coffee Choice menu. Easily choose from three different settings to suit your preferences.

## 12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

## Perfect temperature and aroma

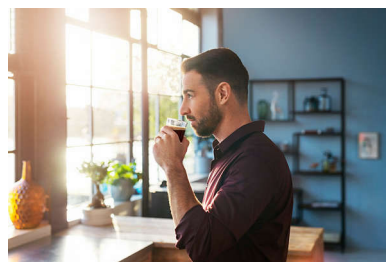

The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

## 100% ceramic grinders



Bring out the full flavor of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures they last for at least 20,000 cups.

## Preserve beans' aroma



The new Aroma seal protects your favorite coffee beans and makes sure they preserve their original aroma over time, while reducing the grinder noise.

## Removable brew group



The brew group is the heart of every fully automatic coffee machine, and should be cleaned regularly. The removable brew group allows you to clean it thoroughly just by rinsing it under the tap.

# Specifications

## Country of origin

- Made in: Romania
- Designed in: Italy

## Customization

- Aroma Strength Settings: 3
- Grinder Settings: 12
- Pre Brew Aroma control
- Temperature settings: 3

## Variety

- Beverages: Espresso, Hot water, Coffee
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

## Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

## Accessories

- Included: Grease tube, Measuring scoop, Water hardness test strip, AquaClean filter

## Technical specifications

- Cord length: 100 cm
- Voltage: 230 V

- Frequency: 50 Hz
- Capacity water tank: 1.8 L
- Capacity waste container: 12 servings
- Coffee bean capacity: 275 g
- Weight of product: 7.5 kg
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Pump pressure: 15 bar
- Color & Finishing: Glossy black
- Product dimensions: 246x371x433 mm

## General specifications

- Adjustable spout height: 85-145 mm
- Milk Solution: Classic Milk Frother
- Ease of cleaning & maintenance: AquaClean filter compatible
- Dishwasher safe parts: Classic milk frother, Drip tray
- User Interface: Touch screen display

## Service

- 2-year guarantee

## Sustainability

- ECO setting
- Energy label: A-class
- Power consumption brewing: 1500 W
- Recyclable packaging material: >95 %



Issue date 2024-01-29

Version: 4.4.2

EAN: 87 20389 00132 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.

\*\*Based on 70-82 °C.