

Philips 3000 Series
Steam iron

2600 W power
40 g/min continuous steam
200 g steam boost
Ceramic

DST3041/36



Powerful steam to tackle every crease

Steamboost up to 200g

Our steam iron 3000 series makes ironing easy with the powerful steam boost that tackles tough creases. The ceramic soleplate ensures smooth gliding while the 300ml water tank is large enough to finish smaller ironing loads without a refill.

Fast ironing

- 2600 watt for fast heat-up
- Continuous steam up to 40g/min for consistent performance
- Steam boost up to 200 gram for extra power

Easy ironing

- Iron more in one go with the 300ml water tank
- Smooth gliding ceramic soleplate
- Our drip stop prevents water dripping on your garment
- Heat resistant storage box
- Reach difficult places easily with the triple precision tip
- Vertical steaming for hanging fabrics

Long lasting performance

- Built-in calc-clean slider, long-lasting steam performance


PHILIPS

Steam iron
2600 W power 40 g/min continuous steam, 200 g steam boost, Ceramic

DST3041/36

Highlights

Continuous steam up to 40g/min

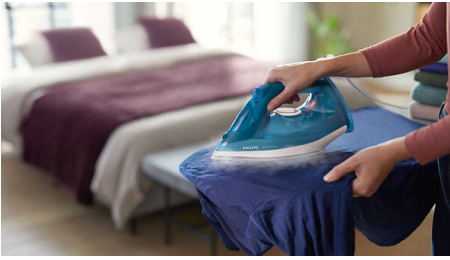

Strong and consistent steam output to remove creases faster.

Steam boost up to 200 gram



The strong steam boost gives you that extra power to penetrate deeper into the fabric and cut through the tough creases easily.

2600 watt for fast heat-up



Delivers fast warm-up and powerful performance.

Ceramic soleplate



Our durable ceramic soleplate glides well on any ironable garment. It does not stick to your garment, is scratch resistant and easy to keep clean.

Drip stop



Our drip-stop system prevents leakage to avoid stains from water droplets, so you can iron with confidence at any temperature.

Vertical steam



With the vertical steam function you can refresh garments right on the hanger and remove creases from hanging fabrics such as curtains. No ironing board required.

Triple precision tip



The tip is precise in 3 ways: it has a pointed tip, button groove and sleek nose design. Our triple precision tip helps you handle even the hardest-to-iron spots, like buttons and pleats.

Built-in calc-clean slider



This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium buildup, or limescale, and maintain peak performance.

300ml water tank



Fewer refills are required thanks to a large 300ml water tank. So you can iron more clothes in one go.

Steam iron
2600 W power 40 g/min continuous steam, 200 g steam boost, Ceramic

DST3041/36

Specifications

Calc management

- Built-in Calc Clean Slider
- Descaling and cleaning

Storage

- Heat resistant storage box

Powerful performance

- Steam boost: Up to 200 gram
- Continuous steam: 40 g/min
- Ready to use: 35 sec.
- Power: 2600 W

Easy to use

- Water tank capacity: 300 ml
- Drip stop
- Tap water suitable
- Power cord length: 1.9 m

- Soleplate: Ceramic
- Vertical steam
- Voltage: 220-240 V
- Water spray

Guarantee

- 2 year worldwide guarantee

Green efficiency

- Energy saving mode
- Product packaging: 100% recycable
- User manual: 100% recycled paper

Size and weight

- Packaging dimensions (WxHxL): 32x13x16.2 cm
- Weight of iron: 1.2 kg
- Product dimensions (WxHxL): 12.1x14.3x29 cm
- Total weight with packaging: 1.5 kg



Issue date 2023-08-08

Version: 5.5.1

EAN: 87 20389 00316 5

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com