

PHILIPS

Air Purifier for Large Rooms

2000i Series

Purifies rooms up to 45 m²

380 m³/h clean air rate (CADR)

HEPA & Active Carbon filter

Connected with Air+ app

AC2936/63



Purifies the air in less than 8 min (1)

99.9% virus, allergen & pollutant removal (3,4,7)

With just one push of a button, the air purifier filters the invisible viruses, allergens, dust or pollutants in your home, to keep it clean and safe. It purifies quickly and effectively, with a clean air delivery rate (CADR) of 380 m³/h.

Superior performance

- Thoroughly purifies rooms up to 98 m²
- Eliminates 99.97% of all unseen particles from the air (13)

Superior performance

- Smart sensors for intelligent purification
- Thoroughly tested for quality you can trust
- Removes up to 99.9% of viruses and aerosols from the air

Seamless operation

- Auto-ambient lighting
- Low energy consumption
- Sleep mode with ultra-quiet operation


Effortless control

- Automatically senses and adapts for best results

Effortless control


Highlights

The Philips Air+ app

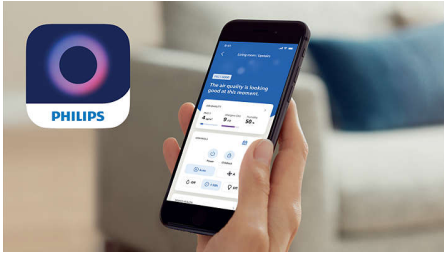

Air+ app provides a smart experience that ensures you breathe clean and healthy air. The app keeps track of all indoor and outdoor pollutants and automatically adjust your devices performance, so you dont have to. Air+ keeps you in control, at home or away. Control the air at home with your voice using Amazon Alexa or Google Home (8)

High performance

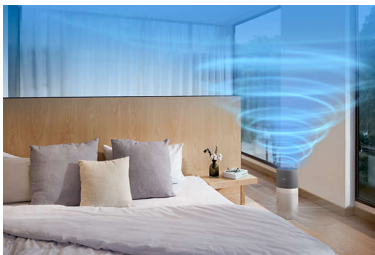

The 360 degree powerful airflow distributes clean air to every corner of the room at a CADR (Clean Air Delivery Rate) of 380 m3/h, purifying rooms thoroughly and protecting you from bacteria, virus, pollen, dust, pet dander, dust mites, harmful gases, odors and other pollutants. 20 m2 is purified in just 6 minutes. (1)

Intelligent sensors



Scans the air 1000x a second to detect ultra fine-particles. Reports the air quality in real time, and intelligently chooses the right speed for your home (in auto mode).

Auto-ambient lighting



The display light automatically adjusts according to the environment in your room, giving you all the benefits without any of the disturbance.

Quality you can trust



Philips purifiers go through 170 mandatory and strict inspection tests before releasing from factory. They are subjected to rigorous life and durability tests, for continuous operation 24/7.

Low energy consumption



Thanks to its energy efficient design, the air purifier runs at max. 46 W power. This is equivalent to one standard light bulb.

Up to 99.9% virus removal



Captures aerosols including those which may contain respiratory viruses. Tested independently by airmid health-group to remove up to 99.9% of viruses and aerosols from the air (3). Also tested for coronavirus (5).

Smart filter indicator



Long filter lifetime means long-term saving. Philips NanoProtect HEPA filters help you save money in the long term vs other leading air purifiers (12). Check the filter lifetime indicator in your purifiers digital display, to know when it is time to replace the filter.

Ultra-quiet operation



In Sleep mode, display lights are dimmed, and the purifier operates in near silence for clean air while you sleep.

Specifications

Country of origin

Made in: China

Energy efficiency

Max. power consumption: 46 W W

Stand-by power consumption: <2 W W

Voltage: 230 V V

Logistic data

EAN F-box: 8710103939818

12NC code: 883493613770

Maintenance

Recommended filter change: 36 months

Replacement filter: FY2180/10

Service: 2-year worldwide guarantee

Connectivity

App, connects via Wi-Fi: Air+

Smartphone compatibility: iPhone and Android devices

Voice control: Alexa, Google Home (8)

Weight and dimensions

Weight: 5.8 kg kg

Dimensions (L*W*H): 274*274*585

Color(s): White, Grey

Performance

CADR (Particle, GB/T): 380 m³/h m³/h

Room size (G/BT): 45 m²

Filtration: HEPA, Active Carbon, Prefilter

Air quality sensor(s): PM2.5 particle

Particle filtration: 99.97% at 0.003 microns

Allergens filtration: 99.99%

Virus & aerosol filtration: 99.9%

Usability

Min. sound level (Sleep mode): 15 dB dB

Max. sound level (Turbo mode): 54 dB dB

Cord length: 1.8 m m

Automatic mode

Sleep mode

Manual speed settings: 3 (Sleep, Speed 1, Turbo)

Air quality feedback: Color ring, numerical

Auto-ambient light

* (1)From the air that passes through the filter, it is a theoretical time for one-time cleaning calculated by dividing its CADR 380 m³/h by the room size of 48 m²(assuming the room is 20 m² in floor area and 2.4 m in height).

* (2)CADR is tested by a certified third party lab, according GB/T18801-2015. Following improvements in our testing method and production quality control, we upgraded the CADR values of our products.*If you buy a product where this info is not updated on the box yet, rest assured that the product performs at the higher specification mentioned online.

* *If you buy a product where this info is not updated on the box yet, rest assured that the product performs at the higher specification mentioned online.

* (3) Microbial Reduction Rate Test conducted at Airmid Health group Ltd. tested in a 28.5m³ test chamber contaminated with airborne influenza A(H1N1). * An air purifier by itself does not protect against Covid-19, but can be part of plan to protect yourself and your family (US Environmental Protection Agency)

* An air purifier by itself does not protect against Covid-19, but can be part of plan to protect yourself and your family (US Environmental Protection Agency)

* (4)From the air that passes through the filter, tested with NaCl aerosol by iUTA according to DIN71460-1.

* (5)Microbial Reduction Rate Test at external lab, in a test chamber contaminated with avian coronavirus (IBV) aerosols, with Philips HEPA NanoProtect filter.

* (6)The recommended service life for the device is based on a theoretical calculation of the average annual regional values of harmful air particles outdoors and daily use of the air purifier for 16 hours in automatic mode.

* (7)Tested on the filter media for 1 pass efficiency at 5.33cm/s air flow, by a third party lab./From the air that passes through the filter, tested to JISB 9908-2015

* (8)Alexa and Google Home availability depends on your location

* (9)The calculated average sound pressure at 1.5 meter from the device, based on measurements according to IEC 60704. Sound pressure level

* (10)Philips air purifiers have higher Clean Air Delivery Rate and energy efficiency with a NanoProtect HEPA filter than with a HEPA H13 filter, tested to GB/T 18801

* (11)From the air that passes through the filter, tested with NaCl aerosol by a 3rd party laboratory

* (12)Savings based on advertised lifetime of filter and pricing per on brand websites or retailers, Netherlands, 21 June 22.

