

PHILIPS

Bean to Cup coffee machine

Series 3200

5 Beverages

LatteGo

Silver

Touch display

EP3246/70



5 delicious fresh bean coffees, easier than ever

LatteGo, the fastest to clean milk system ever*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds*

A variety of coffees customised to your taste

- Silky-smooth cappuccino; freshly brewed by yourself at home.
- Enjoy 5 coffees at your fingertips, including cappuccino
- Easily adjust to your taste with 12-step grinder levels
- Easy selection of your coffee with intuitive touch display
- Adjust aroma strength and quantity via My Coffee Choice

High-quality coffee from fresh beans

- Keep your beans fresh for longer thanks to the aroma seal
- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup**

Effortless use and cleaning for everyday enjoyment

- Easy cleaning thanks to the fully removable brew group
- Up to 5000 cups*** without descaling thanks to AquaClean
- LatteGo is exceptionally easy to clean: 2 parts, no tubes
- Dishwasher safe parts for your convenience

Highlights

LatteGo milk system




Enjoy silky-smooth cappuccino, even with your favourite plant-based milk alternatives. Thanks to the cyclonic frothing technology, LatteGo transforms various types of milk and plant-based alternatives with the right amount of fat and protein into the best possible dense layer of foam.

5 aromatic coffees



Enjoy your favourite coffees for your special moments. Whether you crave an espresso, americano or latte, your bean to cup coffee machine delivers perfect results with no hassle and in no time!

Intuitive touch display

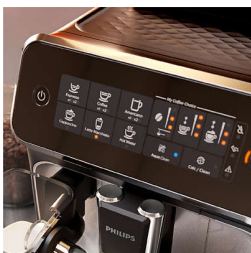

The irresistible taste and aroma of coffee from fresh beans is just one touch away. Our intuitive touch display allows you to easily select your favourite coffee.

My Coffee Choice



Adjust the strength and quantity of your beverage with the My Coffee Choice menu. Easily choose from three different settings to suit your preferences.

12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

Perfect temperature and aroma




The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

100% ceramic grinders



Bring out the full flavour of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures that they last for at least 20.000 cups.

2 parts, no tubes milk system

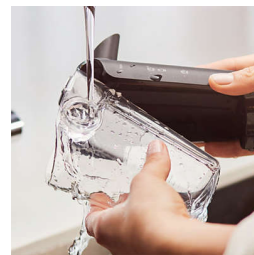

Our 2 parts milk system has no tubes or hidden parts and can be cleaned in as little as 15 seconds under the tap* or in the dishwasher.

AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups***, while enjoying clear and purified water.

Specifications

Country of origin

Designed in: Italy
Made in: Romania

Customisation

Aroma Strength Settings: 3
Coffee and Milk Length: Adjustable
Grinder Settings: 12
Pre-Brew Aroma control
Temperature settings: 3

Variety

Beverages: Espresso, Hot water, Cappuccino,
Coffee, Latte Macchiato, Americano
Coffee Powder Option
Double Cup
Milk Double Cup: No

Other features

Removable brew group
Aroma Seal
Guided descaling
AquaClean

Accessories

Included: Measuring scoop, Water hardness
strip test, AquaClean filter, Grease Tube,
LatteGo storage lid

Technical specifications

Cord length: 100 cm
Voltage: 230 V
Frequency: 50 Hz
Capacity milk carafe: 0.26 L
Capacity water tank: 1.8 L
Capacity waste container: 12 servings
Weight of product: 8 kg
Coffee bean capacity: 275 g
Waste container: Frontal access
Water tank: Frontal access

Filter compatibility: AquaClean

Pump pressure: 15 Bar

Colour & Finish: Black, Silver Paint

Product dimensions: 246x371x433 mm

General specifications

Adjustable spout height: 85-145 mm

Milk Solution: LatteGo

Ease of cleaning and maintenance:

AquaClean filter compatible

Dishwasher-safe parts: Drip tray, LatteGo

User Interface: Touch screen display

Service

2 year guarantee

Sustainability

ECO setting

Energy label: A-class

Power consumption brewing: 230 W

Recyclable packaging material: >95 %

