

# PHILIPS

## AVENT

### DECT Baby Monitor

### Audio Monitors

100% private connection

Night light and lullabies

Talkback function

Vibration alert

 Product Picture

SCD570/10



## The most reliable connection to your baby

### Advanced monitoring for you and your baby

Our new DECT SCD570/10 Baby Monitor delivers advanced monitoring. Providing the most reliable connection with crystal clear sound, temperature sensor, a soothing night light and lullabies for you and your baby.

#### **Freedom and flexibility**

- Range up to 330 meters\*
- A docking station to recharge your parent unit
- Superior operating time up to 18 hours
- Vibration alert
- Instant dim mode for a peaceful night

#### **Comforting and soothing your baby**

- Stay connected with talk back
- Comforting night light and lullabies to calm your little one

#### **Reliable, secure connection & constant reassurance**

- Always know when your monitor is in range and connected
- Perfect clear sound due to DECT Technology
- Energy saving Smart ECO mode
- Sound level lights indicate if the baby makes noise
- Monitor the temperature in your baby's room

# Highlights

## Zero interference with DECT



DECT technology guarantees zero interference from any other transmitting product like other baby monitors, cordless phones and cell phones. Data encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby.

## Perfect clear sound



Hear every tiny giggle, gurgle, and hic-up with perfect clarity. DECT (Digital Enhanced Cordless Telecommunications) technology provides high quality, crystal clear sound so you can hear your baby anytime.

## Smart ECO mode



The unique Smart ECO mode automatically minimizes your transmission power and increases your battery lifetime. The closer you


are to your baby, the less power is needed for a perfect connection (not available in US and Canada).

## Sound activation 5 LED lights



Lights are activated to indicate the level of sound in your baby's room. Even when the Parent Unit is muted.

## Always connected

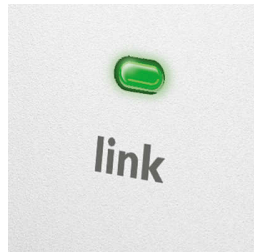

The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

## Temperature sensor



The temperature sensor with customized alert allows you to monitor the climate in your baby's room. Your baby can't regulate its body temperature as well as you can and a slight change in temperature can make your baby restless. A customized temperature sensor will

immediately alert you, through the digital display on the parent unit, if the climate in your baby's room changes.

## 330m Range



Indoor range up to 50 meters\*. Outdoor range up to 330 meters\*.

## Docking station

A docking station enables you to conveniently recharge your parent unit.

## Operating time up to 18 hours



The small, rechargeable parent unit will give you the freedom of cordless streaming for up to 18 hours before re-charging is required.

## Vibration alert

Personalize your alert settings and get notified by a silent and subtle vibration of the parent unit.

## Peaceful night mode

Press the night dim button to instantly activate the peaceful night mode. In this mode the light intensity of the lights, display as well as the volume of the alerts are reduced. Easily press the night dim button again in order to switch back to normal operating mode.

# Specifications

## Tuner/Reception/Transmission

Automatic channel selection  
Frequency band: DECT

## Convenience

Auto out-of-range warning  
Battery low indication  
Battery charging indication  
Volume control  
Sensitivity control  
Sound-level lights

## Power

Operating time on battery hour: 18 hours  
Charging time: 10 hour(s)  
Power Supply: 120 V (US), 220 - 240 V

## Technical specifications

Storage temperature range: 10 - 40 °C  
Operating temperature range °C: 10 - 40 °C

## Features

Comforting night light  
Charging station  
DECT Technology  
Indoor range up to: 50m  
Linked and in range indication  
Energy saving Smart ECO mode: ECO mode, Yes

Outdoor range up to: 330 meters

Talkback function  
Temperature sensor  
Peaceful night mode and vibration alert  
Sound activation lights: 5 LED lights  
LCD Screen  
Soothing lullabies

## Logistic data

F-box dimensions (W x H x D): 220 x 156 x 94 mm

## Development stages

Stage: Pregnancy, 0 - 6 months

