



Philips Philips 4300  
Series  
Fully automatic  
espresso machines

- 8 Beverages
- LatteGo milk solution
- Black
- TFT display

EP4346/70



## 8 delicious fresh bean coffees, easier than ever

LatteGo, the fastest to clean milk system ever\*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds\*

### A variety of coffees customized to your taste

- Silky-smooth cappuccino; freshly brewed by yourself at home.
- Easy selection of your coffee with the intuitive display
- Adjust aroma and volume with the coffee customizer
- Your perfect cup, every time, thanks to 2 user profiles
- Enjoy 8 coffees at your fingertips, including latte macchiato

### High quality coffee from fresh beans

- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup\*\*
- Easily adjust to your taste with 12-step grinder levels

### Effortless use and cleaning for everyday enjoyment

- Easy cleaning thanks to fully removable brew group
- Up to 5000 cups\*\*\* without descaling thanks to AquaClean
- Dishwasher safe parts for your convenience
- Exceptionally easy to clean with LatteGo: 2 parts, no tubes

**PHILIPS**

Fully automatic espresso machines  
8 Beverages LatteGo milk solution, Black, TFT display

# Highlights

## 8 delicious coffees



Every moment has its own kind of coffee to enjoy. From powerful espresso to indulgent cappuccino, your fully automatic espresso machine delivers a perfect in-cup result without any fuss in no time.

## LatteGo milk system



Enjoy silky-smooth cappuccino, even with your favourite plant-based milk alternatives. Thanks to the cyclonic frothing technology, LatteGo transforms various types of milk and plant-based alternatives with the right amount of fat and protein into the best possible dense layer of foam.

## Intuitive display



There's little standing between you and your next delicious cup of coffee with our easy to use display. In a few steps you can customize your fresh-bean flavor and flow smoothly from craving to cup.

## Coffee customizer




Make any coffee your own with the coffee customizer's easily adjustable settings for intensity, coffee and milk length.

## User profiles

Enjoy coffee you love the same way every time with two user profiles that store your customized recipes. With an extra guest profile, your visitors can savor a coffee exactly the way they like, without changing yours.

## Perfect temperature and aroma

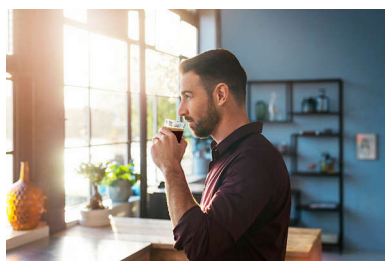

The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

## 12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into

EP4346/70


anything from ultra-fine powder to coarse grindings.

## 100% ceramic grinders



Bring out the full flavor of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures they last for at least 20.000 cups, from coarse to ultra-fine.

## Exceptionally easy to clean

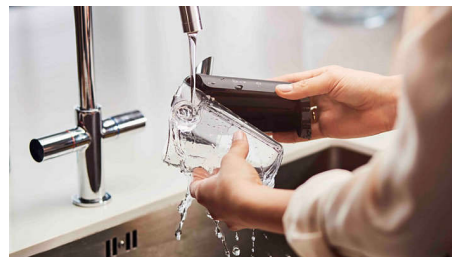

For your convenience, you can put LatteGo drip tray and the coffee ground container in the dishwasher. This will save time and ensure a hygienic cleaning.

## AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups\*\*\*, while enjoying clear and purified water.

# Specifications

## Country of origin

- Made in: Romania
- Designed in: Italy

## Customization

- Aroma Strength Settings: 5
- Coffee and Milk Length: Adjustable
- Grinder Settings: 12
- Pre Brew Aroma control
- User Profiles: 2, Guest
- Temperature settings: 3

## Variety

- Beverages: Espresso, Hot water, Cappuccino, Coffee, Milk froth, Ristretto, Latte Macchiato, Café au Lait, Americano, Caffé crema
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

## Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

## Accessories

- Included: Measuring scoop, Water hardness test strip, AquaClean filter, Grease tube, LatteGo storage lid

## Technical specifications

- Voltage: 230 V

- Color(s): Black
- Cord length: 100 cm
- Frequency: 50 Hz
- Capacity milk carafe: 0.26 L
- Capacity waste container: 12 servings
- Capacity water tank: 1.8 L
- Coffee bean capacity: 275 g
- Weight of product: 8 kg
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Max. cup height: 150 mm
- Pump pressure: 15 bar
- Finishing: Spraypainted Silver specchiato
- Product dimensions: 246x372x433 mm

## General specifications

- Milk Solution: LatteGo
- Adjustable spout height: 85 - 145 mm
- Dishwasher safe parts: LatteGo, Drip tray
- Ease of cleaning & maintenance: AquaClean filter compatible
- Type of display: TFT

## Service

- 2-year guarantee

## Sustainability

- ECO setting
- Power consumption brewing: 1500 W
- Recyclable packaging material: > 95%



Issue date 2023-08-16

Version: 7.7.1

EAN: 87 10103 93820 0

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Based on consumer testing in Germany comparing leading One touch (Coffee + Milk) Full Automatic Espresso Machines (2018).  
\* \*\*Based on 70-82 °C.

\* \*\*Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.