

Philips
Bagless vacuum cleaner

1400 W
PowerCyclone 3
3 accessories

FC8087



Small on the outside, powerful on the inside

Compact vacuum cleaner

The compact Philips vacuum cleaner for powerful cleaning. Easy to store, carry and maneuver thanks to its light weight and small size. Easy to empty dust container helps avoiding dust clouds. Experience the freedom to move.

Compact design

- Small sized appliance for compact storage

Compact design

- Light weight and compact, giving you the freedom to move

Easy to clean

- Advanced dust container design for hygienic emptying
- Easy to clean washable filter

Easy to clean

- Extra handle for easy carrying with cord winder function

Extra reach for perfect cleaning results

- Crevice tool help you to clean your furniture.

PHILIPS

Highlights

Easy to clean filter



Washable foam filter for life-long performance.

Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther

reach, so you can easily clean hard to reach places.

Small sized appliance

Small sized appliance for compact storage.

Crevice tool

Crevice tool help you to clean your furniture.

1400 W motor




This vacuum cleaner has an efficient 1400 Watt motor generating high suction power for good cleaning results.

PowerCyclone technology



The PowerCyclone technology delivers best cleaning results in one go through 3 highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber. 3) At the top of the cyclone, the exit blades effectively cut out the dust from the air.

Light weight and compact

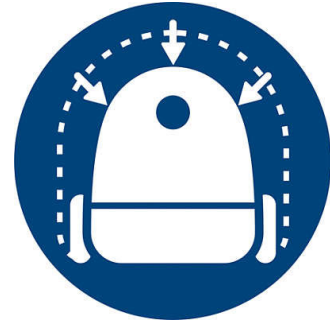

You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

Extra handle for easy carrying



Extra handle for easy carrying with cord winder function.

Specifications

Weight and dimensions

- Weight of product: 3.1 kg

Design

- Color: Deep black

Performance

- Input power (IEC): 1200 W
- Input power (max): 1400 W
- Suction power (max): 200 W

Usability

- Tube coupling: Conical
- Action radius: 7 m
- Carrying handle: Top and front
- Cord length: 4.5 m

- Tube type: Plastic 2-P tube
- Wheel type: Plastic

Nozzles and accessories

- Standard nozzle: Hard and Soft Floor Nozzle
- Accessories included: Crevice tool, Long bend tool

Sustainability

- User manual: 100% recycled paper
- Packaging: > 90% recycled materials

Filtration

- Dust capacity: 1.1 L
- Exhaust filter: Foam filter
- Motor filter: Microfilter



Issue date 2021-12-18

Version: 1.1.1

© 2021 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com