

Philips PerfectCare 8000  
Series  
Steam Generator

Intelligent automatic steam

Guaranteed no burns\*  
1.8L detachable watertank  
Ultra-light iron

PSG8040/65



## The iron that automatically steams for you

Effortless ironing. Fast results.

PerfectCare 8000 Series offers effortless ironing with our new motion sensor technology. It allows vertical and horizontal ironing with automatic steam.

### **Effortless ironing with fast results**

- Steam and refresh garments with automatic vertical steam

### **Ultimate performance**

- OptimalTEMP technology, guaranteed no burns\*

### **Ultimate performance**

- Ultra-powerful steam for crease removal

### **Effortless ironing with fast results**

- Iron effortlessly with automatic steam

### **Extra convenience to use**

- SteamGlide Elite soleplate for ultimate gliding performance
- 1.8L detachable water tank for easy refilling
- Automatic shut off when iron is left unattended
- Safe carry lock for safe and easy transport

**PHILIPS**

# Highlights

## Intelligent automatic steam



Our new motion sensor knows exactly when the iron is moving on your clothes, and delivers powerful steam automatically. Relax and enjoy effortless ironing, while the iron does the steaming for you.

## Automatic vertical steam

Our advanced motion sensor can recognize movements in any direction, so you can also steam and refresh dresses, jackets and curtains vertically.

## Ultra-light iron


The iron is amazingly light and comfortable to handle, gliding easily and reducing wrist strain. Its minimal weight of only 800g also makes it easy for vertical steaming of curtains and hanging clothes.

## Ultra-powerful steam



Strong, continuous steam for effective crease removal of even the most stubborn creases on the thickest fabrics.

## SteamGlide Elite soleplate

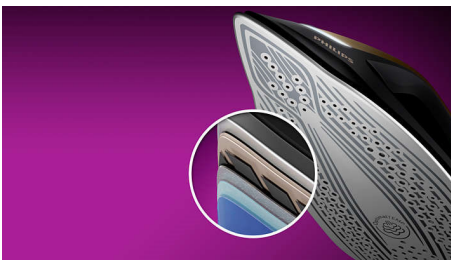

SteamGlide Elite is our best soleplate for ultimate gliding performance and maximum scratch resistance. Its stainless steel base is twice as hard as a regular aluminum base, and our patented 6-layer coating with advanced titanium layer glides effortlessly for the fastest results.

## 1.8L detachable water tank



The 1.8-liter transparent water tank gives you up to 2 hours of continuous use. When the water tank is empty, you will be reminded by the indicator light to refill at any time which you can easily do under the tap through the large filling door.

## Auto-shut off



Auto-shut off to save energy and for peace of mind.

## Safety carry lock



Lock your iron securely to the base station for easy carrying around the house and to reduce the risk of accidentally touching the hot soleplate.

## Easy De-Calc Plus

Regular descaling protects your iron, extends its lifetime, and ensures the best steam performance. Our exclusive Easy De-Calc Plus system collects limescale continuously, the indicator light and audio signal tell you when it needs emptying. Simply remove the plug and let the water and scale particles flow.

## Guaranteed no burns

With OptimalTEMP technology, we guarantee this iron will never cause burns to any ironable fabric when it is left unattended. You can safely leave it resting on your clothes or ironing board.

# Specifications

## General specifications

- Hose length: 1.8 m
- Hose storage: Compartment
- Power cord length: 1.8 m
- Power cord storage: Compartment
- Warranty: 2 years worldwide guarantee
- Energy saving: 22%

## Easy to use

- Safe on all ironable fabrics
- Heat up time: 2 minute(s)
- Detachable water tank
- Low water alert
- Refill any time during use
- Tap water suitable
- Soleplate: SteamGlide Elite
- Watertank capacity: 1800 ml

## Technology

- OptimalTEMP technology
- Steam sound dampening: No
- Intelligent Automatic Steam technology: 2nd generation

## Fast crease removal

- Pressure: Max 8.0 bar
- Power: Max 2400 W
- Continuous steam: Up to 150 g/min
- Steam boost: Up to 600 g
- Voltage: 220 - 240 V

## Scale management

- Descaling and cleaning: Easy De-calc Plus
- Calc clean reminder: Light & Sound

## Size and weight

- Weight of iron: 0.85 kg
- Packaging dimensions (WxHxL): 56.7 x 35 x 32.7 cm
- Product dimensions (WxHxL): 47.5 x 28.8 x 22.9 cm
- Total weight with packaging: 7.4 kg
- Weight of iron + base: 4.9 kg



Issue date 2023-08-14

Version: 7.7.1

EAN: 87 20389 00107 9

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* On all ironable fabrics