

PHILIPS

AVENT

DECT Baby Monitor

Audio Monitors

100% private connection

Night light

SCD501/01

 Product Picture

The most reliable connection to your baby

The essential connection to your baby

Our new DECT SCD501/01 Baby Monitor delivers complete reassurance by providing the essentials of a baby monitor. The most reliable connection with crystal clear sound and a comforting night light for you and your baby.

Reliable technology

- DECT technology guarantees zero interference & 100% privacy
- Perfect clear sound due to DECT Technology

Constant Reassurance and Secure Connection

- Always know when your monitor is in range and connected
- Sound level lights indicate if the baby makes noise
- Energy saving Smart ECO mode

Freedom and flexibility

- Range up to 300 meters*
- The parent unit is mains powered and battery operated
- Superior operating time up to 24 hours

Comforting and soothing your baby

- Comforting nightlight

Highlights

Zero interference with DECT



DECT technology guarantees zero interference from any other transmitting product like other baby monitors, cordless phones and cell phones. Data encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby.

Perfect clear sound



Hear every tiny giggle, gurgle, and hic-up with perfect clarity. DECT (Digital Enhanced Cordless Telecommunications) technology provides high quality, crystal clear sound so you can hear your baby anytime.


Smart ECO mode



The unique Smart ECO mode automatically minimizes your transmission power and increases your battery lifetime. The closer you


are to your baby, the less power is needed for a perfect connection (not available in US and Canada).

Always connected

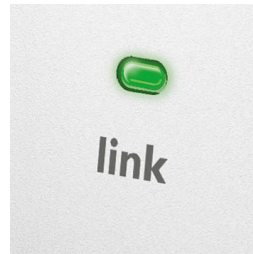

The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

Sound activation 5 LED lights

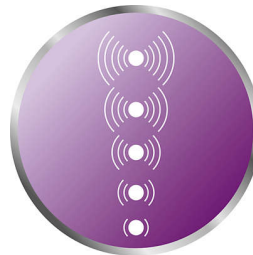

Lights are activated to indicate the level of sound in your baby's room. Even when the Parent Unit is muted.

300m Range



Indoor range up to 50 meters*, Outdoor range up to 300 meters*.

Battery and mains operated



The parent unit runs perfectly on mains power. For extra mobility you can also insert batteries to allow cordless use of the parent unit. You can insert two 1.5V R6 AA alkaline non-rechargeable batteries or two 1.2V R6 AA rechargeable batteries.

Operating time up to 24 hours

The small parent unit will give you the freedom of cordless streaming for up to 24 hours before re-charging is required. However this is depending on the type of batteries used and how often and how long you use the parent unit on batteries.

Comforting nightlight

Your baby may still be restless when you first put them to bed. Help soothe and calm your baby to sleep with the warm tranquil glow of the nightlight.

Specifications

Development stages

Stage: Pregnancy, 0 – 6 months

Features

Comforting night light

Indoor range up to: 50m

Linked and in range indication

Outdoor range up to: 300 meters

Power

Operating time on battery hour: 24 hours

Power Supply: 120 V (US), 220 – 240 V

Tuner/Reception/Transmission

Frequency band: DECT

Automatic channel selection

Convenience

Battery low indication

Auto out-of-range warning

Volume control

Sound-level lights

Tuner/Reception/Transmission

Number of channels: 120

Accessories

User manual

Quick start guide

Technical specifications

Storage temperature range: 10 – 40 °C

Operating temperature range °C: 10 – 40 °C

Logistic data

F-box dimensions (W x H x D): 220 x 156 x 56 mm

Features

DECT Technology

Energy saving Smart ECO mode

Sound activation lights: 5 LED lights

Volume control and sound activation

