




Philips PowerPro Compact
Bagless vacuum cleaner

1800 W

PowerCyclone 5
Allergy H13 filter

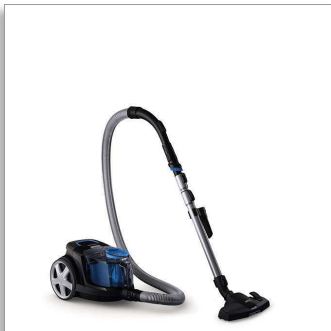

FC9350/01

Higher suction power* with PowerCyclone 5

Compact, yet powerful

With the Philips Bagless Vacuum 3000 Series, compact design meets king-size performance. Enjoy thorough cleaning throughout your home thanks to PowerCyclone 5 technology and our MultiClean nozzle..

Superior performance

- 1800W durable motor for high suction power
- MultiClean nozzle for thorough cleaning on all floors
- PowerCyclone 5 maintains high performance for longer
- Allergy H13 filter system captures >99.9% of fine dust

Effortless cleaning

- Compact and lightweight for easy carrying
- Dust container designed for hygienic emptying with one hand
- Soft brush integrated into handle, always ready to use

Effortless cleaning

- ActiveLock couplings easily adjust to every task


PHILIPS

Bagless vacuum cleaner
1800 W PowerCyclone 5, Allergy H13 filter

FC9350/01


Highlights

1800W durable motor

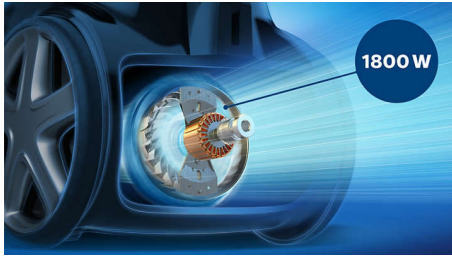

Durable 1800W motor generates up to 360W of high suction power for thorough cleaning results.

PowerCyclone 5 technology

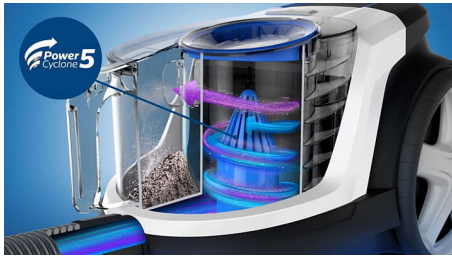

PowerCyclone 5 technology accelerates the air flow in the cylindrical chamber to separate dust from the air and maintain high performance and strong suction power for longer.

MultiClean nozzle



MultiClean nozzle is designed to seal closely to the floor to ensure thorough cleaning across all floor types.

Hygienic dust disposal




Easy-to-empty dust container is designed for hygienic disposal with one hand, to help minimize dust cloud.

Compact and lightweight




Compact and lightweight design ensure both storing and carrying the vacuum is easy.

Integrated brush

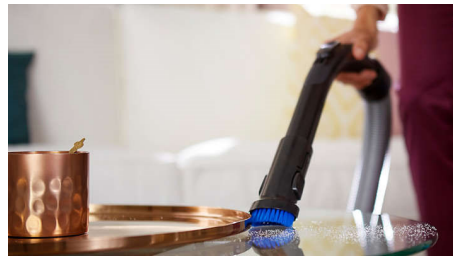

Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

Allergy H13 filter

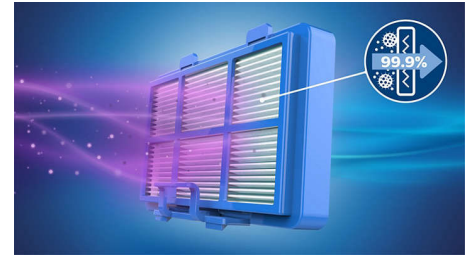

The fully-sealed filtration system captures >99.9% of fine dust particles - including pollen, pet hair and dust mites - for allergy sufferers and anyone demanding a higher level of hygiene. Filtration level is equivalent to HEPA 13**.

ActiveLock couplings



ActiveLock couplings allow attachments to easily fit to the telescopic tube with a simple snap.

Specifications

Weight and dimensions

- Dimensions of packaging (LxWxH): 525 x 320 x 315 mm
- Dimensions of product (LxWxH): 410 x 281 x 247 mm
- Weight of product: 4.5 kg

Performance

- Input power (IEC): 1600 W
- Airflow (max): 37 l/s
- Sound power level: 82 dB
- Vacuum (max): 33 kPa
- Input power (max): 1800 W
- Suction power (max): 360 W

Design

- Color: Deep black

Accessories

- Filter replacement kit: FC8010/02

Usability

- Action radius: 9 m

- Tube coupling: ActiveLock
- Carrying handle: Front
- Cord length: 6 m
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Plastic

Nozzles and accessories

- Accessories included: Crevice tool, Integrated brush
- Standard nozzle: MultiClean nozzle
- Accessory storage: On tubeclip

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Allergy H13 filter
- Motor filter: Washable filter
- Filtration level: HEPA13 level**



Issue date 2023-04-14

Version: 1.1.2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Compared to PowerPro Compact FC8471/01

** Filtration levels are tested according EN60312-1-2017 and are equivalent to HEPA 13.