



Philips MiniVac  
Handheld vacuum cleaner

**4.8V battery**

Bagless Cyclonic  
Crevice, brush tool, squeegee  
Wet & dry

**FC6142**

## Powerful MiniVac for a better cleaning result

### Wet & Dry system and aerodynamic nozzle

Enjoy a better cleaning result with the powerful Philips MiniVac Wet&Dry 4.8 V vacuum cleaner. Clean both liquid spills and dry dirt in comfort with its wet-and-dry system. The aerodynamic nozzle design ensures a superior dust pick-up.

#### **Easy to use**

- Looped handle ensure optimum grip
- One-step click-off nozzle for easy emptying

#### **Always at hand**

- Slim charging base (for wall or table)

#### **Optimal filtration**

- 2-stage bagless cyclonic airflow for optimal filtration

#### **High power guaranteed**

- Powerful 3.6 V NiMH batteries

#### **Superior cleaning results**

- Aerodynamic nozzle design for a better dust pick-up

**PHILIPS**


## Highlights

### Slim charging base (for wall or table)



You can store the Philips Mini Vac on a convenient charging base, mounted on a wall or placed on a table. This means the Mini Vac, with its powerful rechargeable battery, is always ready when you are.

### 2-stage bagless cyclonic

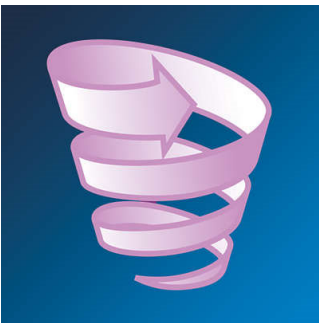

The bagless cyclonic airflow keeps the dirt inside rotating to ensure optimal, high suction power and lasting cleaning performance. Its 2-stage filtration system ensures that, once inside, the dirt cannot escape. The first filter blocks most dirt, while the second filter traps the finer dust particles.

### Aerodynamic nozzle design



The aerodynamic nozzle design of the Philips MiniVac is created to ensure an optimum dust pick-up of even the most fine dust particles. The ergonomic shape of the nozzle helps you to clean even the most hard-to-reach areas.

### Comfortable grip



The Philips Mini Vac has a looped handle that ensures optimum grip. You can grab the Mini Vac in any way you like.

### One-step click-off nozzle



The Philips MiniVac vacuum cleaner is easy and quick to empty and hygienic to clean. The Philips MiniVac has a nozzle that easily clicks off in just one step, so you can empty the Mini Vac without touching the dirt.

### Powerful 3.6 V NiMH batteries



The powerful longer-lasting Nickel-Metalhydride (NiMH) batteries of the Philips MiniVac do not cope with memory effect. This effect reduces the capacity of the battery over time, reducing the runtime. This Mini Vac with NiMH batteries ensures longerlasting power versus products with the standard Nickel-Cadmium (NiCd) batteries that do have memory effect.

## Specifications

### Performance

- Airflow (max): 530 l/s
- Sound power level: 76 dB
- Battery voltage: 4.8 V
- Charging time: 16-18 hour(s)
- Vacuum (max): 2.9 kPa
- Runtime: 9 minute(s)
- Input power (max): 56 W
- Suction power (max): 6 W

### Design

- Color: Blue
- Design features: Translucent dust chamber

### Nozzles and accessories

- Accessories included: Charging base

### Weight and dimensions

- Dimensions of product (LxWxH): 460 x 160 x 160 mm
- Dimensions of packaging (LxWxH): 508 x 335 x 490 mm
- Weight of product: 1.4 kg

### Filtration

- Dust capacity: 0.5 L
- Filter system: Wet and dry system



Issue date 2023-04-14

Version: 2.2.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)