




Philips EasySpeed Plus  
Steam iron

**2000 W**

100 g steam boost  
25 g/min continuous steam  
Non-stick soleplate

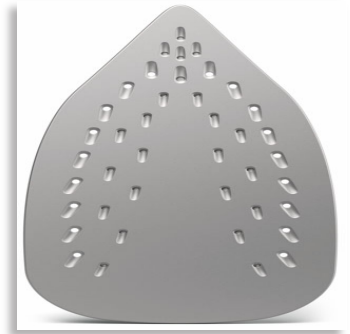

**GC2140/26**



## Fast from start to finish

Speeds up your ironing in 2 ways

EasySpeed Plus speeds up ironing with powerful bursts of steam to tackle tough creases and non-stick soleplate for easy gliding. That's two easy ways to make fast work of your ironing.

### **Fast crease removal**

- 2000 W to heat up quickly
- Up to 100 g steam boost blasts stubborn creases
- Steam output up to 25 g/min for strong, steady performance
- Non-stick soleplate for easy gliding

### **Easy ironing**

- Triple precision tip for optimal control and visibility
- Vertical steaming for hanging fabrics
- Large 270 ml water tank for ironing more clothes in one go

### **Long lasting performance**

- Calc-clean slider for long-lasting steam performance

**PHILIPS**

# Highlights

## 2000 W to heat up quickly



Delivers a fast warm-up and powerful performance.

## Non-stick soleplate



Our non-stick soleplate glides easily on any ironable garment with a special non-stick layer.

## Vertical steam



The vertical steam function lets you refresh garments right on the hanger and remove creases from curtains as they hang. No ironing board required.

## Steam boost up to 100 g



Penetrates deeper into fabrics to easily remove stubborn creases.

## Triple precision tip



The tip is precise in 3 ways. It has a pointed tip, button groove and sleek nose design. Our triple precision tip helps you handle even the hardest-to-iron spots, like buttons and pleats.

## Built-in calc-clean slider



This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium buildup, or limescale, and maintain peak performance.

## Continuous steam up to 25g/min



Strong and consistent steam output penetrates more steam through fabric to remove creases faster.

## 270 ml water tank



Less refilling with the large 270 ml water tank so you can iron more clothes in one go

# Specifications

## Easy to use

- Water tank capacity: 270 ml
- Soleplate name: Non-stick
- Power cord length: 1.9 m

## Fast crease removal

- Power: 2000 W

- Continuous steam: 25 g/min
- Steam boost: 100 g

## Scale management

- Descaling and cleaning: Built-in Calc Clean Slider

## Green efficiency

- User manual: 100% recycled paper



Issue date 2021-12-18

Version: 1.1.1

© 2021 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)