




Philips SpeedPro Max Aqua  
Cordless Stick vacuum  
cleaner

### 360° suction nozzle

25.2 V, up to 75 min runtime  
3-in-1: vacuum, mop & handheld  
TurboPet Nozzle

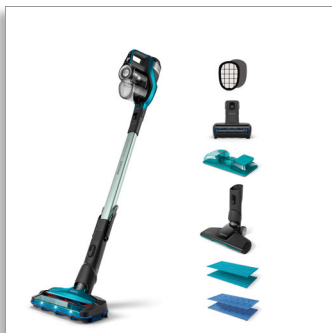

FC6904/01

## Fastest cordless vacuum\*

with 3-in-1 cleaning

Finish faster with our 3-in-1 cordless vacuum. Our powerful 360° suction nozzle captures dust and dirt faster from all sides. From hard floors to carpets; make every move count. Unique vacuum & mop system tackles multiple dirt types at once.

### Unrivalled speed

- LED nozzle reveals hidden dust and dirt
- Up to 75 min\* of powerful cleaning with 25.2V Li-Ion battery
- 360° suction nozzle captures dust and dirt faster

### Unmatched airflow

- PowerCyclone 8 - our most powerful bagless technology
- PowerBlade motor creates high airflow (>1000 L/min)
- The Triple filtration system ensures high airflow for longer

### Uninterrupted 3-in-1 cleaning

- 3-in-1: 360° suction nozzle, vacuum & mop system, handheld
- For multiple dust types, incl. AquaBoost for tougher dirt
- Fast reach everywhere, even under low furniture
- Integrated handheld unit, crevice tool and brush

# PHILIPS

Cordless Stick vacuum cleaner  
360° suction nozzle 25.2 V, up to 75 min runtime, 3-in-1: vacuum, mop & handheld, TurboPet Nozzle

FC6904/01

# Highlights

## 360° suction nozzle



360° suction nozzle captures dust and dirt faster

## Up to 75 minutes runtime



High performance 25.2 V lithium ion batteries provide up to 75 minutes Eco runtime, 35 min in normal mode and 25 min in Turbo mode before you recharge.

## PowerBlade digital motor



PowerBlade is a digital motor engineered for unmatched, high airflow (>1000 L/min) that produces 360° suction at the nozzle. Register at Philips.com within 3 months of purchase and enjoy a free 5-year motor warranty!

## Vacuum and Mop system



The unique vacuum and mop system controls the water release to maintain optimal wetness for all hard floors throughout the cleaning. The microfiber pads can be washed by hand or in washing machine.

## Fast reach everywhere



SpeedPro Max is flexible and easy to maneuver. The dust bucket is on top, which allows for a lower angle and even goes fully flat on the floor to reach under low furniture.

## PowerCyclone 8 technology



PowerCyclone 8 technology - our best bagless vacuum cleaning technology now in a cordless stick, to keep stronger suction for longer.

## Integrated accessories



Accessories are simple to use with one click. The detachable handheld unit makes SpeedPro Max two devices in one. The brush attachment is integrated into tube so it's always at hand.

## LED nozzle



Dust, fluff, hair and crumbs are easy to spot and eliminated with LED lights in the SpeedPro Max nozzle. LED nozzle reveals even the hidden dirt.

## Triple filtration system



The triple filter system returns only the clean air back to the motor, ensuring high airflow for longer

Cordless Stick vacuum cleaner  
360° suction nozzle 25.2 V, up to 75 min runtime, 3-in-1: vacuum, mop & handheld, TurboPet Nozzle

FC6904/01

# Specifications

## Nozzles and accessories

- Standard nozzle: Vacuum and Mop
- Accessories included: AC power adaptor, Micro fiber pad, Integrated brush, Extra filter
- Additional nozzle: TurboPet nozzle, 360° suction nozzle

## Design

- Color: Electric Aqua

## Weight and dimensions

- Weight of product: 2.732 kg

## Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

## Performance

- Battery type: Li-Ion
- Sound power level: 84 dB
- Battery voltage: 25.2 V
- Charging time: 5 hour(s)
- Runtime: 75 minute(s)
- Runtime (turbo): 25 minute(s)
- Airflow (max): 1000 l/min
- Surface coverage per tank: 60 m<sup>2</sup>

## Filtration

- Dust capacity: 0.6 L
- Motor filter: Washable filter

## Usability

- Clean water tank capacity (max): 0.28 L
- Detergents that can be used: clear detergent or just water



Issue date 2023-08-14

Version: 2.2.1

EAN: 87 10103 84392 4

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Tested against top 10 selling cordless stick vacuums >300€ in Germany 2017, using Philips developed coarse dirt hard floor cleaning test based on international standard IEC60312-1. Jan 2018.  
\* With vacuum and mop system