

PHILIPS

Wake-up light with
night-time function

SmartSleep

Simulated sunrise and sunset

RelaxBreathe to sleep

Multiple lights and sounds

Midnight light

HF3651/01



The Wake-Up Light that helps you sleep

Fall asleep relaxed & wake up refreshed

The Sleep and Wake-Up Light is designed to help you relax and wake up refreshed. With light-guided breathing and personalised sun settings. From the sleep experts and makers of the leading global wake-up light.

Natural sunrise and sunset simulation

- Simulate a natural sunrise to wake up refreshed
- The Wake-Up Light clinically proven to work

RelaxBreathe: Light-guided wind-down breathing

- Light-guided breathing helps you relax to sleep
- Sunset simulation prepares your body for sleep

Choose your night and morning

- Choose the sound or music you wake up to
- Select the brightness level that's right for you

Designed for style and function

- A soft light to guide you in the dark
- Just tap the top of the product to snooze
- Smart touch display for easy device control
- Modern design adds style to your bedroom


Highlights

Simulate natural sunrise



The Sleep and Wake-Up Light gradually increases before your alarm time. Over the course of 30 minutes, the simulation will start off as a soft morning red and gradually increase to orange, until your room is filled with bright yellow light. This creates a natural stimulation to wake up, while your body is still asleep. By the time light has filled the room, natural sounds or FM radio complete your wake-up experience, leaving you ready for the day.

With RelaxBreath for sleep

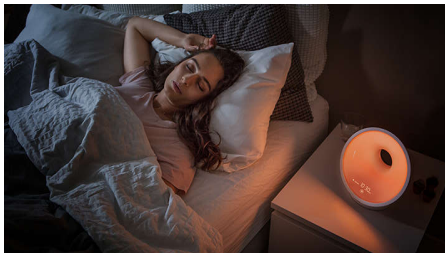

Inspired by well-known breathing and relaxation exercises our light-guided wind-down function is designed to help get you to sleep by helping you decompress from the day's activities and unwind. Follow one of seven rhythms of light intensity or sound with your breathing while keeping your eyes closed for a calm and peaceful transition from your day to your dreams

Sunset simulation to sleep



The sunset simulation programme prepares your body to sleep by gradually decreasing light and optional sound to your set duration, gently helping you to relax before you fall asleep.

Multiple sound & music options



Wake up to nature sounds, ambient music or your favourite local FM radio station. At your set wake up time your selected sound will start to play softly, and gradually increase in volume to your pre-set level within a few minutes. The transition from sleep to waking is gentle, but intended to eventually get you fully awake. Connect your mobile device or tablet to the AUX port to turn the light into a speaker.

Multiple brightness settings



Sensitivity to light differs from person to person —a brightness level that could instantly wake you might not budge someone else. Multiple

light settings let you choose which intensity level is just right for you. In general, when the brightness is set to a higher light intensity a person needs less time to become fully awake. When you are not sleeping, the wake up light becomes an adjustable bedside or reading light.

Midnight and reading light



When turned on in the middle of the night, the Connected Sleep and Wake Up Light provides a soft light that is just enough to let you find your way in the dark — without jarring your senses. The midnight light can be easily activated and de-activated with a few simple taps on the clock.

Tap to snooze



A slight tap on top of the wake-up light sets the snooze mode. After 9 minutes the sound will gently start playing again.

Highlights

Smart touch display



Our seamlessly integrated multi-level touch display lets you set your chosen parameters intuitively and fast. Just approach the display with your hand and control your light with a touch on the buttons. The light will adjust the brightness of the display automatically to the light level in your room. You also have the option to switch off the display completely.

Modern design



Sleek and stylish design evokes the shape of the sun. Functional elements are hidden and setting controls are accessed by touchscreen on the surface of the light-backlit by LED and visible when activated-giving a smooth, streamlined look. The delicate, contemporary design fits into any décor.

Clinically validated



Philips wake-up lights are clinically proven to improve your general wellbeing after waking up. Several independent studies have shown that our wake-up light improves the quality of waking up, improves your mood and makes you feel more refreshed in the morning. 92% of users say our wake-up light wakes them up pleasantly, while 88% of users say that the wake-up light is a better way to wake up than how they did before.* In addition, 92% of users find it easier to get out of bed**

Specifications

Sound

FM radio
Number of Wake-up Sounds: 8
AUX entry
Number of relaxation sounds: 3

Technical specifications

Cord length: 1.5 m
Frequency: 50/60 Hz
Voltage: 100-240 VAC
Power Output Adapter: 18W
Housing back colour: Shiny white
Type of lamp: LED

Weight and dimensions

Product dimensions (W x D x H):
225x220x120 mm
Product weight: including adapter 0.9 kg

Easy to use

Anti-slip rubber feet
Display brightness control: Self-adjusting
Number of alarm times: 2

Snooze type: Smart snooze
Instore demo function
Charges mobile phone
Tap snooze for sound: 9 minutes
Control by smart phone: No

Light

Brightness settings: 25
Light colours: white, orange, yellow, amber
Max Lux level: 315
Sun themes: 1

Safety and Regulations

UV-free
Country of origin: China

Consumer Trade Item

Height: 30.6 cm
Width: 28.2 cm
Length: 13.8 cm
Net weight: 0.95 kg
Gross weight: 1.522 kg

GTIN: 8710103819929
Country of origin: CN
Harmonized system code: 85279200

Outer Carton

Height: 31 cm
Width: 32.4 cm
Length: 57.7 cm
Net weight: 3.8 kg
Gross weight: 6.888 kg
GTIN: 18710103819926

Pallet Layer

Height: 31 cm
Width: 100 cm
Length: 120 cm

