



Philips Performer
Bagged vacuum cleaner

2200 W

500W suction power
Allergy H13 filter
Turbo brush



FC9174/61

The highest suction power ever

500 Watt suction power for effortless cleaning

The highest suction power ever, resulting in effortless cleaning: this is what the FC917x range is all about. Combined with a hygienic filter and easy dustbag removal system the FC917x range takes care of all your dust and dirt.

Superior performance

- Allergy H13 filter system captures >99.9% of fine dust
- 2200W motor generating max. 500W suction power
- TriActive nozzle for 3-way thorough cleaning action
- Turbo brush, perfect for (pet) hair and fluff cleaning

Effortless cleaning


- Easy long-lasting bags fit into XXL 4-liter dust chamber
- Long 10-meter reach goes further without unplugging

PHILIPS

Bagged vacuum cleaner
2200 W 500W suction power, Allergy H13 filter, Turbo brush

Highlights

Powerful cleaning

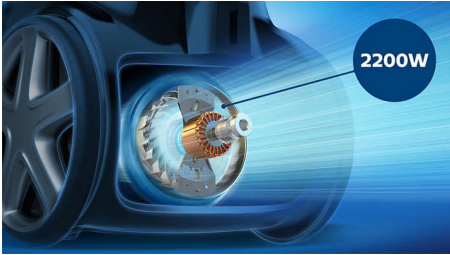

Highly efficient 2200 Watt motor generates max. 500 Watt suction power for perfect cleaning results.

Long 10-meter reach



With a reach of 10 meters from plug to nozzle, it keeps you cleaning longer without unplugging.

Allergy H13 filter



Allergy H13 filter system catches >99.9% of fine dust particles - including pollen, pet hair and dustmites - ideal for allergy sufferers. Filtration level is equivalent to HEPA 13*.

Long-lasting 4L s-bags



Large 4-liter dust chamber and long-lasting universal bags allow optimum suction power until full, plus sealed, mess-free disposal.

TriActive nozzle



TriActive nozzle utilizes 3 cleaning actions in one go. The specially designed soleplate removes dust from deep within carpets, while the large front opening sucks up big bits. Air channels on both sides of the nozzle pick up any dust and dirt alongside walls or furniture.

Turbo brush



The rotating Turbo brush is designed for optimal cleaning of pet hair and fluff, opening up carpet fibers for a deeper clean.

FC9174/61

Specifications

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle

Design

- Color: Emperor red

Consumer Trade Item

- Height: 30
- Width: 59
- Length: 39
- Net Weight: 8.9
- Gross Weight: 10.3
- GTIN: 8710103798668
- Country of origin: PL
- Harmonized system code: 85081900

Outer Carton

- GTIN: 18710103941917

Weight and dimensions

- Dimensions of product (LxWxH): 500 x 320 x 280 mm
- Weight of product: 6.3 kg

Performance

- Input power (max): 2200 W
- Input power (IEC): 2000 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 500 W
- Vacuum (max): 34 kPa
- Airflow (max): 47 l/s

Filtration

- Dust capacity: 4 L
- Dust bag type: s-bag
- Exhaust filter: Allergy H13 filter
- HEPA Air Seal

Usability

- Action radius: 10 m
- Tube coupling: Button
- Cord length: 7 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Wheel type: Rubber
- Dust full indicator
- Clean Comfort cassette



Issue date 2023-12-05

Version: 1.1.2

EAN: 87 10103 79866 8

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Filtration levels are tested according EN60312-1-2017 and are equivalent to HEPA 13.