



Philips PerfectCare 9000 Series
Steam generator iron

ActiveSense technology

Guaranteed no burns*
Light weight iron
Up to 750g steam boost



PSG9050/26

The only iron that knows what you are ironing

Effortless ironing. Excellent results.

PerfectCare 9000 Series comes with the world's first fabric sensing technology called ActiveSense. Using a built-in camera and AI, it knows what you are ironing and adjusts the ideal temperature and steam amount for effortless results.

Effortless ironing with excellent results

- Automatically adjusts settings
- The only steam generator that knows what you're ironing
- Guaranteed no burns on all ironable garments

Extra convenient to use

- Automatic shut off when iron is left unattended
- Easy De-calc Plus
- Large 1.8L detachable watertank for easy refilling
- Safe carry lock for safe and easy transport
- Steam sound dampening technology

Easy crease removal with automatic powerful steam

- Intelligent automatic steam for faster and easier ironing
- Light weight iron ideal for vertical steaming
- Powerful steam for ultimate crease removal
- SteamGlide Elite Soleplate, ultimate gliding & durability

PHILIPS

Steam generator iron
ActiveSense technology Guaranteed no burns*, Light weight iron, Up to 750g steam boost

PSG9050/26


Highlights

Knows what you are ironing



ActiveSense technology recognizes fabrics using a built-in camera and artificial intelligence.

Automatically adjusts settings

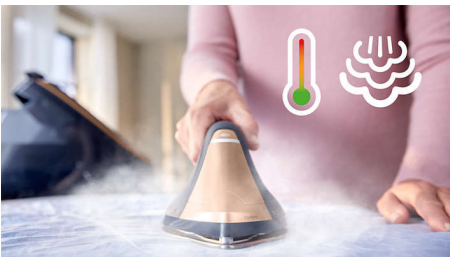

It automatically adjusts temperature and steam amount to give excellent results for all fabrics.

Intelligent automatic steam



Ensure your ironing is completed fast and with minimal effort, with the new motion sensor technology that recognizes when you move the iron to release steam automatically

Ultra -powerful steam



Strong, continuous steam tackles even the thickest fabrics with ease. Watch stubborn creases melt away with an extra steam boost just where you need it.

No burns - guaranteed



Thanks to the fast cooling system, we guarantee this iron will never cause burns to any ironable fabric when it is left unattended. You can leave it resting on your clothes or ironing board.

Light weight iron




The iron is amazingly light and comfortable to handle, gliding easily and reducing wrist strain. Its minimal weight also makes it easy for vertical steaming of curtains and hanging clothes.

1.8L detachable water tank



1.8-liter transparent tank gives you up to 2 hours of continuous use. When the water tank is empty, you will be reminded by the indicator light and you can refill easily at any time under the tap through the large filling door.

SteamGlide Elite Soleplate

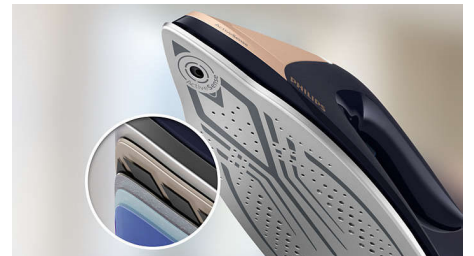

SteamGlide Elite is our best soleplate for ultimate gliding performance and maximum scratch resistance. Its stainless steel base is twice as hard as a regular aluminum base, and our patented 6-layer coating with advanced titanium layer glides effortlessly for the fastest results

Easy De-calc Plus



Regular descaling protects your iron, extends its lifetime, and ensures the best steam performance. Our exclusive Easy De-Calc Plus system collects limescale continuously with an indicator light and audio signal to tell you when it needs emptying. Simply remove the plug and let the water and scale particles flow

Steam generator iron

ActiveSense technology Guaranteed no burns*, Light weight iron, Up to 750g steam boost

PSG9050/26

Specifications

General specifications

- Cord storage: Compartment
- Hose storage: Compartment
- ActiveSense
- Calc Clean reminder: Light & Sound
- Warranty: 2 + 1 years with registration
- Max bar pressure: 9.0
- Power cord material: Textile
- Safety carry Lock
- Soleplate: SteamGlide Elite
- Steam boost up to (g): 750
- Steam rate up to (g/min): 180
- Ultra-light iron
- Autosteam with Intelligent Automatic Steam technology

Easy to use

- Heat up time: 2 minute(s)
- Water tank capacity: 1800 ml
- Safety auto off
- Detachable water tank
- Power cord length: 1.8 m
- Hose length: 1.8 m

Technology

- ActiveSense technology
- Fast cooling soleplate
- Steam sound dampening
- Silent steam Technology
- Intelligent Automatic Steam technology

Fast crease removal

- Power: 3100 W

Green efficiency

- Energy saving*: 22 %

Scale management

- Descaling and cleaning: Easy De-calc Plus

Size and weight

- Weight of iron: 0.97 kg
- Packaging dimensions (WxHxL): 33.4 x 35 x 57.4 cm
- Product dimensions (WxHxL): 22.9 x 28.8 x 49.3 cm
- Total weight with packaging: 8.8 kg
- Weight of iron + base: 5.5 kg



Issue date 2024-03-24

Version: 3.3.2

EAN: 87 10103 93899 6

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* On all ironable fabrics