

Philips Series 3200
Fully automatic
espresso machines

- 4 Beverages
- Classic Milk Frother
- Glossy Black
- Touch display

EP3221



4 delicious coffees from fresh beans, with ease

Thanks to the intuitive touch display

Enjoy the delicious taste and aroma of coffee from fresh beans, at the perfect temperature, thanks to our intelligent brewing system. The classic milk frother allows you to create a silky smooth cappuccino or latte macchiato with ease.

A variety of coffees customized to your taste

- Delicious milk froth thanks to the classic milk frother
- Enjoy 4 coffees at your fingertips
- Easily adjust to your taste with 12-step grinder levels
- Easy selection of your coffee with intuitive touch display
- Adjust aroma strength and quantity via My Coffee Choice

High quality coffee from fresh beans

- Keep your beans fresh for longer thanks to the aroma seal
- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup**

Effortless use and cleaning for everyday enjoyment

- Easy cleaning thanks to fully removable brew group
- Up to 5000 cups* without descaling thanks to AquaClean
- Dishwasher safe parts for your convenience

PHILIPS


Highlights

AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups*, while enjoying clear and purified water.

4 aromatic coffees

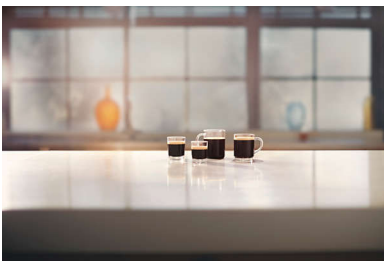

Enjoy your favourite coffees for your special moments. Whether you crave for an espresso, a coffee or a milk based recipe, your fully-automatic machine delivers a perfect in-cup result with no hassle and in no time!

Classic milk frother



The Classic Milk Frother dispenses steam, allowing you to easily prepare silky smooth milk froth for your cappuccino. What's more? With only two parts, the Classic Milk Frother is also easy to clean.

Intuitive touch display

The irresistible taste and aroma of coffee from fresh beans is just one touch away. Our intuitive touch display allows you to easily select your favorite coffee.

My Coffee Choice


Adjust the strength and quantity of your beverage with the My Coffee Choice menu. Easily choose from three different settings to suit your preferences.

12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

Perfect temperature and aroma

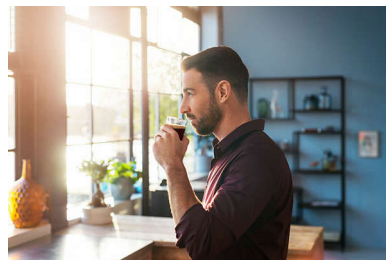

The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

100% ceramic grinders




Bring out the full flavor of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures they last for at least 20.000 cups.

Preserve beans' aroma



The new Aroma seal protects your favorite coffee beans and makes sure they preserve their original aroma over time, while reducing the grinder noise.

Removable brew group

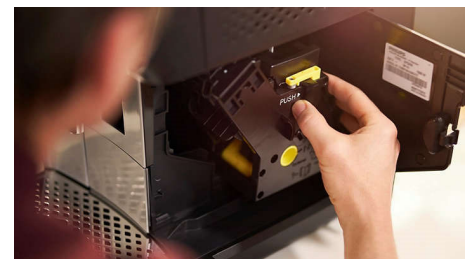

The brew group is the heart of every fully automatic coffee machine, and should be cleaned regularly. The removable brew group allows you to clean it thoroughly just by rinsing it under the tap.

Specifications

Country of origin

- Made in: Romania
- Designed in: Italy

Customization

- Aroma Strength Settings: 3
- Grinder Settings: 12
- Pre Brew Aroma control
- Temperature settings: 3

Variety

- Beverages: Espresso, Hot water, Coffee, Americano, Espresso Lungo
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

Accessories

- Included: Grease tube, Measuring scoop, Water hardness test strip, AquaClean filter

Technical specifications

- Voltage: 120 V
- Cord length: 100 cm

- Frequency: 60 Hz
- Capacity milk carafe: X L
- Capacity waste container: 12 servings
- Capacity water tank: 1.8 L
- Coffee bean capacity: 275 g
- Weight of product: 7.5 kg
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Pump pressure: 15 bar
- Color & Finishing: Black, Glossy black
- Product dimensions: 246x371x433 mm

General specifications

- Adjustable spout height: 85-145 mm
- Milk Solution: Classic Milk Frother
- Ease of cleaning & maintenance: AquaClean filter compatible
- Dishwasher safe parts: Classic milk frother, Drip tray
- User Interface: Touch screen display

Service

- 2-year guarantee

Sustainability

- ECO setting
- Energy label: A-class
- Power consumption brewing: 1500 W
- Recyclable packaging material: >95 %



Issue date 2023-07-17

Version: 2.2.1

UPC: 0 75020 08620 4

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.

**Based on 70-82 °C.