

Philips PowerPro Compact
Bagless vacuum cleaner

900 W
PowerCyclone 5
Allergy H13 filter

FC9328/69



Picks up 99.9%* of fine dust

Hygienic emptying with one hand

With the Philips Bagless Vacuum 3000 Series, compact design meets king-size performance. Enjoy thorough cleaning throughout your home thanks to PowerCyclone 5 technology and our TriActive nozzle, which features 3 cleaning actions in one.

Superior performance

- 900 W motor for high suction power
- 99.9% dust pick-up* to deliver high cleaning performance
- TriActive nozzle for 3 way thorough cleaning action
- PowerCyclone 5 keeps strong suction power for longer
- Allergy H13 filter system captures >99.9% of fine dust

Effortless cleaning

- Dust container designed for hygienic emptying with one hand
- Soft brush integrated into handle, always ready to use
- Compact and lightweight for easy carrying

Effortless cleaning

- ActiveLock couplings easily adjust to every task


PHILIPS

Bagless vacuum cleaner
900 W PowerCyclone 5, Allergy H13 filter

FC9328/69

Highlights

High-efficiency 900 W motor

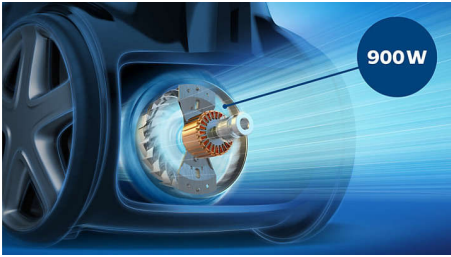


High-efficiency 900 W motor delivers high suction power for thorough cleaning results.

99.9% dust pick-up*



TriActive nozzle and high suction power ensure you can vacuum 99.9% of fine dust*.

PowerCyclone 5 technology

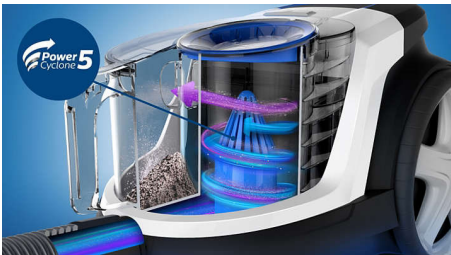

PowerCyclone 5 technology accelerates the air flow in the cylindrical chamber to separate dust from the air and maintain high performance and strong suction power for longer.

TriActive nozzle



TriActive nozzle utilises 3 cleaning actions in one go. The specially designed soleplate removes dust from deep within carpets, while the large front opening sucks up big bits. Air channels and brushes on both sides of the nozzle pick up any dust and dirt alongside walls or furniture.

Hygienic dust disposal



Easy-to-empty dust container is designed for hygienic disposal with one hand, to help minimise dust cloud.

Compact and lightweight



Compact and lightweight design ensure both storing and carrying the vacuum is easy.

Integrated brush



Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

Allergy H13 filter



The fully sealed filtration system captures >99.9% of fine dust particles - including pollen, pet hair and dust mites - for allergy sufferers and anyone demanding a higher level of hygiene. Filtration level is equivalent to HEPA 13**.

ActiveLock couplings



ActiveLock couplings allow attachments to easily fit to the telescopic tube with a simple snap.

Specifications

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Integrated brush
- Accessory storage: On tubeclip

Accessories

- Filter replacement kit: FC8010/02

Design

- Colour: Ink Black

Weight and dimensions

- Dimensions of product (LxWxH): 410 x 281 x 247 mm
- Dimensions of packaging (L x W x H): 525 x 320 x 315 mm
- Weight of product: 4.5 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Performance

- Input power (IEC): 750 W
- Airflow (max): 27.8 l/s
- Sound power level: 76 dB
- Vacuum (max): 16.8 kPa
- Input power (max): 900 W

Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Allergy H13 filter
- Motor filter: Washable filter
- Filtration level: HEPA13 level**

Usability

- Action radius: 9 m
- Carrying handle: Front
- Tube type: Metal 2-piece telescopic tube
- Cord length: 6 m
- Wheel type: Plastic



Issue date 2023-08-24

Version: 1.1.1

EAN: 87 10103 86625 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* 99.9% dust pick-up on hard floors with crevices (IEC62885-2).
** Filtration levels are tested according to EN60312-1-2017 and are equivalent to HEPA 13.