



### Saeco Xsmall Super-automatic espresso machine

- Brews 2 coffee varieties
- Classic Milk Frother
- Beige
- 5 step adjustable grinder

HD8645/57

## Taste the aroma of your favourite coffee beans

### One touch super-automatic espresso machine

Whatever blend of coffee you wish to try next, the Xsmall will grind the beans fresh on the spot at the touch of a button. It comes also equipped with a manual frother to add a touch of velvety pleasure to all your fresh coffee drinks.

#### **Ease of cleaning and maintaining**

- Always a clean machine thanks to automatic circuit cleaning
- Easy cleaning thanks to dishwasher-safe drip tray
- The fully removable brewing group can be cleaned in no time

#### **Set the beverages to suit your taste**

- Save your favorite coffee length

#### **Advanced technology designed for coffee perfection**

- 20,000 cups of finest coffee with durable ceramic grinders
- Enjoy hot coffee in no time with the Quick Heat Boiler
- Fine-tune the coffee's richness with 5 grinder settings
- Delicious milk froth thanks to the classic milk frother

The Saeco logo consists of a stylized circular icon with a diagonal line through it, followed by the word "Saeco" in a bold, sans-serif font.

# Highlights

## Classic milk frother



This Saeco espresso machine comes with the classic milk frother that baristas call a “Pannarello”. It dispenses steam and is immersed in milk to prepare gorgeous milk foam. Unleash your inner barista by preparing your delicious milk specialties the traditional way!

## 100% Ceramic grinders



Our grinders are made of high-tech ceramic: exceptionally hard and precise. Fresh beans are gently ground, without risk of overheating: extracting all the best flavors and aroma, delivering a superior coffee taste for at least 20,000 cups.

## 5-steps adjustable grinders




When it comes to the fineness of the grind, this machine never fails to satisfy. Different coffee blends require different levels of granularity for the full flavor to unfold. So the grind granularity of this machine has five adjustable settings - from the finest grind for a full-bodied espresso, to the coarsest for a lighter coffee.

## Automatic circuit cleaning



Saeco designed this espresso machine to automatically clean its coffee circuit with water upon starting up or switching off of the machine, this delivers a great, fresh taste with each cup of coffee.

## Saves your coffee length

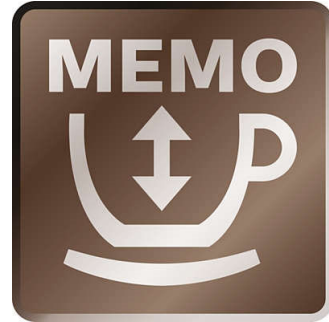

You will always get a perfect cup of espresso brewed according to your personal preference thanks to our memo function which allows you to adjust the coffee length to suit your taste. Enjoy a superb coffee drink with just the press of a button.

## Dishwasher-safe drip tray



For your convenience, you can wash the drip tray of your Saeco in the dishwasher. This will save time and ensure a hygienic cleaning.

# Specifications

## Country of origin

- Made in: Romania

## Accessories

- Included: Descaler pack, Water filter

## Technical specifications

- Voltage: 230 V
- Capacity bean container: 180 g
- Cord length: 0,8 m
- Frequency: 50 Hz
- Capacity water tank: 1 L
- Capacity waste container: 8 servings
- Max. cup height: 95 mm
- Water boilers: 1
- Pump pressure: 15 bar

## Design

- Color: Beige

## Weight and dimensions

- Dimensions of product (WxDxH): 420 x 325 x

295 mm

- Weight of product: 6.9 kg

## General specifications

- Suitable for: Whole coffee beans
- Ease of cleaning & maintenance: Automatic rinse cycle, Removable brewing group
- Ease of use and comfort: Removable water tank
- Special functions: Pre-brewing, Manual milk frother Pannarello

## Finishing

- Material of main body: ABS Plastic
- Material boiler: Stainless steel (Inox)
- Material panarello: Plastic

## Service

- 1-year guarantee

## Sustainability

- Power consumption brewing: 1400 W



Issue date 2023-08-22

Version: 1.1.1

UPC: 0 75020 05241 4

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)