

PHILIPS

sonicare

Sonic electric toothbrush
with 2 accessories and app

DiamondClean Smart

Up to 20x more plaque removal

Up to 7 x healthier gums

4 modes and 3 intensities +
vibrating light ring as pressure
sensor

USB charging travel case +
Charging glass

HX9917/88



Up to 20 x more plaque removal even in hard-to-reach areas

Complete care for a healthier mouth

The DiamondClean Smart 9400 is our best toothbrush, for complete care. High-performance brush heads let you focus on all areas of your oral health and our Smart Sensor technology gives you personalised feedback and coaching.

Personalised in-app coaching to perfect brushing

- Guides your brushing and highlights missed areas
- Takes you back to any missed spots for 100% coverage
- Start taking better care of your trouble areas
- Alerts you if you're pressing too hard
- Guides you to reduce your scrubbing

Optimise your brushing

- Brush heads automatically select the optimal settings
- Make sure you're getting the most from your brush head
- Choose from 4 modes and 3 intensity settings

DiamondClean Smart

Sonic electric toothbrush with 2 accessories and app

HX9917/88


Highlights

4 modes, 3 intensity settings




With DiamondClean Smart you get the full works. Our 3 intensity settings let you boost your clean and our 4 modes cover all your brushing needs; Clean mode for exceptional daily cleaning, White+ to remove stains, Deep Clean+ for an invigorating deep clean, and Gum Health to gently clean along your gum line.

Never miss a spot

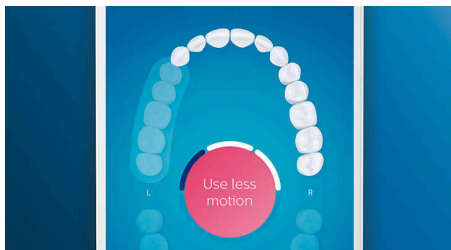


The Philips Sonicare app lets you know when you've achieved a thorough clean, and coaches you to be a better, more mindful brusher.

TouchUp feature

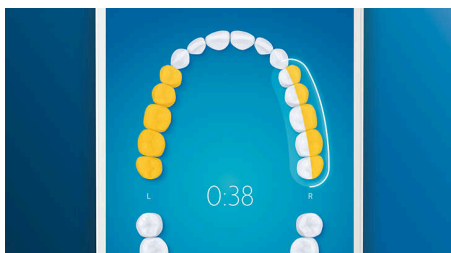


If you happen to miss a spot while brushing your teeth, your app's TouchUp feature will show you. You can then go back for a second pass, and be confident you are getting a complete clean, every time.

Smart replacement reminders

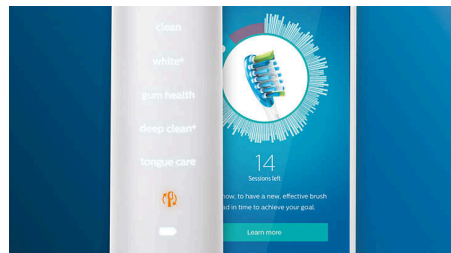


Brush heads wear out over time and become less effective at removing plaque. With smart brush head recognition you'll never lose track of when to replace your brush head. Your toothbrush tracks how long and hard you've brushed with each brush head, and will alert you when it's time to replace. You can also monitor the lifetime of your brush heads in the Philips Sonicare app, and even order replacements so you're never caught short.

Focus areas and goal-setting

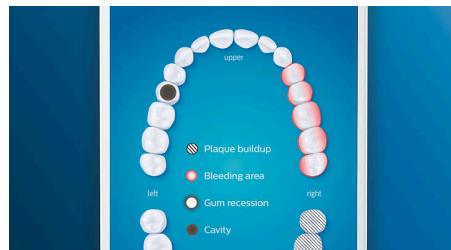

Any trouble areas your dentist has pointed out? We'll highlight them on your in-app 3D mouth map and remind you to pay extra attention to these areas.


Too much pressure?

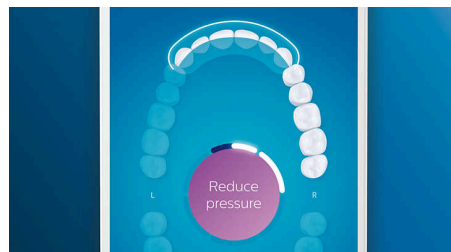

You might not notice when you brush too hard, but your DiamondClean Smart will. If you use too much pressure, the light ring on the end of your


handle will flash. This is a gentle reminder to ease off the pressure and let your brush head do the work. 7 out of 10 people found that this feature helped them to become a better brusher.

Easy does it

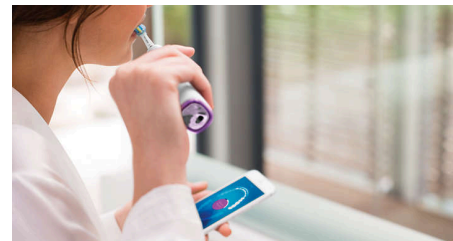

With an electric toothbrush, you let the brush do the work. We've built a scrubbing sensor into your handle as a gentle reminder to reduce scrubbing. This way, you can improve your technique and get a gentler, more effective clean.

BrushSync mode pairing

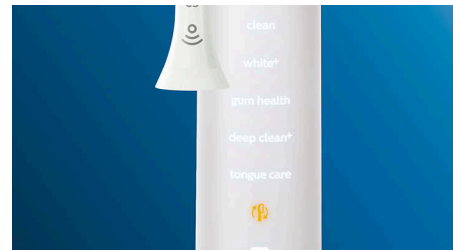

Wondering which mode and intensity you should use? Wonder no longer. A microchip in your toothbrush head tells your DiamondClean Smart which one you're using. So if you click on a gum-care brush head, for example, your toothbrush knows to select the optimal mode and intensity to provide gentle yet effective care for your gums. All you need to do is to press the power button.

DiamondClean Smart

Sonic electric toothbrush with 2 accessories and app

HX9917/88

Specifications

Connectivity

Bluetooth® wireless technology: Connected brushing app

Power

Voltage: 110-220 V

Technical specifications

Operating time (full to empty): 14 days***

Battery: Rechargeable

Battery type: Lithium ION

Design and finishing

Colour: White

Service

Warranty: 2-year limited warranty

Compatibility

Android compatibility: Android OS 8.0 or above

iOS compatibility: iPhones on iOS 13.0 or above

Ease of use

Handle compatibility: Easy click-on brush heads

Handle: Slim ergonomic design

Battery indicator: Illuminated icon indicates battery life

Brush head recognition: Syncs with optimal mode

Replacement reminder: To always ensure best results, reminder icon lights up

Items included

Brush heads: 1 All-in-1 Premium Brush Head, 1 G3 Premium Gum Care

Travel case: USB charging travel case

Handle: 1 DiamondClean Smart

Glass charger: 1

Cleaning performance

Performance: Removes up to 20 x more plaque*

Speed: Up to 62,000 brush movements/min

Timer: BrushPacer and SmarTimer

Pressure feedback: Ring lights up in purple, Vibrates handle to alert user

TouchUp: Ensures 100% coverage

Modes

3 intensities: Low, Medium, High

Clean: For exceptional everyday cleaning

Deep Clean+: For an invigorating deep clean

Gum Health: For a gentle yet effective clean for gums

White+: To remove surface stains

BrushSync Mode Pairing

G3 Premium Gum Care brush head: Pairs with Gum Health mode

All-in-One Premium: Pairs with clean mode

Smart sensor technology

Pressure sensor: Alerts when brushing too hard

Location sensor: Tracks and improves coverage

Scrubbing sensor: Guides to reduce scrubbing

3D mouth map: Highlights trouble areas

TouchUp: To address missed spots

Software Support

Software updates: Philips offers relevant software updates for a period of 2 years after the date of purchase.

