



Philips Daily Collection
Kettle

Metal

Spring lid
Light indicator
1.7 L



HD9350/90



Designed to last

For long and reliable daily use

Durable kettle in safe, food-grade stainless steel for long and reliable daily use. Philips brings 60 years of trust and expertise to this elegant long-life kettle.

Fast, safe boiling

- Durable stainless steel body for long life
- Flat heating element for fast boiling
- Micro-mesh filter captures tiny limescale particles
- Multi safety system against boil-dry

Simple to fill, use and clean

- Cord winder for easy adjustment and storage
- Cordless kettle with 360° pirouette base
- Easy refilling through lid or spout
- Easy-to-read water level indicator
- Spring lid with large opening for cleaning
- Pilot light indicates when the kettle is switched on

PHILIPS

Highlights

Stainless steel design


Durable metal design in food-grade brushed stainless steel for long, reliable use.

Micro-mesh filter



A removable micro-mesh filter on the spout captures tiny limescale particles as small as 200 microns to ensure a clear cup.

Flat heating element

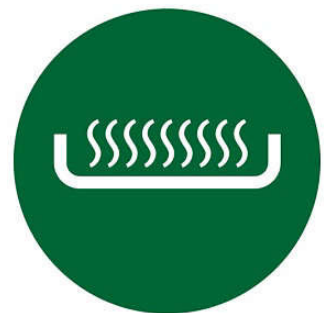

A concealed stainless steel heating element ensures fast boiling and easy cleaning.

Multi safety system



Multi safety system against boil-dry, with auto-switch off when the water is ready.

Pilot light



Elegant indicator light incorporated in the power switch illuminates when the kettle is turned on.

Water level indicator



The water level is easy to read with an indicator located underneath the handle.

Spring lid with large opening*



A push-button lid opens smoothly at the touch of a button, avoiding steam contact. The large opening simplifies cleaning.

Easy refilling



The kettle can be filled through the spout or by opening the spring lid.

Cordless + 360° pirouette base



The cordless kettle sits on a 360° pirouette base for easy lifting and replacing.

Hidden cord winder



The cord can be wrapped underneath the base, so it's the right length for any kitchen and easily stored away.

Specifications

Weight and dimensions

- Dimensions of packaging (LxWxH): 198 x 228 x 244 mm
- Micromesh filter: 200 µm

Technical specifications

- Voltage: 220-240 V
- Capacity: 1.7 L
- Cord length: 0.75 m
- Power: 1850-2200 W
- Frequency: 50/60 Hz

General specifications

- Ergonomic grip
- Easy spout filling
- Product features: 360 degrees base, Automatic shut-off, Boil-dry protection, Cord storage, Flat

- heating element, Non-slip feet, On/off switch, Pilot light, Spring lid, Wide opening lid
- Lid as well as spout filling

Design

- Color: Stainless steel

Finishing

- Material of main body: Stainless steel
- Material power switch: Polypropylene (PP)

Service

- 2-year worldwide guarantee

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper



Issue date 2022-01-06

Version: 3.3.1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* 25% larger than regular Philips metal kettle HD9320