



Philips Genuine  
replacement filter  
Integrated 3-in-1

Up to 36 months lifetime  
HEPA+Active Carbon+Pre-filter  
Filters 99.97% @ 0.003µm  
Filters gases & odors

FY3430/30

## 3 filters in 1 to achieve day one performance

### Genuine Philips filter that fits perfectly

Our 3-layer filtration with NanoProtect HEPA, Active Carbon and pre-filter makes sure you are protected from bacteria, pollen, dust, PM2.5, pet dander and gases.

#### Superior performance

- Philips filters ensure that your device works effectively
- 3 filters in 1 for convenience and superior performance
- Superior performance

#### Genuine Philips filter

- Perfect fit for consistently high performance

#### Designed around you

- Connect with the device and monitor it through the app

#### Designed around you

- Follow the Smart filter status indicator on your device

#### Designed around you

- Regularly clean the pre-filter

# PHILIPS

Up to 36 months lifetime HEPA+Active Carbon+Pre-filter, Filters 99.97% @ 0.003µm, Filters gases & odors

## Highlights

### The original Philips filter




Genuine Philips filter was designed together with the device itself to ensure a perfect fit which guarantees the continuously smooth operation of the device.

### Quality you can trust




Philips air filters go through a set of mandatory and strict inspection tests before releasing from factory. They are subjected to rigorous life and durability tests, for continuous operation 24/7. Our filters are designed to provide the best performance of your Philips purifier until the last day of the filters lifespan.

### 3-in-1 effortless convenience

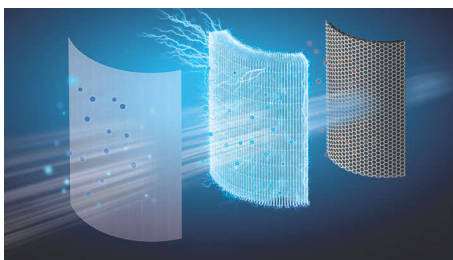

The cylindrical 3-in-1 filter combines three layers of filtration to keep your device running like on day one.<sup>(6)</sup> Our Active Carbon, HEPA and pre-filter are the optimal combination that remove pollutants, viruses, allergens and bacteria. To make sure you breathe cleaner air we recommend changing all three filters at once.

### Superior performance

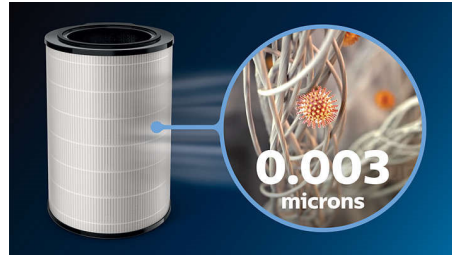

A 3-layer filtration with NanoProtect HEPA, active carbon and pre-filter makes sure you are protected from bacteria, pollen, dust, PM2.5, pet dander and gases. The NanoProtect HEPA technology not only captures pollutants, but it uses a special electrostatic charge to attract them, enabling it to purify the air faster than HEPA H13 filter that is medically used. <sup>(5)</sup>

### Long lasting performance



Philips integrated 3-in-1 filter provides consistent protection and guarantees optimal filtration for up to 36 months. <sup>(1)</sup>

### Up to 99.9% virus removal



The purifier captures aerosols including those which may contain respiratory viruses. Tested independently to remove up to 99.9% of viruses and aerosols from the air. Also tested for coronavirus <sup>(8)</sup>.

### Easy to clean pre-filter



For the optimal filtration performance, regularly vacuum-clean the pre-filter.

### Effortless maintenance



Your Philips device notifies you when to clean your pre-filter and when to replace the filter. This takes less than a minute. The maintenance of the device is effortless to ensure that you always enjoy clean, healthy air.

### Track filter lifetime through



Monitor the lifetime and status of your filter anytime, anywhere with the CleanHome+ app <sup>(2)</sup>. Get alerted when its time to change your filter and easily order a replacement directly through the app <sup>(3)</sup>.

Up to 36 months lifetime HEPA+Active Carbon+Pre-filter, Filters 99.97% @ 0.003µm, Filters gases &amp; odors

# Specifications

## Weight and dimensions

- Dimension of packaging (LxVxH): 256\*256\*330 mm
- Weight incl. packaging: 1.684 kg
- Weight of product: 1.316 kg
- Dimension of product (LxVxH): 245\*155\*317.5 mm

## Design and finishing

- Color(s): White,black

## Replacement

- For Philips air purifier(s): AC3033, AC3036, AC3039, AC3055, AC3059

## Performance

- Filters out: Odor, TVOC
- Particle filtration: 99.97% at 0.003 microns
- Allergen filtration: 99.99%
- Virus & Aerosol filtration: 99.9%
- Filter: Integrated filter



Issue date 2023-07-26

Version: 9.9.1

EAN: 87 10103 90950 7

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* (1) Recommended lifetime is calculated based on the Philips users' average usage time and the WHO urban outdoor pollution level data. Actual lifetime is impacted by usage environments and frequencies.

\* (2) Only applicable for selected models with connectivity

\* (3) Only applicable in those countries where the Philips shop is available

\* (4) NanoProtect HEPA filter material provides lower air flow resistance than the material from a HEPA H13 filter, enabling a Philips air purifier with NanoProtect to deliver a higher Clean Air Delivery Rate (CADR) than with an equivalently-sized certified HEPA H13 filter

\* (5) From the air which passes through the filter, tested with NaCl aerosol by iUTA according to DIN71460-1.

\* (6) Contingent on the filter being used with AC1711 or 1715 Philips purifier

\* (7) Microbial Reduction Rate Test conducted at Airmid Health group Ltd. tested in a 28.5m<sup>3</sup> test chamber contaminated with airborne influenza A(H1N1).

\* (8) Microbial Reduction Rate Test at external lab, in a test chamber contaminated with avian coronavirus (IBV) aerosols, with Philips HEPA NanoProtect filter.