



Philips 800 Series
Compact Air Purifier

Purifies rooms up to 24 m²

190 m³/h clean air rate (CADR)

HEPA filter

HEPA filter

AC0820/30

Purifies the air in less than 16 mins (1)

99% virus, allergen & pollutant removal (2,3,6)

With just one push of a button, the air purifier filters the invisible viruses, allergens or pollutants in your home, to keep it clean and safe. It purifies quickly and effectively, thanks to its clean air delivery rate (CADR) of 190 m³/h.

Superior performance

- High Performance suitable for rooms of up to 24 m²
- Filters 99.5% particles as small as 0.003 microns
- Removes up to 99.9% of viruses and aerosols from the air
- Smart sensors for intelligent purification
- Thoroughly tested for quality you can trust

Seamless operation

- Sleep mode with ultra-quiet operation
- Low energy consumption

Effortless control

- Air quality display
- Smart filter indicator
- Auto mode and 2x manual speed levels

PHILIPS


Compact Air Purifier

Purifies rooms up to 24 m² 190 m³/h clean air rate (CADR) HEPA filter, HEPA filter

AC0820/30

Highlights

High Performance

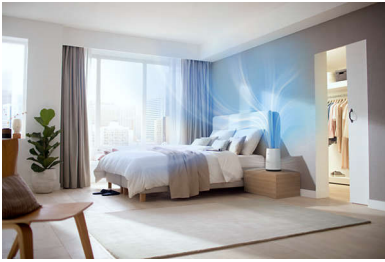

Powerful airflow circulation effectively covers rooms up to 24 m² and distributes clean air in every corner of the room. This boosts performance to 190 m³/hr CADR (Clean Air Delivery Rate). It cleans 20 m² in less than 16 min. (1)

99.5% particle removal



2-layer filtration with NanoProtect HEPA and pre-filter captures 99.5% of ultra-fine particles as small as 0.003 microns (3), so you are safe from PM2.5, bacteria, pollen, dust, pet dander and other pollutants. Certified by the European Centre for Allergy Research Foundation.


Up to 99.9% virus removal



Captures aerosols including those which may contain respiratory viruses. Tested independently by airmid health-group to remove up to 99.9% of viruses and aerosols

from the air (2). Coronavirus (HCOV-229E) virus removal rate up to 99.96% from the air, based on third party data(4).

Intelligent sensors

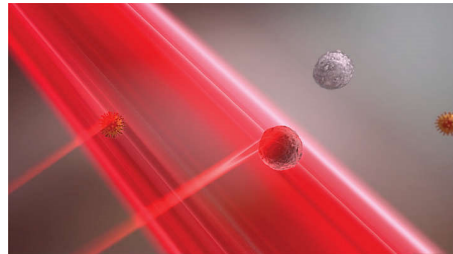

Scans the air 1000x a second to detect ultra fine-particles. Reports the air quality in real time, and intelligently chooses the right speed for your home (in auto mode).

Quality you can trust



Philips purifiers go through 170 mandatory and strict inspection tests before releasing from factory. They are subjected to rigorous life and durability tests, for continuous operation 24/7.

Ultra-quiet operation




In Sleep mode, display lights are dimmed, and the purifier operates in near silence for clean air while you sleep.

Low energy consumption




Thanks to its energy efficient design, the air purifier runs at max. 20 W power. This is equivalent to a standard light bulb.

Air quality display

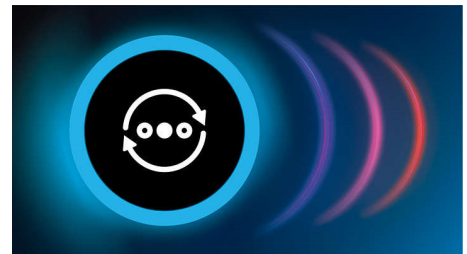

See the real-time air quality in your home at a glance. The display shows the level of allergens and PM2.5 with an intuitive color ring

Auto mode and 2x speed levels

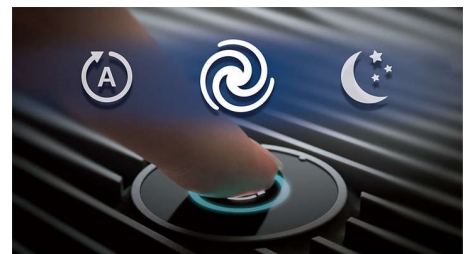

Run your product in intelligent automatic mode or choose from 2x speed levels: Sleep, Turbo – to be fully in control of the airflow and sound level.

Compact Air Purifier

Purifies rooms up to 24 m² 190 m³/h clean air rate (CADR) HEPA filter, HEPA filter

AC0820/30

Specifications

Weight and dimensions

- Weight: 2.4 kg
- Dimensions (L*W*H): 250*250*367
- Color(s): White, Black

Performance

- CADR (Particle, GB/T): 190 m³/h
- Room size (NRCC): Up to 48 m²
- Filtration: HEPA, Prefilter
- Air quality sensor(s): PM2.5 particle
- Particle filtration: 99.5% at 0.003 microns
- Allergens filtration: 99.99%
- Virus & aerosol filtration: 99.9%

Usability

- Min. sound level (Sleep mode): 19 dB
- Automatic mode

- Cord length: 1.6 m
- Sleep mode
- Manual speed settings: 2 (Sleep, Turbo)
- Air quality feedback: Color ring
- Auto-ambient light: No
- Max. sound level (Turbo mode): 49 dB (7)

Energy efficiency

- Max. power consumption: 20 W
- Stand-by power consumption: <=0.5 W
- Voltage: 220-240 V

Maintenance

- Replacement filter HEPA: HEPA filter FY0194 - 12 months
- Service: 2-year worldwide guarantee



Issue date 2023-03-12

Version: 14.14.3

EAN: 87 10103 90261 4

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* (1) From the air that passes through the filter, it is a theoretical time for one-time cleaning calculated by dividing its CADR 190 ?/h by the room size of 48 m² (assuming the room is 20 ? in floor area and 2.4 m in height) under JEM1467 standard.

* (2) Microbial Reduction Rate Test conducted at Airmid Health group Ltd. tested in a 28.5? test chamber contaminated with airborne influenza A(H1N1). An air purifier by itself does not protect against Covid-19, but can be part of plan to protect yourself and your family (US Environmental Protection Agency)

* (3) From the air that passes through the filter, tested with NaCl aerosol by iUTA according to DIN71460-1.

* (4) From the air that passes through the filter. Microbial reduction rate test at external lab, appliance running in turbo mode for 1.5h in a test chamber contaminated with human coronavirus (HCoV-229E) aerosols.

* (5) The recommended service life for the device is based on a theoretical calculation of the average annual regional values ??of harmful air particles outdoors and daily use of the air purifier for 16 hours in automatic mode.

* (6) Tested on the filter media for 1 pass efficiency at 5.33cm/s air flow, by a third party lab./From the air that passes through the filter, tested to JISB 9908-2011

* (7) The calculated average sound pressure at 1.5 meter from the device, based on measurements according to IEC 60704. Sound pressure level depends on the room construction, decoration and positioning of device and listener.