

PHILIPS

Wake-up Light

Wake up naturally with light

Beep alarm and tap to snooze features

Bedside lamp with 10 brightness levels



HF3500/60



Rise and Thrive with light to feel more refreshed with a Wake-up Light that wakes you up naturally

Inspired by nature's sunrise, the Philips Wake-up Light uses a unique combination of light and sound to wake you in a more natural way, so you feel more refreshed. Developed with Philips' clinical Sleep & Respiroics healthcare knowledge and our 100+ years of Lighting expertise. Only Philips Wake-up lights are clinically proven and backed by our 90 Day No Hassle Money Back Guarantee.

Natural light wakes you gradually

- Sunrise Simulation wakes you gradually
- Bedside light with 10 light settings
- Colour flow of sunrise: bright Yellow

Natural sounds wake you gently

- Gentle beep ensures you get up on time

Naturally designed around you

- Snooze function
- 4 display brightness levels - adjust to your preference

Naturally proven to work

- Developed by Philips, experts in light for over 100 years.
- The only Wake-up Light clinically proven to work

Highlights

Sunrise Simulation




Inspired by nature's sunrise, light gradually increases within 30 minutes until your room is filled with bright yellow light. This process of changing an increasing light stimulates your body to wake up naturally. By the time light has filled the room your chosen natural sound completes the wake up experience, leaving you ready for the day ahead.

Bedside Light



The sensitivity to light differs per person. In general, when using a higher light intensity a person needs less time to become fully awake. The 10 light intensities of the Wake-up light can be personalized and even be set up to 200 lux.

Gentle Beep

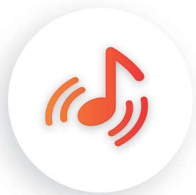

At your set wake up time a gentle beep will play to complete the wake up experience and ensure you are awake. The sound gradually increases in volume within one and a half minute.

Snooze function



The sound stops when you tap the top of the product. After 9 minutes the sound will gently start playing again.

Developed by Philips



Philips was founded over a 100 years ago as a company that produced and sold lightbulbs. Over 100 years Philips grew into a global company that brings innovation in lots of different areas. To this day lighting still is the soul of Philips. The Wake-up Light is proud to

continue its heritage by building on years of knowledge and expertise of the world's most well know lighting expert.

Proven by scientists



At this moment in time the Philips wake-up light is the only one scientifically proven to work. In order to make the Wake-up Light the best possible product it can be in genuinely waking you up naturally and energized we have done a lot of clinical research. This reseach was conducted by independent science facilities to study and prove the effects of the wake-up light on the overall wake up experience. This way we have proven, among other things, that the Philips Wake-up Light not only wakes you more naturally, but also more energized and that it improves your mood in the morning.

Light: Yellow

The light of the sunrise simulation moves from Yellow to bright Yellow.

4 display brightness levels



The brightness of the display can change from high-medium-low-very low-none.

Specifications

Sound

Number of Wake-up Sounds: 1
Music from smartphone / iPod: No
FM Radio: No

Logistic data

Country of origin: China
CTV Code (EUR | US): 8843350001 |
884350060

Safety

UV-free: UV-free

Easy to use

Anti-slip rubber feet
Charges iPhone/ iPod Touch: No
Display brightness control: 4 settings

Snooze type: Tap top to snooze
Instore demo function
Number of alarm times: 1
Snooze Duration: 9 minute(s)
Controlled by iPhone App: No

Well-being by light

Increase energy in morning
Wake up gradually by light

Natural light

Sunrise simulating process: 30 minutes
Brightness settings: 10
Light intensity: 200 lux
Fall Asleep function: No
Colors in sunrise simulation: Bright Yellow

Technical

Box Dimensions (WxHxD): H200 x W200 x
D130 mm
Box Weight: 600 gram
Cord Length EU/US: 150/180 CM
Voltage: 100/240 V
Frequency: 50/60 Hz
Insulation Device: Class III
Insulation Power Plug: Class II (double
isolation)
Replaceable Lamp: No
Type of Lamp: Liteon SMD Lamp LED
Product Dimensions: H 180mm x W 180mm x D
115mm
Product Weight: 290 gram

