

PHILIPS

AVENT



DECT Baby Monitor

Audio Monitors

100% private connection

Night light and lullabies

Talkback function



SCD560/01

The most reliable connection to your baby

Added support for you and your baby

Our new DECT SCD560/01 Baby Monitor delivers complete reassurance. Providing the most reliable connection with crystal clear sound, temperature control, a soothing night light and lullabies for you and your baby.

Reliable technology

- DECT technology guarantees zero interference and 100% privacy
- Perfect clear sound thanks to DECT Technology

Constant Reassurance and Secure Connection

- Always know when your monitor is in range and connected
- Sound-level lights indicate if the baby makes a noise
- Monitor the temperature in your baby's room
- Energy-saving Smart ECO mode

Freedom and flexibility

- Range up to 330 metres*
- Superior operating time up to 18 hours
- Rechargeable parent unit

Comforting and soothing your baby

- Stay connected with talk back
- Comforting night light and lullabies to calm your little one

Highlights

Zero interference with DECT



DECT technology guarantees zero interference from any other transmitting products like other baby monitors, cordless phones and mobile phones. Data encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby.

Perfect clear sound




Hear every tiny giggle, gurgle and hiccup with perfect clarity. DECT (Digital Enhanced Cordless Telecommunications) technology provides high quality, crystal clear sound so you can hear your baby all the time.

Smart ECO mode




The unique Smart ECO mode automatically minimises your transmission power and increases your battery lifetime. The closer you are to your baby, the less power is needed for a perfect connection (not available in US and Canada).

Sound activation 3 LED lights

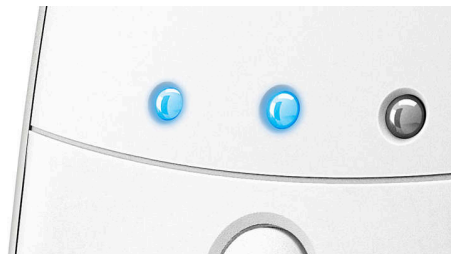


Lights are activated to indicate the level of sound in your baby's room, even when the Parent Unit is muted.

Always connected

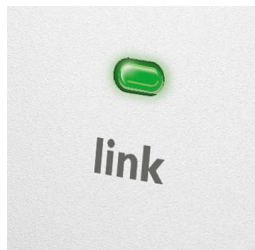

The parent unit will alert you when your monitor is out of range or when the power is low, helping you to make sure that you are always connected to your baby.

Temperature sensor

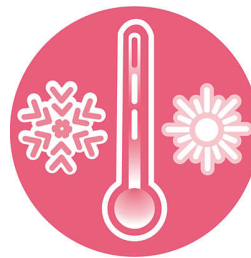

The temperature sensor with customised alert allows you to monitor the climate in your baby's room. Your baby can't regulate its body temperature as well as you can and a slight change in temperature can make your baby restless. A customised temperature sensor will immediately alert you, through the digital display on the parent unit, if the climate in your baby's room changes.

330 m Range



Indoor range up to 50 metres*. Outdoor range up to 330 metres*.

Rechargeable parent unit



The rechargeable parent unit enables you to move in and around the home.

Highlights

Operating time up to 18 hours



The small, rechargeable parent unit will give you the freedom of cordless streaming for up to 18 hours before re-charging is required.

Night light and lullabies



There's nothing like a gentle lullaby and a warm tranquil glow of a night light to calm a restless baby. From any room in the house, you can select one of five relaxing tunes and switch on the night light, helping your baby to drift effortlessly to sleep in no time. (Remote activation not available in US and Canada).

Talk back function



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature, you can connect with your baby from anywhere around the home.

Specifications

Tuner/Reception/Transmission

Automatic channel selection
Frequency band: DECT

Convenience

Auto out-of-range warning
Battery low indication
Battery charging indication
Volume control
Sensitivity control
Sound-level lights

Power

Operating time on battery hour: 18 hours
Charging time: 10 hour(s)
Power Supply: 120 V (US), 220–240 V

Technical specifications

Storage temperature range: 10–40 °C
Operating temperature range °C: 10 - 40 °C

Features

Comforting night light
DECT Technology
Indoor range up to: 50 m
Linked and in range indication
Energy-saving Smart ECO mode: ECO mode, Yes
Outdoor range up to: 330 metres
Talkback function
Temperature sensor
Sound activation lights: 3 LED lights
LCD Screen
Soothing lullabies

Logistic data

F-box dimensions (W x H x D): 220 x 156 x 94 mm

Development stages

Stage: Pregnancy, 0–6 months

Consumer Trade Item

Height: 15.6 cm
Width: 22 cm
Length: 9.6 cm
Net weight: .66 kg
Gross weight: .828 kg
GTIN: 8710103610762
Country of origin: CN
Harmonized system code: 851762

Outer Carton

Height: 18.3 cm
Width: 23.5 cm
Length: 30.1 cm
Gross weight: 2.794 kg
GTIN: 18710103610806

