



Philips 3000i Series
Air Purifier for XL Rooms

Purifies rooms up to 62 m²
520 m³/h clean air rate (CADR)
HEPA & Active Carbon filter
Connected with Air+ app

AC3055/60

Purifies the air in less than 6 min (1)

99.9% virus, allergen & pollutant removal (3,4,7)

With just one push of a button, the air purifier filters the invisible viruses, allergens, dust or pollutants in your home, to keep it clean and safe. It purifies quickly and effectively, with a clean air delivery rate (CADR) of 520 m³/h.

Superior performance

- Removes up to 99.9% of viruses and aerosols from the air
- Smart sensors for intelligent purification
- Thoroughly tested for quality you can trust

Superior performance

- Thoroughly purifies rooms up to 135 m²
- Eliminates 99.97% of all unseen particles from the air (13)

Seamless operation

- Sleep mode with ultra-quiet op
- Low energy consumption
- Detects and removes allergenic dust at night (10)

Effortless control

- Air quality display

PHILIPS

Air Purifier for XL Rooms

Purifies rooms up to 62 m² 520 m³/h clean air rate (CADR), HEPA & Active Carbon filter, Connected with Air+ app

Highlights

Ultra-quiet operation



In Sleep mode, display lights are dimmed, and the purifier operates in near silence for clean air while you sleep.

Air quality display



See the real-time air quality in your home at a glance. The display shows the level of allergens, gases and PM2.5 in numerical form, as well as with an intuitive color ring.

Automatically senses and adapts




The new Self-Adaptive Technology powered by Artificial Intelligence offers you an even smarter experience (12). It thinks, learns and self-adapts to your needs so you don't have to. Its not only reacting to the sensors but also considering room size, outdoor data and behavioral patterns. It automatically provides clean, healthy air while keeping noise and energy levels to minimum. You can also choose from 4 x speed levels: Sleep, Speed 1,2 and Turbo to be fully in control of the airflow and sound level.

Low energy consumption




Thanks to its energy efficient design, the air purifier runs at max. 60 W power. This is equivalent to one standard light bulb.

The Philips Air+ app

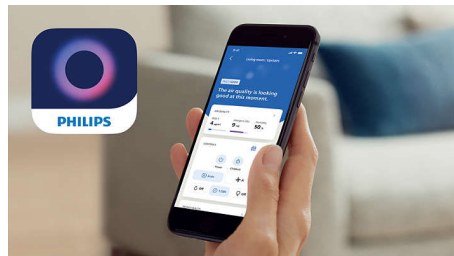

Air+ app provides a smart experience that ensures you breathe clean and healthy air. The app keeps track of all indoor and outdoor pollutants and automatically adjust your devices performance, so you dont have to. Air+ keeps you in control, at home or away. Control the air at home with your voice using Amazon Alexa or Google Home (8)

High performance

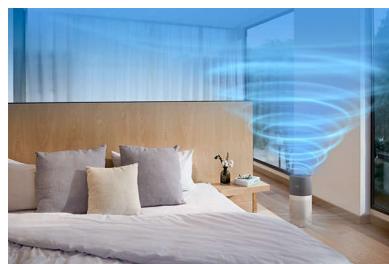

The 360 degree powerful airflow distributes clean air to every corner of the room at a CADR (Clean Air Delivery Rate) of 520 m³/h, purifying rooms thoroughly and protecting you from bacteria, virus, pollen, dust, pet dander, dust mites, harmful gases, odors and other pollutants. 20 m² is purified in just 6 minutes. (1)

AC3055/60

NEW Allergy sleep mode



Next to regular Sleep mode, the product is equipped with a special Allergy Sleep mode to protect you at night. This mode effectively detects allergenic dust in the air and switches the device to a more powerful speed, delivering up to 40% more clean air during the night (11) - while keeping the sound level low.

Up to 99.9% virus removal



Captures aerosols including those which may contain respiratory viruses. Tested independently by airmid health-group to remove up to 99.9% of viruses and aerosols from the air (3). Also tested for coronavirus (5).

Intelligent sensors



Scans the air 1000x a second to detect ultra fine-particles. Reports the air quality in real time, and intelligently chooses the right speed for your home (in auto mode).

Air Purifier for XL Rooms

Purifies rooms up to 62 m² 520 m³/h clean air rate (CADR), HEPA & Active Carbon filter, Connected with Air+ app

Specifications

Energy efficiency

- Max. power consumption: 58 W W
- Stand-by power consumption: <2 W W
- Voltage: 230 V V

Maintenance

- Recommended filter change: 3 years (6)
- Replacement filter: FY3430/30
- Service: 2-year worldwide guarantee

Connectivity

- App, connects via Wi-Fi: Air+
- Smartphone compatibility: iPhone and Android devices
- Voice control: Alexa, Google Home (8)

Weight and dimensions

- Weight: 7.2 kg kg
- Dimensions (L*W*H): 295*295*657
- Color(s): White, White speckle

Performance

- CADR (Particle, GB/T): 520 m³/h m³/h
- Filtration: HEPA, Active Carbon, Prefilter
- Room size (G/BT): Up to 62 m²
- Air quality sensor(s): PM2.5 particle, Gas
- Allergens filtration: 99.99%
- Virus & aerosol filtration: 99.9%
- Particle filtration ***: 99.97% (0.003 um)

Usability

- Min. sound level (Sleep mode): 15 dB (9) dB
- Max. sound level (Turbo mode): 56 dB (9) dB
- Cord length: 1.8 m m
- Automatic mode
- Manual speed settings: 4 (Auto, Speed 1, Speed 2, Turbo)
- Air quality feedback: Color ring, numerical
- Auto-ambient light

AC3055/60



Issue date 2023-09-22

Version: 19.19.1

EAN: 87 20389 00377 6

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* (1) From the air that passes through the filter, it is a theoretical time for one-time cleaning calculated by dividing its CADR 520 m³/h by the room size of 48 m³ (assuming the room is 20 m² in floor area and 2.4 m in height).

* (2) CADR is tested by a certified third party lab, according GB/T 18801-2015. Following improvements in our testing method and production quality control, we upgraded the CADR values of our products. If you buy a product where this info is not updated on the box yet, rest assured that the product performs at the higher specification mentioned online.

* (3) Microbial Reduction Rate Test conducted at Airmid Health group Ltd. tested in a 28.5m³ test chamber contaminated with airborne influenza A(H1N1). * An air purifier by itself does not protect against Covid19, but can be part of plan to protect yourself and your family (US Environmental Protection Agency)

* (4) From the air that passes through the filter, tested with NaCl aerosol by iUTA according to DIN71460-1.

* (5) Microbial Reduction Rate Test at external lab, in a test chamber contaminated with avian coronavirus (IBV) aerosols, with Philips HEPA NanoProtect filter.

* (6) The recommended service life for the device is based on a theoretical calculation of the average annual regional values of harmful air particles outdoors and daily use of the air purifier for 16 hours in automatic mode.

* (7) Tested on the filter media for 1 pass efficiency at 5.33cm/s air flow, by a third party lab./From the air that passes through the filter, tested to JISB 9908-2015

* (8) Alexa and Google Home availability depends on your location

* (9) The calculated average sound pressure at 1.5 meter from the device, based on measurements according to IEC 60704. Sound pressure level depends on the room construction, decoration and positioning of device and listener.

* (10) As tested in a real-life setup, with dust resuspended by a person stepping into bed.

* (11) Based on CADR measurements according to GB/T-18801/2015 with device operating in Sleep mode and Allergy Sleep mode.

* (12) Philips air purifiers have higher Clean Air Delivery Rate and energy efficiency with a NanoProtect HEPA filter than with a HEPA H13 filter, tested to GB/T 18801

* (13) From the air that passes through the filter, tested with NaCl aerosol by a 3rd party laboratory

* (14) Savings based on advertised lifetime of filter and pricing per on brand websites or retailers, Netherlands, 21 June 22.