



Philips Series 5000
Glass Kettle - light, 1.7 litre

1.7 L
Removable lid
Blue light indicator

HD9339/81

Modern design, made to last

Durable crystal clear glass with sensor light

Our family-size 1.7L glass kettle features a modern design with intuitive blue light indicator inside the base to inform you when the kettle is on.

Safe to use

- Strix controller

Easy to experience

- Save up to 66% energy with the cup indicators

Fast, safe boiling

- Flat heating element for fast boiling
- Micro-mesh filter captures tiny limescale particles
- Multi safety system against boil-dry

Simple to fill, use and clean

- Cord winder for easy adjustment and storage
- Cordless kettle with 360° pirouette base
- Blue light indicator
- Easy refilling through lid or spout
- Easy-to-read water level indicator
- Removable lid for easy reach during cleaning

PHILIPS

Highlights

Cup indicator



The handy water level indicators, including one-cup indicator, make sure that you only boil the amount of water that you need, saving both energy (one cup of water 250ml vs 1L) and water and helping to contribute to a better environment.

Removable lid



Fully removable lid for easy reach during cleaning.

Hidden cord winder




The cord can be wrapped underneath the base, so it's the right length for any kitchen and easily stored away.

Cordless + 360° pirouette base



The cordless kettle sits on a 360° pirouette base for easy lifting and replacing.

Flat heating element

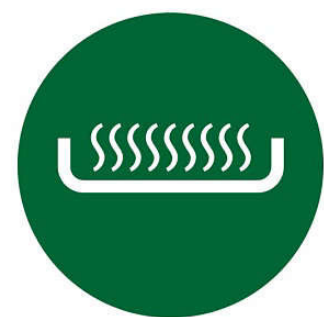

A concealed stainless steel heating element ensures fast boiling and easy cleaning.

Micro-mesh filter



A removable micro-mesh filter on the spout captures tiny limescale particles as small as 200 microns to ensure a clear cup.

Multi safety system



Multi safety system against boil-dry, with auto-switch off when the water is ready.

Blue light indicator



Elegant and intuitive sensor light is built into the clear glass base to show you when the kettle is on.

Easy refilling



The kettle can be filled through the spout or by opening the removable lid.

Specifications

Country of origin

- Made in: China

Technical specifications

- Capacity bowl: 1.7 L
- Cord length: 0.75 m
- Voltage: 220-240 V
- Power: 1850-2200 W
- Frequency: 50-60 Hz

Weight and dimensions

- Dimensions of packaging (LxWxH): 228x228x310 mm
- Dimensions of product (LxWxH): 146x233x248 mm
- Weight incl. packaging: 1.72 kg
- Weight of product: 1.15 kg
- Micro mesh Filter

General specifications

- Cord storage

- 360 degrees base
- Automatic shut-off
- Power-on light
- Product features: Lid and spout filling, Non-slip feet
- Flat heating element
- On/off switch

Design and finishing

- Color(s): Black and silver
- Material of main body: Glass
- Material heating element: Stainless steel
- Material filter: Nylon filter

Service

- 2-year worldwide guarantee

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper



Issue date 2023-07-17

Version: 6.6.1

EAN: 87 10103 94034 0

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com