


Philips 8000 Series  
Cordless Stick vacuum  
cleaner

### 360° Suction Nozzle

Up to 70 min, 28 min of Turbo  
Mini Turbo Brush

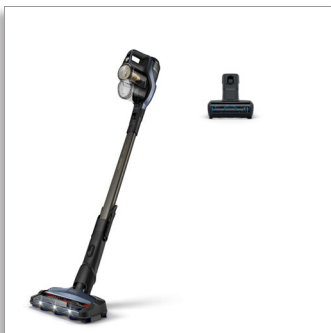

XC8043/61

## Complete house clean.

Longest lasting maximum power\*.

Clean your full home with maximum power on a single charge with Philips Cordless Vacuum 8000 Series. It's the only rechargeable, high-power stick vacuum that cleans more than 125m<sup>2</sup> in one charge\*, thanks to the 360° suction nozzle.

#### Full house cleaning with maximum power

- Longest lasting turbo mode, more than 125m<sup>2</sup> on one charge
- Lithium-ion battery lasts up to 70 minutes

#### 360° suction nozzle captures more from all sides

- 360° suction nozzle captures up to 99.7% of dust and dirt\*
- 360° suction nozzle reveals hidden dust with LEDs lights

#### Uninterrupted, effective cleaning

- PowerCyclone 10 maintains stronger performance for longer
- PowerBlade digital motor, easily controlled by Smart Display
- Integrated crevice tool and brush, plus extra accessories
- Full reach everywhere, even under low furniture

# PHILIPS

Cordless Stick vacuum cleaner  
360° Suction Nozzle Up to 70 min, 28 min of Turbo, Mini Turbo Brush

XC8043/61

# Highlights

## Turbo Runtime




If you want to have the best performance, you will always use your cleaning device in the MAX setting. In a cordless vacuum cleaner, it is not always possible, since the runtime in TURBO will run out fast. What if you could have a cordless vacuum cleaner that will last enough to cover your full house? Thanks to the longest MAX\* performance runtime in any stick, with the newest generation lithium-ion batteries, you can clean more than 125m<sup>2</sup> on a single charge.

## 360° suction nozzle



When you clean, you always want to be sure that everything that is on the floor will be picked up by your device in one go, without passing on the same surface more than once. The universal 360° suction nozzle captures up to 99,7% of dust & dirt in each stroke, leaving nothing on the floor! Thanks to its patented 360° suction technology, it picks up more dust & dirt from all sides of the nozzle, making all your movements count!

## LED Nozzle

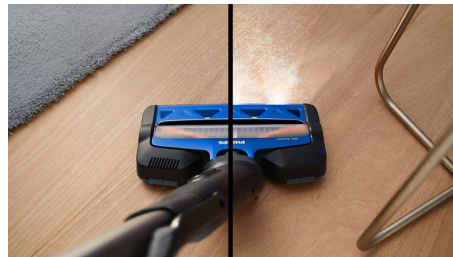


What if we told you that your floor is full of hidden dust and dirt? Most of the dirt on the floor is not visible with the human eyes. Now, dust, fluff, hair, and crumbs are easy to spot and capture, due to the LED lights in the nozzle. LEDs in the nozzle reveal hidden dust and dirt, to help you cleaning everywhere at any moment.

## Up to 70 min runtime



Different needs require different options. Our durable and long-lasting 25V lithium-ion batteries will give you up to 70 minutes cleaning time in eco mode, 35 minutes in normal mode, and 28 minutes in turbo mode, before you need to recharge.

## PowerCyclone 10

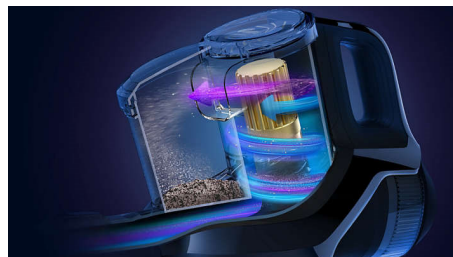

Philips PowerCyclone 10 is our latest bagless technology, now incorporated in a cordless


vacuum cleaner. PowerCyclone 10 will maintain stronger suction for longer, with 30% higher efficiency.

## Easy control of the motor



PowerBlade digital motor generates extreme airspeed enabling the nozzle to pick more dust and dirt from all sides. Thanks to the Smart Digital Display, you can always control the motor and adjust its speed to your needs! Our Smart Digital Display will also show you when the filter needs to be cleaned. The filter cleaning indicator will help you take care of the maintenance of the product, always ensuring the highest performance.

## Accessories

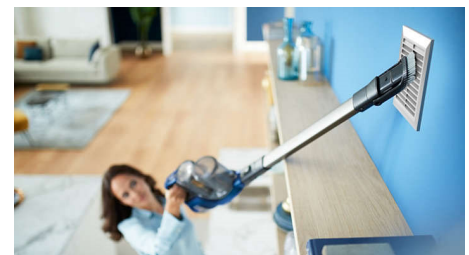

Different surfaces require different nozzles and accessories. In Philips sticks, accessories are easy to use and always at hand with one click, like the small crevice integrated in the handheld and the brush attachment integrated in the tube. For any extra needs there is the mini turbo brush ideal for removing pet hair and the extra long crevice tool for hard to reach areas.

# Specifications

## Nozzles and accessories

- Standard nozzle: 360° suction nozzle
- Accessories included: Integrated brush
- Additional nozzle: Mini turbo brush

## Design

- Color: Glacier

## Weight and dimensions

- Dimensions of product (LxWxH):  
1170x260x220 mm
- Weight of product: 2.7 kg

## Sustainability

- Packaging: >90% recycled materials
- User manual: 100% recycled paper

## Performance

- Battery type: Li-Ion
- Sound power level: 84 dB
- Battery voltage: 25 V
- Charging time: 5 hour(s)
- Runtime: 70 minute(s)
- Airflow (max): 1100 l/min

## Filtration

- Dust capacity: 0.6 L
- Filter system: 3-stage cyclonic action



Issue date 2024-01-31

Version: 7.7.1

EAN: 87 10103 99094 9

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Tested against top 10 selling cordless stick vacuums >300 euro in Germany June MAT 2019  
\* Runtime and coverage are based on internal Philips tracking method.  
\* Tested using Philips developed coarse dirt cleaning test based on IEC60312-1. Jan 2018. One stroke is backwards and forwards