



Philips Philips 4300
Series
Fully automatic
espresso machines

- 5 Beverages
- Classic Milk Frother
- Black
- TFT display

EP4321/54

5 Delicious coffees from fresh beans, with ease

Thanks to the intuitive display

Enjoy the delicious taste and aroma of coffee from fresh beans, at the perfect temperature, thanks to our AromaExtract system. The new classic milk frother allows you to create a silky smooth cappuccino or a foamy hot milk with ease.

A variety of coffees customized to your taste

- Enjoy 5 coffees at your fingertips
- Delicious milk froth or hot milk with the new steam pipe
- Adjust aroma strength and volume with the coffee customizer
- Your perfect cup, every time, thanks to 2 user profiles
- Easy selection of your coffee with the intuitive display

High quality coffee from fresh beans

- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup**
- Easily adjust to your taste with 12-step grinder levels
- Keep your beans fresh for longer thanks to the aroma seal

Effortless use and cleaning for everyday enjoyment


- Easy cleaning thanks to fully removable brew group
- Up to 5000 cups* without descaling thanks to AquaClean
- Dishwasher safe parts for your convenience

PHILIPS

Fully automatic espresso machines
5 Beverages Classic Milk Frother, Black, TFT display

Highlights

AquaClean filter

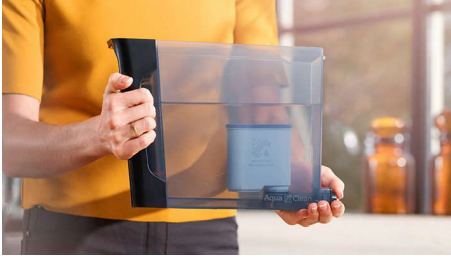

By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups*, while enjoying clear and purified water.

5 delicious coffees



Every moment has its own kind of coffee to enjoy. From powerful espresso to indulgent cappuccino, your fully automatic espresso machine delivers a perfect in-cup result without any fuss in no time!

Classic milk frother



The classic milk frother makes it simple to prepare warm, silky-smooth frothed milk for your next cappuccino or foamy hot milk for your caffè latte.

Intuitive display



There's little standing between you and your next delicious cup of coffee with our easy to use display. In a few steps you can customize your fresh-bean flavor and flow smoothly from craving to cup.

Coffee customizer




Make any coffee your own with the coffee customizer's easily adjustable settings for intensity and coffee length.

User profiles

Enjoy coffee you love the same way every time with two user profiles that store your customized recipes. With an extra guest profile, your visitors can savor a coffee exactly the way they like, without changing yours.

Perfect temperature and aroma

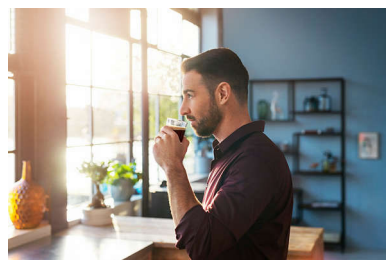

The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping

EP4321/54

the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

100% ceramic grinders



Bring out the full flavor of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures they last for at least 20.000 cups, from coarse to ultra-fine.

Preserve beans' aroma



The new Aroma seal protects your favorite coffee beans and makes sure they retain their original aroma over time, while reducing the grinder noise.

Specifications

Country of origin

- Made in: Romania
- Designed in: Italy

Customization

- Aroma Strength Settings: 5
- Grinder Settings: 12
- Coffee Length: Adjustable
- Pre Brew Aroma control
- User Profiles: 2, Guest
- Temperature settings: 3

Variety

- Beverages: Espresso, Coffee, Americano, Caffé crema, Ristretto, Milk froth, Hot water
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

Accessories

- Included: Measuring scoop, Water hardness test strip, AquaClean filter, Grease tube

Technical specifications

- Voltage: 230 V

- Color(s): Black
- Cord length: 100 cm
- Frequency: 50 Hz
- Capacity waste container: 12 servings
- Capacity water tank: 1.8 L
- Weight of product: 8 kg
- Coffee bean capacity: 275 g
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Pump pressure: 15 bar
- Product dimensions: 246x372x433 mm
- Finishing: Black Glossy

General specifications

- Adjustable spout height: 85 - 145 mm
- Milk Solution: Classic Milk Frother
- Ease of cleaning & maintenance: AquaClean filter compatible
- Dishwasher safe parts: Classic milk frother, Drip tray
- Type of display: TFT

Service

- 2-year guarantee

Sustainability

- ECO setting
- Power consumption brewing: 1500 W
- Recyclable packaging material: > 95%



Issue date 2023-09-21

Version: 4.4.1

UPC: 0 75020 09515 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.

**Based on 70-82 °C.