

Philips PerfectCare Expert
Steam generator iron

Up to 6.5 bar pressure

350 g steam boost
Carry lock
1.5L detachable water tank

GC9247/30



Ultra fast ironing

with no temperature adjustment required

Iron any ironable garment from silk, to linen, to cotton, to cashmere...in any order, without having to adjust. Your Philips PerfectCare iron delivers fast results without risk of burn or shine for all your garments. Truly simple ironing.

Fast and powerful ironing

- Descale effectively and easily your appliance to prolong it
- Tap water friendly, refill anytime during ironing
- Automatically turned off for peace of mind and energy saving
- Ready to use in 2 minutes with unlimited refill
- 1.5 L detachable water tank, up to 2 hours of ironing
- Our best gliding soleplate
- Saving energy with ECO mode
- Lock your iron securely to the base station
- Up to 6.5 bar pressure

Carefree ironing, no temperature setting required

- Iron from jeans to silk with no temperature setting required
- Safe to leave the hot soleplate on the ironing board

PHILIPS

Highlights

OptimalTEMP technology



Now you can iron from jeans to silk with no temperature setting required. Guaranteed no burn on all ironable fabrics. Revolutionary technology with the 1) Advanced Smart Control Processor which controls precisely the soleplate temperature. You do not need to adjust temperature 2) Powerful Cyclonic steam chamber which delivers powerful consistent steam, making ironing easier and faster.

Easy De-Calc



Ultra long lasting steam performance: Philips' exclusive Easy De-Calc function provides the ideal way to get rid of limescale and extend the lifetime of your steam generator iron. Your iron will remind you with light and sound when to perform cleaning. Only when your appliance is cold, simply open the Easy De-Calc knob, and collect the dirty water and scale in a cup.

Energy saving



By using the ECO mode, with reduced amount of steam, you can save energy without compromising on the ironing results.

Refill tap water any time



Your steam generator iron is designed to use tap water. While ironing, when you run out of water in the watertank, you can refill it easily without waiting or turning your appliance off.

Safety carry lock



Your steam generator iron comes with a safety carry lock. You can lock your iron safely on the base, making it safer, reducing the risk of people touching the hot soleplate. You can also carry the steam generator easily.

Safe rest




The Philips innovative OptimalTEMP technology guarantees no burn on all ironable fabrics. During ironing, no need to put your iron back to the base station, just leave the hot iron soleplate directly on the garments or cotton ironing board cover without additional resting accessory. It will not damage any of your ironable garments, neither the board. This makes your ironing easier with less wrist efforts.

Automatic shut-off



The auto off function automatically switches off the appliance if it has not been used for a few minutes, also saving energy.

Steam ready in 2 minutes

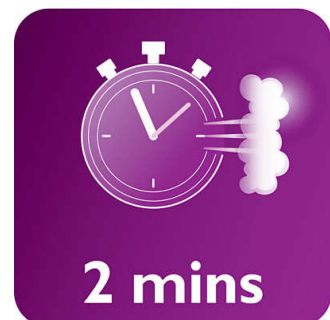

Steam is ready to use in 2min and can be refilled at anytime during ironing.

Specifications

Easy to use

- Refill any time
- Filling and emptying water: Detachable water tank, Extra large filling hole
- Water tank capacity: 1500 ml
- Heat up time: 2 minute(s)
- Safe for all fabrics: Even for delicates like silks
- Safety auto off
- Storage solution: Carry lock
- Cord freedom (swivel): 180 degree cord freedom
- Cord storage: Cord storage compartment
- Power cord length: 1.8 m
- Hose length: 1.7 m
- Low water alarm
- Hose storage: Hose storage compartment

Fast & powerful crease removal

- Soleplate: T-ionicGlide
- OptimalTEMP technology

- Power: 2400 W
- Safe rest
- Pressure: Up to 6.5
- Steam boost: 350 g
- Vertical steaming
- Steam output control
- Variable steam settings
- Steam tip

Technical specifications

- Weight of iron + base: 5 kg
- Product dimensions: 28.3 x 26.3 x 42.4 cm
- Packaging dimensions: 30.5 x 33.5 x 49.1 cm
- Weight of iron: 1.2 kg

Calc management

- Calc clean reminder
- Suitable for tap water
- Calc clean solution: Easy De-calc



Issue date 2022-02-07

Version: 1.1.2

EAN: 08 71010 37060 52

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com