



Philips PowerPro Compact
Bagless vacuum cleaner

1900 W

PowerCyclone 5
Allergy H13 filter
Turbo brush



FC9352/01

Higher suction power* with PowerCyclone 5

Compact, yet powerful

With the Philips Bagless Vacuum 3000 Series, compact design meets king-size performance. Enjoy thorough cleaning throughout your home thanks to PowerCyclone 5 technology and our MultiClean nozzle.

Superior performance

- Turbo brush, perfect for (pet) hair and fluff cleaning

Superior performance

- 1900W durable motor for high suction power
- MultiClean nozzle for thorough cleaning on all floors
- PowerCyclone 5 maintains high performance for longer
- Allergy H13 filter system captures >99.9% of fine dust

Effortless cleaning

- Compact and lightweight for easy carrying
- Dust container designed for hygienic emptying with one hand
- Soft brush integrated into handle, always ready to use


Effortless cleaning

- ActiveLock couplings easily adjust to every task

PHILIPS

Highlights

1900W durable motor

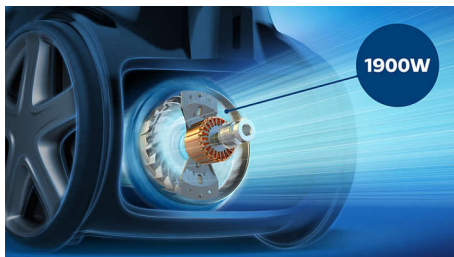

Durable 1900W motor generates up to 370W of high suction power for thorough cleaning results.

PowerCyclone 5 technology



PowerCyclone 5 technology accelerates the air flow in the cylindrical chamber to separate dust from the air and maintain high performance and strong suction power for longer.

MultiClean nozzle



MultiClean nozzle is designed to seal closely to the floor to ensure thorough cleaning across all floor types.

Hygienic dust disposal




Easy-to-empty dust container is designed for hygienic disposal with one hand, to help minimize dust cloud.

Compact and lightweight



Compact and lightweight design ensure both storing and carrying the vacuum is easy.

Integrated brush

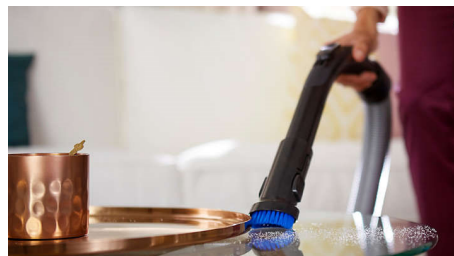

Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

Allergy H13 filter



The fully-sealed filtration system captures >99.9% of fine dust particles - including pollen, pet hair and dust mites - for allergy sufferers and anyone demanding a higher level of hygiene. Filtration level is equivalent to HEPA 13**.

ActiveLock couplings



ActiveLock couplings allow attachments to easily fit to the telescopic tube with a simple snap.

Turbo brush



The rotating Turbo brush is designed for optimal cleaning of pet hair and fluff, opening up carpet fibers for a deeper clean.

Specifications

Performance

- Input power (IEC): 1600 W
- Airflow (max): 37 l/s
- Sound power level: 82 dB
- Vacuum (max): 33 kPa
- Input power (max): 1900 W
- Suction power (max): 370 W

Design

- Color: Dark Royal Blue

Accessories

- Filter replacement kit: FC8010/02

Usability

- Action radius: 9 m
- Tube coupling: ActiveLock
- Carrying handle: Front
- Cord length: 6 m
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Rubber

Nozzles and accessories

- Accessories included: Crevice tool, Integrated brush
- Standard nozzle: MultiClean nozzle
- Additional nozzle: Turbo brush
- Accessory storage: On tubeclip

Weight and dimensions

- Dimensions of product (LxWxH): 410 x 281 x 247 mm
- Dimensions of packaging (LxWxH): 525 x 320 x 315 mm
- Weight of product: 4.5 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Allergy H13 filter
- Motor filter: Washable filter
- Filtration level: HEPA13 level**



Issue date 2023-04-14

Version: 1.1.2

EAN: 87 10103 85510 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Compared to PowerPro Compact FC8471/01

** Filtration levels are tested according EN60312-1-2017 and are equivalent to HEPA 13.