

PHILIPS

Kettle

Daily Collection

Metal

Spring lid

Light indicator

1.7 L

HD9350/96



Designed to last

For long and reliable daily use

Durable kettle in safe, food-grade stainless steel for long and reliable daily use. Philips brings 60 years of trust and expertise to this elegant long-life kettle.

Safe to use

- Strix controller

Easy to experience

- Save up to 66% energy with the cup indicators

Fast, safe boiling

- Food grade stainless steel metal (SUS304)
- Flat heating element for fast boiling
- Multi safety system against boil-dry

Simple to fill, use and clean

- Cord winder for easy adjustment and storage
- Cordless kettle with 360° pirouette base
- Easy refilling through lid or spout
- Easy-to-read water level indicator
- Spring lid with large opening for cleaning
- Pilot light indicates when the kettle is switched on

Highlights

Cup indicator




The handy water level indicators, including one-cup indicator, make sure that you only boil the amount of water that you need, saving both energy (one cup of water 250ml vs 1L) and water and helping to contribute to a better environment.

Food grade metal parts

Food grade stainless steel metal parts (SUS304) to guarantee a safe and clean cup of water.

Flat heating element

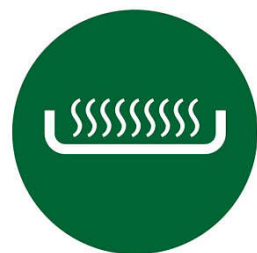

A concealed stainless steel heating element ensures fast boiling and easy cleaning.

Multi safety system



Multi safety system against boil-dry, with auto-switch off when the water is ready.

Pilot light



Elegant indicator light incorporated in the power switch illuminates when the kettle is turned on.

Water level indicator



The water level is easy to read with an indicator located underneath the handle.

Spring lid with large opening*



A push-button lid opens smoothly at the touch of a button, avoiding steam contact. The large opening simplifies cleaning.

Easy refilling



The kettle can be filled through the spout or by opening the spring lid.

Cordless + 360° pirouette base



The cordless kettle sits on a 360° pirouette base for easy lifting and replacing.

Hidden cord winder



The cord can be wrapped underneath the base, so it's the right length for any kitchen and easily stored away.

Strix controller

UK-designed Strix controller provides multi safety system against boil-dry, with auto switch off when ready or when lifted from the base.

Specifications

Technical specifications

Cord length: 0.75 m

Power: 1850-2200 W

Capacity: 1.7 L

Voltage: 220-240 V

Frequency: 50/60 Hz

Weight and dimensions

Dimensions of packaging (LxWxH): 198 x 228 x 244 mm

General specifications

Cordless

Ergonomic grip

Easy spout filling

Product features: 360 degrees base, Automatic shut-off, Boil-dry protection, Cord storage, Flat heating element, Non-slip feet, On/off switch, Pilot light, Spring lid, Wide opening lid

Lid as well as spout filling

Design and finishing

Material of main body: Stainless steel

Color(s): Rose Gold Metallic/White

Material power switch: PolyCarbonate (PC)

Service

2-year worldwide guarantee

Sustainability

Packaging: > 90% recycled materials

User manual: 100% recycled paper

