



Philips PerfectCare  
Performer  
Steam generator iron

Max 6.5-bar pump pressure

Up to 420 g steam boost  
1.8 l water tank capacity  
with detachable water tank



GC8735/80

## Ultra-fast ironing

with powerful continuous steam

The Philips PerfectCare Performer steam generator iron ensures a truly simple, powerful and burn-free ironing experience. The powerful continuous steam penetrates deeply and continuously into the fibre to remove creases easily.

### No temperature setting needed; no burning, guaranteed

- Go from ironing jeans to silk; no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board

### Fast ironing with continuous powerful steam

- Integrated easy-clean system for long-lasting performance
- Philips' best gliding with increased scratch resistance
- Save energy with ECO mode
- Powerful steam for ultimate crease removal

### Extra convenience

- Lightweight steam generator for easier handling
- Large detachable water tank for easy refilling
- Safe and secure carry lock
- Automatic switch-off for safety and energy saving
- Enjoy powerful ironing with minimum noise
- SoftGrip comfortable handle with ergonomic shape

# PHILIPS

## Steam generator iron

Max 6.5-bar pump pressure Up to 420 g steam boost, 1.8 l water tank capacity, with detachable water tank

GC8735/80

# Highlights

### Ultra-powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even tough creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.

### 1.8 l detachable water tank



The detachable water tank allows you to easily refill anytime without stopping the appliance. It has a large filling hole so you can simply fill the water tank under the tap. It has a 1.8 l capacity, so you get the convenience of up to 2 hours of continuous use, with no need to top up the tank.


### OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing

temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron all fabrics, from jeans to silk, with no burning guaranteed thanks to the perfect combination of temperature and continuous powerful steam.

### Safe rest

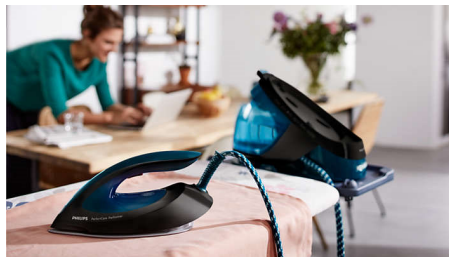

Innovative OptimalTEMP technology guarantees no burning on any ironable fabric. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

### Lightweight steam generator



Thanks to revolutionary ProVelocity technology, we've been able to make a powerful steam generator iron that is much lighter than traditional models. This means it's more stable when positioned on your ironing board and carrying it around is much easier.

### Ergonomic comfort handle



The ergonomically shaped SoftGrip handle ensures that using your steam generator is much more comfortable. The top of the handle is finished with a super-soft material with a unique pattern that enhances the gripping experience. These features make holding your iron far more pleasant for the duration of your ironing session.

### Smart Calc-Clean



Regular descaling protects your iron and maintains steam performance. The Smart Calc-Clean system is an integrated descaling and cleaning function to extend the lifespan of your steam generator iron. The iron will remind you with both light and sound that cleaning and descaling is needed. Simply place your iron onto the Smart Calc-Clean container and start the process. It takes approx. 2 minutes for the dirty water and scale to be collected; your steam generator will beep once it's finished and ready to use again.

# Specifications

## Storage

- Carry lock: For transportation and safety
- Cord storage: Velcro fix, Yes
- Hose storage: Hose storage compartment

## Easy to use

- Safe on all ironable fabrics: Even delicates like silk
- Soleplate gliding performance: 5 stars
- Safety auto off
- Soleplate name: SteamGlide Plus
- Detachable water tank
- Soft grip
- Refill anytime during use
- Power cord length: 1.8 m
- Hose length: 1.6 m
- Precision steam tip
- Ready to use: Light indicator, Sound indicator
- Soleplate scratch resistance: 4 stars

## Guarantee

- 2 year worldwide guarantee

## Technology

- OptimalTEMP technology
- For all ironable fabrics
- No burns
- ProVelocity steam engine
- Smart Control Processor
- Quiet pump

## Fast crease removal

- Pressure: Max 6.5-bar pump
- Power: 2600 W
- Continuous steam: Up to 120 g/min
- Steam boost: Up to 420 g
- Vertical steam
- Variable steam levels
- Ready to use: 2 min
- Steam-on-demand

## Green efficiency

- Energy saving mode
- Energy saving\*: 40 %
- Product packaging: 100% recyclable
- User manual: 100% recycled paper

## Scale management

- Descaling and cleaning: Smart Calc Clean
- Descaling reminder: Light, Sound, Yes

## Size and weight

- Packaging dimensions (W x H x D): 24.6 x 33.5 x 44.9 cm
- Weight of iron: 1.22 kg
- Product dimensions (W x H x D): 22 x 24 x 37 cm
- Weight of iron + base: 3.2 kg



Issue date 2024-02-13

Version: 3.3.1

EAN: 87 10103 78680 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* up to 40% energy savings based on IEC 603311, eco mode compared to turbo mode