

Philips PerformerPro  
Vacuum cleaner with bag

**2200W**

HEPA 13 filter  
5L

**FC9190/01**



Highest suction power, even as the bag fills up\*

with 2200W motor and 5L dust capacity

With its powerful 2200W motor and specially designed dust chamber, Philips PerformerPro vacuum cleaner maintains high airflow, giving you the highest suction power. For great cleaning results, even as the bag fills up!\*

#### **Convenience**

- 360Flex hose swivel for smooth maneuvering
- Extra long grip with air slide for farther reach
- SmartLock coupling to easily adjust to each cleaning task
- Long reach for convenient cleaning

#### **Excellent cleaning results**

- New 3-in-1 TriActive+ nozzle picks up coarse and fine dust
- 2200 Watt motor generating max. 500W suction power
- Revolutionary Airflow Max technology for extreme suction
- 5L dust capacity for longer cleaning

#### **Integrated Anti-Allergy system**

- HEPA AirSeal with HEPA 13 filter retains 99.99% of dust
- s-bag Ultra Long Performance captures even more fine dust
- Allergy friendly quality tested by ECARF

**PHILIPS**

# Highlights

## 2200 Watt motor



2200 W motor generates max. 500W suction power for excellent cleaning results.

## Airflow Max technology



Airflow Max technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get the highest suction power, even as the bag fills-up!

## 5L dust capacity



The specially designed 5L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

## TriActive+ nozzle



The TriActive+ nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It sweeps up the dust and dirt alongside furniture and walls with its two side brushes.

## HEPA AirSeal with HEPA 13



HEPA 13 filter and AirSeal capture even the finest dust before the air is blown out for a dust-free environment and clean, allergen free air. The exhaust air is even cleaner than the air in the room.

## ECARF certified



This vacuum cleaner with HEPA 13 filtration is certified as Allergy friendly by the European


Centre for Allergy Research Foundation. The HEPA 13 filter purifies the exhaust air up to 99,95% of allergens from; cat & dog hairs, dust mites or pollen to support an allergy friendly home environment.

## s-bag Ultra Long Performance



The Philips s-bag Ultra Long Performance made of five layers of high quality, non-clogging material captures even the finest dust. This excellent filtration gives you a better cleaning result and clean air in your home. The multilayer filtration also maintains the vacuum cleaners high suction power during the entire lifetime of the bag. The s-bag ULP has been tested and certified by the independent test institute TÜV Rheinland Group, proven to last up to 80% longer than a standard dustbag.

## Long reach

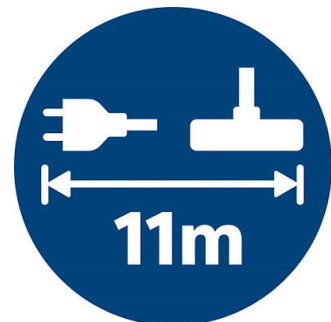

11 m reach allows you to clean a larger surface without having to switch the plug.

# Specifications

## Nozzles and accessories

- Accessories included: Crevice tool, 2-in-1 brush/small nozzle
- Standard nozzle: TriActive+ nozzle
- Accessory storage: On tubeclip

## Design

- Color: Deep black

## Consumer Trade Item

- Height: 30.4
- Width: 40
- Length: 60
- Net Weight: 6.96
- Gross Weight: 8.12
- GTIN: 8710103600367
- Country of origin: TR
- Harmonized system code: 850819

## Weight and dimensions

- Dimensions of product (LxVxH): 500 x 310 x 300 mm
- Weight of product: 5.0 kg

## Performance

- Input power (max): 2200 W

- Input power (IEC): 1800 W
- Noise level (Lc IEC): 79 dB
- Suction power (max): 500 W
- Vacuum (max): 36 kPa
- Airflow (max): 51 l/s

## Filtration

- Dust bag type: s-bag Ultra Long Performance
- Dust capacity: 5 L
- Exhaust filter: Ultra Clean Air HEPA 13 filter
- Motor filter: Triple layer
- HEPA Air Seal

## Usability

- Tube coupling: SmartLock
- Action radius: 11 m
- Cord length: 8 m
- Carrying handle: Top and front
- Tube type: Metal 2-piece telescopic tube
- Power control: Electronic on appliance
- Handgrip: Ergonomic grip with air slider
- Wheel type: Rubber
- Dust full indicator
- Park or storage assist: Vertical and horizontal



Issue date 2023-08-07

Version: 1.1.1

EAN: 87 10103 60036 7

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Suction power tested in accordance with international standard IEC 60312-1, tested by external test institute SLG Prüf- und Zertifizierungs GmbH (Philips Consumer LifeStyle B.V., August 2012)