

Philips PerfectCare Expert  
Steam generator iron

Up to 6.5 bar pressure

310 g steam boost

Carry lock

1.5 l detachable water tank

GC9231/02



## Carefree ironing, no setting required

### Detachable water tank for easy filling

Iron any ironable garment from silk, to linen, to cotton, to cashmere...in any order, without having to adjust the settings. Your PerfectCare delivers ultra-fast results for all your garments without risking burning or making them shiny. Ironing is now truly simple.

#### **Fast and powerful ironing**

- Up to 6 bar pressure
- Ready to use in 2 minutes with unlimited refill
- Descale your appliance effectively and easily to prolong its lifespan
- New SteamGlide soleplate is Philips premium soleplate
- 1.5 L detachable water tank, up to 2 hours of ironing
- Lock your iron securely to the base station

#### **Carefree ironing, no temperature setting required**

- Iron everything from jeans to silk with no temperature setting required
- Safe to leave the hot soleplate on the ironing board

**PHILIPS**


# Highlights

## Up to 6 bar pressure



The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

## Steam ready in 2 minutes

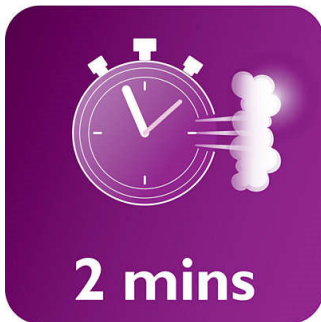

Steam is ready to use in 2 minutes and can be refilled at any time during ironing.

## Easy De-calc



Ultra-long-lasting steam performance: Philips' exclusive Easy De-Calc function provides the ideal way to get rid of limescale and extend the lifetime of your steam generator iron. Your iron will remind you to de-calc with light and sound. When your appliance is cold, simply

open the Easy De-Calc knob and collect the dirty water and limescale in a cup.

## New SteamGlide soleplate



The new SteamGlide soleplate is the best Philips soleplate. Is extremely scratch resistant, glides excellently and is easy to clean.

## 1.5 L detachable water tank



The water tank can be removed to be refilled easily under the tap. The large filling hole makes refilling fast. Thanks to the 1.5 L water tank capacity, you can iron up to 2 hours continuously without any refills.

## OptimalTEMP technology



Now you can iron everything from jeans to silk with no temperature setting required. Guaranteed no burn on all ironable fabrics.

Revolutionary technology with both the Advanced Smart Control Processor, which precisely controls the soleplate temperature so that you don't need to, and the powerful cyclonic steam chamber, which delivers consistent, powerful steam, making ironing easier and faster.

## Safe rest



The innovative Philips OptimalTEMP technology guarantees no burns on all ironable fabrics. During ironing, there is no need to put your iron back on the base station; just leave the hot iron soleplate directly on the garments or cotton ironing board cover without an additional resting accessory. It will not damage any of your ironable garments, or the board. This makes your ironing easier, with less wrist effort.

## Safety carry lock



Your steam generator iron comes with a safety carry lock. You can lock your iron safely on the base, making it safer and reducing the risk of people touching the hot soleplate. You can also carry the steam generator easily.

Steam generator iron  
Up to 6.5 bar pressure 310 g steam boost, Carry lock, 1.5 l detachable water tank

GC9231/02

# Specifications

## Fast and powerful crease removal

- Soleplate: SteamGlide
- OptimalTEMP technology
- Power: 2400 W
- Safe rest
- Pressure: Up to 6
- Vertical steaming
- Steam boost: 310 g
- Variable steam settings
- Steam output control
- Steam tip

## Easy to use

- Refill any time
- Water tank capacity: 1500 ml
- Heat-up time: 2 min
- Safe for all fabrics: Even for delicates such as silks
- Filling and emptying water: Detachable water tank,

- Extra-large filling hole
- Storage solution: Carry lock
- Cord freedom (swivel): 180 degree cord freedom
- Cord storage: Cord storage compartment
- Power cord length: 1.8 m
- Hose length: 1.7 m
- Hose storage: Hose storage compartment

## Technical specifications

- Weight of iron + base: 5 kg
- Product dimensions: 28.3 x 26.3 x 42.4 cm
- Weight of iron: 1.2 kg
- Packaging dimensions: 30.5 x 33.5 x 49.1 cm

## Limescale management

- Calc clean solution: Easy De-calc
- Suitable for tap water
- Calc clean reminder



Issue date 2022-06-21

Version: 1.0.2

EAN: 08 71010 36315 76

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)