

フィリップス ヘアーカッター
品番 HC5612/17

取扱説明書

●商品のご確認 商品をご確認ください。

●改良の為、仕様を予告なく変更することがあります。
●お買い上げのお客様へ 初めてご使用になる際は、ご使用前に充電してください。

△ 注意

●充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の充電アダプタ部を持って引き抜いてください。感電やショートで発火することがあります。

●充電アダプタは専用の充電アダプタ以外での充電はしないでください。また付属の専用充電アダプタでの充電は商品を壊すないでください。ショート、異常発熱による火災の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電アダプタをお求めください。

●刃は強く押さないでください。破損して皮膚を傷つけることがあります。

●刃やコームなどの部品が破損または開放した場合は、本製品を使用しないでください。カッターの原因になります。交換の際には必ずフィリップス社製の同型部品と取り替えてください。

●充電アダプタにビニールの袋を使用しないでください。感電やショート、発火の原因になります。

●本製品は浴室やシャワー中に使用しないでください。感電することがあります。

●本製品は頭髪のカット専用です。それ以外の目的で使用しないでください。

交流式(充電アダプタをつなげたまま)で使う場合

1 電源をOFFにします。



6 カットした髪の毛がコームにたまつた場合は、ヘアーカッターからコームを取り外し、髪を取り除いてください。

2 充電アダプタの電源コネクタ部を本体の電源コネクタ部に差し込み、充電アダプタの電源プラグ部をコンセントに差し込みます。

3 電源をONにします。



使用上のご注意

1. 60°C以上の熱湯で洗浄しないでください。

2. 本製品の使用、充電、保管は室温5°C~35°Cの範囲で行ってください(尚、低温や高温で充電すると、充電池の寿命が短くなります)。

3. 刃の清掃やコームの着脱は必ず電源OFFにしてから行ってください。

4. 刃は、薄い上向きであるので、刃を強く押さえたり、硬いものに当たらないよう、ていねいに扱ってください。

5. 診断日電池の取扱場所には保管しないでください。夏場、車の中には放置しないでください。

6. 乳幼児の手の届かないところに保管してください。

7. 本製品は、使用の都度、静けさをください。


8. 衛生上、他の人に耳を近づけしないでください。

9. 本体は防水加工をしておりますが、水や液体の中に浸れないでください。

10. ブラシ式消音・芳香剤を使用しているコンセントあるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因になります。

② 各部の名称

本体/充電アダプタ/クリーニングブラシ

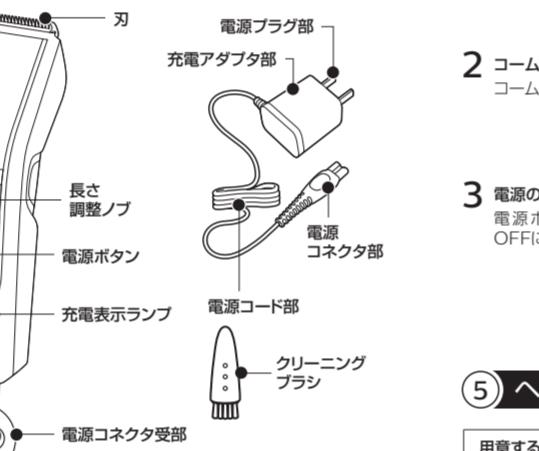

コーム



③ 充電の仕方

充電式(コードレス)で使う場合

初めてお使いになるときや、長い間ご使用にならなかったときは、ご使用前に充電してください。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

1 充電する際には、電源を必ずOFFにしてください。

2 コームを本体の両側の溝に沿って、取り付けます。

3 コームをお好みの設定位置にするには、長さ調整ノブを回しながら、コームをお好みの位置までスライドさせます(図①)。仕上がりの長さは本体の矢印にコーム上の目盛を合わせて設定します。

4 ヘアーカッターの電源をONにします。

※充電アダプタには変換器が内蔵されています。充電アダプタを水につけて別のプラグに接続するのは危険ですのでやめください。

※幼児の手の届くところに本製品を置かないでください。

※自分で意思表示ができる人(幼児を含む)に使用させないでください。また、お体の自由なだけでは使用しないでください。

※充電アダプタは必ずAC100~240Vの電源でご使用ください。

※充電アダプタは必ずAC100~240V

12) 保証とアフターサービス

保証書と修理サービスについて(必ずお読みください。)

保証期間
●保証書、表面左側に付属する修理サービスについて(必ずお読みください。)

保証期間	お買い上げ日から年
対象部分	本体、充電アダプタ(ワープロ用コーム、ショートコーム、ロングコーム、スマートコーム、クリーニングブラシを除く)

補修用性能部品の保有期間
●補修用性能部品の保有期間に製造打ち切り後 6 年です。

●性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】
●修理に関するご相談は、ご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

●修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときは、お使いの中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

●製品の保証をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

●修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間にあります。ご希望により料金で修理させていただきます。

●部品の在庫がなくなった場合には、保有期間内でも修理できないことがあります。

【海外での本製品の保証及びアフターサービスについて】

●本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)

●日本国外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができます。この場合多少日数を要することもあります。

●海外でアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お問い合わせがございましたら下記まで連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHEN

The Netherlands Fax: 31 59 279 279

【お客様の個人情報をお取り扱いについて】

●お問い合わせいただいたお客様個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

便利メモ

お買い上げ日	年	月	日
お買い上げ店名	TEL.	()	

ご使用の時、このような症状はありませんか？



●本体にさわると時々電風を感じる。
●こげくさい臭いがある。
●電源コード部を触ると通電したり、しなかつたりする。
●その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

13) 仕様

品番	HC5612/17
ハンドル品番	HC5612
充電アダプタ品番	HQ8505
本体寸法 (高さ×幅×奥行)	188×50×57mm
質量	約191g (コーム含まず)
電源方式	充電・交流式(専用充電アダプタ使用)
定格電圧	AC100~240V, 50/60Hz
充電時間	約8時間
使用時間	約75分
使用充電池	ニッケル水素充電池(NI-MH)
消費電力	9W

*改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒108-8507 東京都港区港南2-13-37 フィリップビル

14) 無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書きに従った正常な使用状態で保証期間内に故障した場合には、無料修理します。

2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。

3. ご贈答等の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。

4. 保証期間内でも次の場合は有料修理になります。

①使用上の誤り及び不当な修理や改造による故障及び損傷。

②お買い上げ後の輸送、移動、落下げ等による故障及び損傷。

③火災、地震、水害、その他の天災地変、公害や異常電圧による故障及び損傷。

④一般家庭以外(例えば、業務の長時間使用)に使用された場合の故障及び損傷。

⑤保管場所の表示がない場合。

⑥保証書に記載した年月日、お客様名、販売店名の記入のない場合、或は字符串を書き換えた場合。

※保証書は、本書に明示した条件のもとににおいて無料修理をお約束するものです。従って保証書を行っている者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。

保証期間経過後の修理についてご不明な場合は、フィリップスサポートセンターにお問い合わせください。


※保証期間経過後の修理・補修用性能部品の保有期間にについて詳しくは取扱説明書の保証とアフターサービスの項目をご覗ください。

※お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただきます。ご了承ください。また個人情報は、株式会社

フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

ENGLISH

HC5612/17

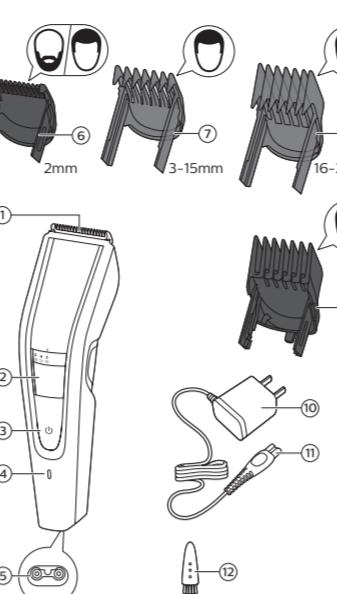

Charging with the supply unit

- 1 Make sure that the appliance is switched off (Fig. 4).
- 2 Insert the small plug into the appliance and put the supply unit in the wall socket (Fig. 5). When the appliance is charging, the battery status indicator light flashes green (Fig. 6).
- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Optimizing the lifetime of the rechargeable battery

When you have charged the appliance for the first time, we advise you to use it until the battery is completely empty. Continue to use the appliance until the motor almost stops operating during a session. Then recharge the battery. Follow this procedure at least twice a year.

Using the appliance

The hair length settings are indicated in millimeters. The settings correspond to the remaining hair length after trimming.

Note: Be careful when you trim for the first time. Do not move the trimmer too fast. Make smooth and gentle movements.

Tip: Start trimming at a high length setting and reduce the length setting gradually until you have reached the desired hair length.

Trimming with the trimming comb

The appliance comes with one beard and stubble comb, a thinning comb, one short hair comb and one long hair comb.

- 1 Attach a comb to the appliance (Fig. 7).
- 2 Turn the zoom wheel to select the desired length setting (Fig. 8).

Note: When you trim for the first time, start at the highest length setting to familiarize yourself with the appliance.

- 3 Switch on the appliance.
- 4 Move the appliance slowly and with light pressure against the direction of hair growth (Fig. 9).

Make sure that the flat part of the comb always stays in contact with the skin to obtain an even result (Fig. 10).

- 5 Switch off and clean the appliance after each use.

Trimming without comb

Use the trimmer without the trimming comb to trim hair close to the skin (0.5 mm) or to contour the neckline and sideburns.

Be careful when you trim without a comb because the cutting unit removes every hair it touches.

- 1 Pull the comb off the appliance (Fig. 12).
- 2 Switch on the appliance.
- 3 Touch the hair lightly with the cutting unit. Make well-controlled movements (Fig. 13).
- 4 Switch off and clean the appliance after each use.

Cleaning

Warning: Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- 1 Make sure that the appliance is switched off and disconnected from the wall socket.
- 2 Wipe the housing of the appliance with a dry cloth.
- 3 Remove the comb (Fig. 12) and clean it with the cleaning brush and/or rinse it under the tap (Fig. 14).
- 4 Press the release button. The cutting unit comes off the appliance (Fig. 15).
- 5 Clean the cutting unit with the cleaning brush and/or rinse it under the tap (Fig. 16).
- 6 Clean the inside of the appliance with the brush and/or rinse it under the tap (Fig. 17).
- 7 Carefully shake off excess water and let all parts air dry completely.
- 8 Insert the lug of the cutting unit into the guiding slot and push the cutting unit back onto the appliance (Fig. 18).

Replacement

Only replace a worn or damaged cutting unit with an original Philips cutting unit, available from authorized Philips service center.

- 1 Press the release button. The cutting unit comes off the appliance (Fig. 15).
- 2 Insert the lug of the new cutting unit into the guiding slot and push the cutting unit onto the appliance (Fig. 18).

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/part-and-accessories or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a transformer. As do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.

- This appliance can be safely cleaned under the tap (Fig. 3).
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100~240 volts to a safe low voltage of less than 24 volts.

General

- This appliance can be safely cleaned under the tap (Fig. 3).
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100~240 volts to a safe low voltage of less than 24 volts.

Charging

Charge the appliance fully before you use it for the first time or if you have not used it for a long time. It takes approximately 8 hours to fully charge the appliance.

When the appliance is fully charged, it has a cordless operating time of up to 75 minutes.

Note: After charging the appliance once fully for the first time, you can also use the appliance directly from the wall socket. Simply connect the appliance to the wall socket.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

The battery must be removed from the appliance before it is scrapped.

- 1 Disconnect the appliance from the wall socket and let the appliance operate until the motor stops.
- 2 Insert a flathead screwdriver between the zoom wheel and bezel. Tilt the handle of the screwdriver to remove the bezel and top panel (Fig. 19).
- 3 Use a flathead screwdriver to remove the two screws in the front panel (Fig. 20).
- 4 Insert a flathead screwdriver into the slots between the front and back panel. Tilt the handle of the screwdriver to separate the front and back panels (Fig. 21).
- 5 Continue this step along the edge of the front panel to separate the front panel from the back panel (Fig. 22).
- 6 Use a flathead screwdriver to remove the two screws next to the zoom wheel (Fig. 23).
- 7 Release the inner body by pulling on the inlet area and remove the inner body from the back panel (Fig. 24).
- 8 Turn the zoom wheel and slide off the back of the appliance (Fig. 25).
- 9 Break the eight snap hooks and remove the cover of the inner body (Fig. 26).
- 10 Remove the printed circuit board with a flathead screwdriver (Fig. 27).
- 11 Cut the connectors from the batteries and remove the batteries (Fig. 28).

Danger: Do not connect the appliance to the wall socket again after you have opened the appliance.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The appliance produces an uneven cutting result.	The comb does not touch the skin when you move the appliance through the hair.	Make sure the comb is always fully in contact with the skin when you move the appliance through the hair.
You only move the appliance in one direction.	Because not all hairs grow in the same direction, move the appliance in different directions (upwards, downwards and across).	Move the appliance slowly and with light pressure against the direction of hair growth (Fig. 9).
The setting of the comb has changed during trimming.	Check the setting of the comb. If you push the appliance too hard onto the scalp, you may accidentally change the setting of the comb.	Push the comb gently against the skin.