

PHILIPS



フィリップス 電動シェーバー

品番 **S5330/12**

取扱説明書

保証書付


保証書は、この取扱説明書の最終ページについておりますので販売店で記入を受けてください。

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。
長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。


また、お読みになった後は、お使いになる方がいつでも見られる
ところに必ず保管してください。

商品のご確認


商品をご確認ください。

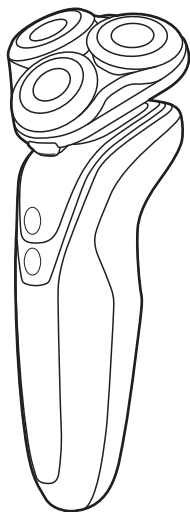


本体

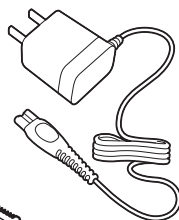

充電アダプタ
(HQ8505)

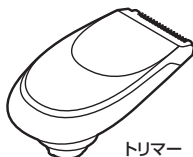

トリマー

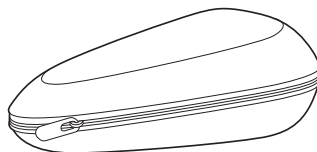

収納ケース

※改良の為、仕様を予告なく変更することがあります。

目次

● はじめに	商品のご確認 1 目次 2 必ずお守りください 3・4 各部の名称 5・6 LED表示について 7 充電の仕方 8
● ご使用方法	シェービングの仕方 9・10 トリマーの使い方 11 お手入れ方法 12～15 携帯の仕方 15 刃の交換 16 シェーバーを廃棄するとき 17
● 困ったとき	故障かな?と思ったら 18・19
● 英文解説	Guidance in English 21～42
● 保証	保証とアフターサービス 44 仕様 45 無料修理規定 46 保証書 最終ページ

必ずお守り ください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区別しています。

○絵表示について



記号は、「危険、警告、注意」を示します。

図の中や近くに具体的な注意内容を示します。



警告 人が死亡または重傷を負う可能性が想定される内容。



注意 人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例



●記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



●記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

警告



●シェーバー本体ならびに充電アダプタは改造しないでください。また、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。



●お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。



●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。



●充電アダプタを水につけたり、水をかけたりしないでください。故障や、ショート・感電の原因になります。



●充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。



●乳幼児の手の届くところに本製品を置かないでください。



●充電アダプタには変圧器が内蔵されています。充電アダプタを切り離して別のプラグに接続するのは危険ですのでおやめください。

⚠ 注 意

- 

●充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の電源プラグ部を持って引き抜いてください。感電やショートして発火することがあります。
- 

●刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品と取り替えてください。
- 

●充電・交流使用時以外は、充電アダプタをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。
- 

●電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。
- 


●刃は強く押さえないでください。破損して皮膚を傷つけることがあります。
- 


●本製品を浴室やシャワー中に使用しないでください。感電することがあります。

使 用 上 の ご 注 意


1. 本製品はヒゲ(あごヒゲ、口ヒゲ、もみあげなど)の長さを整えたり、シェービングするためのものです。それ以外の目的で使用しないでください。
2. フィリップスシェーバーを初めてお使いの方は、剃り方に慣れるまで2～3週間かかることがあります。
3. 80℃以上の水でシェーバーを洗浄しないでください。
4. 本製品の使用、充電、保管は室温5℃～35℃の環境下で行ってください。(尚、低温や高温で充電すると、充電電池の寿命が短くなります。)
5. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないように、ていねいに扱ってください。
6. シェービングユニットの清掃や着脱は、必ずスイッチを切ってから行ってください。
7. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しいシェービングヘッドと交換してください。
8. 極端に高温または低温の場所、直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
9. 乳幼児の手の届かないところに保管してください。
10. 充電アダプタは付属の専用アダプタを使用してください。
11. 充電アダプタが破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電アダプタをお求めください。
12. シェーバーは水や液体の中に浸けないでください。

各部の名称

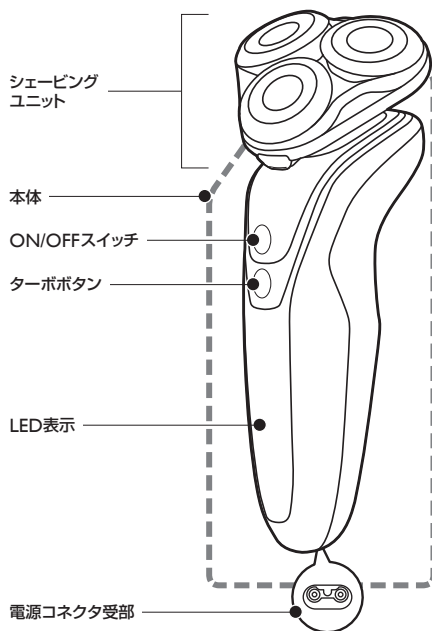


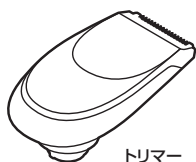

トリマー

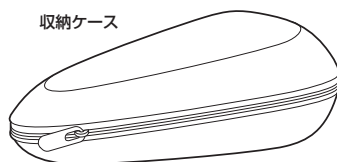

収納ケース

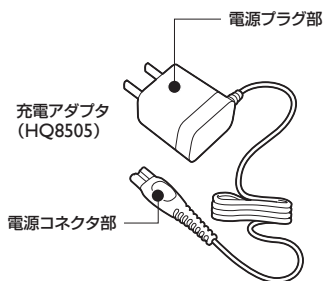


充電アダプタ
(HQB505)

電源プラグ部

電源コネクタ部


●シェービングユニット

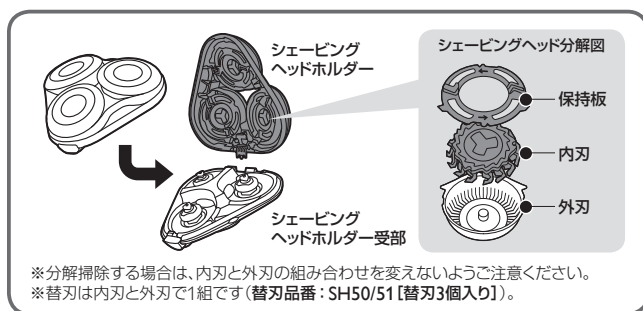

LED表示について

初めてお使いになるときや、長い間で使用にならなかったときは、LED表示が出るまでに時間がかかる場合があります。

主な表示(本体)

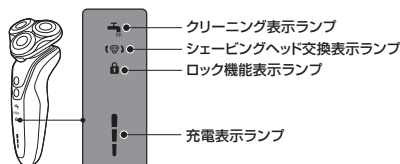

●**ロック機能(カギマークが表示されていると電源は入りません)**
ON/OFFスイッチを約3秒長押しすると、カギマークが表示されてロックがかかります。再度約3秒長押しすると解除できます。充電アダプタに接続すると、ロックは自動的に解除されます。



●**充電表示(充電アダプタで充電する場合)** 充電中は一番下の充電表示ランプが白色に点滅します。点灯になると、1つ上のランプが順次、点滅～点灯に変わります。



●**充電完了表示** 充電が完了すると、白色の充電表示ランプが全て点灯します。満充電後、約30分経過すると充電表示ランプが消えます。



●**充電催促表示** 動作中に充電残量が少なくなると(使用可能時間が残り約5分以下)、充電表示ランプがオレンジ色に点滅します。ON/OFFスイッチを切ると、充電表示ランプが数秒間オレンジ色に点滅後、消灯します。



●**シェービングヘッド交換表示** 電源を切った後にシェービングヘッドの交換マークが点灯すると、交換時期です。シェービングヘッドを交換してください(P16参照)。



●**クリーニング表示** ON/OFFスイッチを切ると、クリーニングをうながすために蛇口マークが点滅します。「お手入れ方法」(P12～15)をご参照ください。



●**残量表示** 満充電の時は全てのランプが点灯し、充電残量が少なくなるとともに充電表示ランプの表示が下がっていきます。スイッチのON/OFFの際に充電表示ランプが数秒間点灯します。

お客様による充電電池の交換はできません。

この商品は通常1時間充電です。

満充電で約45分使用できます。

充電の仕方

初めてお使いになるときや、長い間ご使用にならなかったときは、充電しないと使用できません。ご使用前に充電してください。充電時間は約1時間です。充電開始後数分間、充電表示ランプが点滅しないことがあります。そのまま充電すると充電表示ランプが点滅します。海外(100～240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

※本製品はリチウムイオン電池を使用していますが、ご使用の都度充電をしても充電電池の寿命には影響ありません。

充電アダプタで充電する場合

- 1 シェーバー本体の電源が切れていることを確認してください。
- 2 充電アダプタの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。
- 3 ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。



クイックチャージ

充電残量が0の状態では充電アダプタで充電する場合、以下の表示になると一回分のシェービング(約3分間)に十分な充電残量が確保されています。

- 3つの充電表示ランプが順番に点滅する。

●充電完了後は充電アダプタをコンセントから抜いてください。



注意

- 専用の充電アダプタ以外での充電は行わないでください。
- 長期間使用しない場合や、使ったり使わなかったりして保管しておく、充電電池が過放電し液漏れして使えなくなります。

シェービングの 仕方(ドライ)

肌が乾いた状態でのシェービングの
仕方です。

●本製品は交流式(充電アダプタをつなげたまま)でもご使用いただけます。




警告

浴室やシャワー中に使用しないでください(感電することがあります)。
シェーバー本体は水や液体の中に浸けないでください(故障の原因となります)。

- モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ご使用前に外刃の破れや変形がないか確認してください。
(外刃に破れや変形があると肌を傷つける原因になります)
- ヒゲ剃り以外の目的(頭髮など)には、使用しないでください。
- 肌が乾いた状態でご使用ください。
- シェービングフォーム、ジェル、石けんはお使いいただけません。

- 1 スイッチを押して電源を
ONにします。

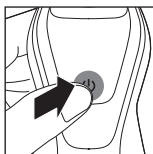


- 3 シェービング後はスイッチを押
し、電源をOFFにします。

- 2 刃を肌に軽く押しあて、
円を描くように動かしな
がら剃ります。




ターボモード設定

通常使用時と比べて10%パワーアップして、ヒゲの濃い部分や
素早いシェービングに適したモードです。
シェーバーの電源をONにした状態でターボボタンを押すと
ターボモードをご使用いただけます。再度ターボボタンを押すと
ターボモードを解除できます。

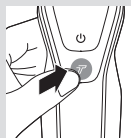


**上手に
剃るには**

肌に強く押しつけるのではなく、軽く押しあてるのがコツです。

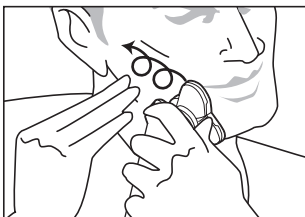


ほお

肌を伸ばし、ヒゲを立たせるように小さく回しながら剃ります。

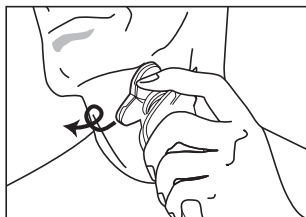

あごの裏側

刃を肌に軽くあて、図のようにあごを上げて回転させながら剃ります。

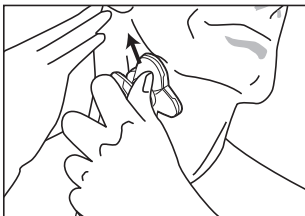

ほおの奥から首筋

片方の手で肌を後ろに引っ張り小さく回しながら剃ります。



鼻の下

鼻の下を伸ばし、小さく回しながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2～3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに限らずシェービング方法を変える時には、肌もヒゲも新しいシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください(最低でも1週間に3回以上)。この3週間は、あまりシェービング方法を変えたりせず、同じシェーバーで肌を慣らすことが大切です。

トリマーの使い方


トリマーはヘアライン、もみあげ、ヒゲなどを整えるのに便利です。

- 1 シェービングユニットのはずし方
シェービングユニットを本体からはずします。

※シェービングユニットは、回さずにまっすぐ引き抜いてください。



- 2 トリマーの突起部(図①)をシェーバー上部の溝(図②)に合わせ、カチッと音がするまで押し込み(図③)、本体に取り付けます。スイッチをONにすると、トリマー先端の刃が往復してカットします。

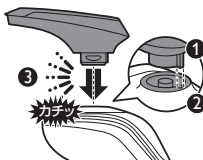


- 3 鏡を見ながらトリマーをカットしたいところに直角にあたるようにしてください。一度に切らずに、少しずつカットしてください。



注意：あまり押し当て過ぎると肌を傷めますのでご注意ください。

- 4 シェービングユニットのつけ方
トリマーをはずし(図①)、シェービングユニットの突起部(図②)をシェーバー上部の溝(図③)に合わせ、カチッと音がするまで押し込み(図④)、本体に取り付けます。

※トリマーは、回さずにまっすぐ引き抜いてください。

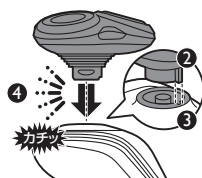

※トリマーは、使用後必ずお手入れしてください。

シェービングユニットはご使用の都度、水洗いによるお手入れをしてください。

お手入れ方法



警告

お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。

水洗いによるお手入れ方法



注意

- お手入れの際は、スイッチをOFFにしてから水洗いしてください。
- シェービングユニットは水洗いできますが、本体は水中に浸けないでください。
- シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

※洗剤は使用しないでください。

※ぬるま湯（40℃前後）でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯はお止めください。故障の原因となります。


※お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、異常ではありません。

シェービングユニットのお手入れ方法

- 1 シェービングユニットをぬるま湯または水で約30秒洗います。



- 3 シェービングユニットをぬるま湯または水で約30秒洗い流します。

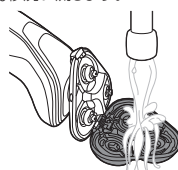

- 2 シェービングユニットリリースボタンを押し、シェービングユニットを開きます。




- 4 シェービングユニットの余分な水を切り、よく乾かします。

- 5 乾いたことを確認したら、シェービングユニットを閉じてください。

トリマーのお手入れ方法

※トリマーは、使用後必ずお手入れしてください。

- 1 トリマーを取り付けた状態でシェーバーのスイッチをONにし、ぬるま湯または水ですすぎ洗いをします。

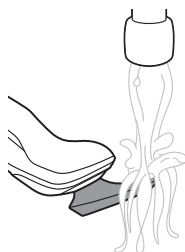

- 2 シェーバーのスイッチをOFFにし、トリマーを十分に乾燥させてください。

※トリマーはティッシュペーパーやタオルなどでふかないでください。刃を傷める原因になります。



- 分解掃除は約1カ月に1回が目安です。
- 分解掃除される場合は、内刃と外刃の組み合わせを変えないようにご注意ください。組み合わせが変わると、刃の状態が元通りになるまで数週間かかる場合があります。

分解掃除の仕方

刃の取り外し方


- 1 シェービングユニットリリースボタンを押し、シェービングユニットを開けます。



- 2 シェービングヘッドホルダーをシェービングユニットから引き抜きます。




- 3 保持板を、反時計回りに回して(図①)シェービングヘッドから外します(図②)。他の保持板も同様に外します。

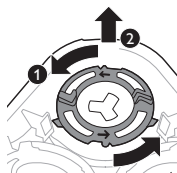


- 4 シェービングヘッドホルダーから内刃と外刃を取り外します。

※内刃と外刃の組み合わせが変わるのを防ぐため、一度に複数の刃を同時に分解せず、1つずつお手入れしてください。

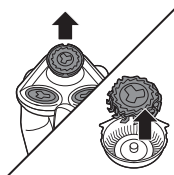


- 5 内刃と外刃をぬるま湯または水で洗います。

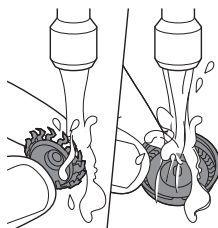

刃の取り付け方

- 1 内刃を外刃に戻し、シェービングヘッドホルダーに戻します。

※外刃とシェービングヘッドホルダーの凸凹が合うように入れてください。

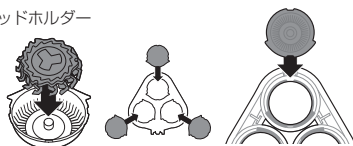


- 2 保持板を外刃の凸凹に合わせてシェービングヘッドホルダーに戻し(図①)時計回りに回して(図②)セットします。他の保持板も同様にセットします。

カチッと音がするまで保持板を回してください。



※この時、シェービングヘッドホルダーを手に持って保持板をセットしてください。置いたままセットすると刃を傷つける原因となります。

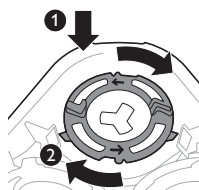

- 3 シェービングヘッドホルダーをシェービングユニットに取り付け、シェービングヘッドホルダーを閉じます。



携帯の仕方

収納ケースに入れる前にシェーバーをきちんと乾燥させてください。

携帯の仕方

シェーバーを収納ケースに入れて、携帯します。



専用の替刃品番はSH50/51です。

刃の交換

●シェービングヘッド交換表示が点灯したら、刃の交換時期です。専用の替刃(品番:SH50/51)と交換してください。


- 1 シェービングユニットリリースボタンを押して、シェービングユニットを開きます。



- 2 シェービングヘッドホルダーをシェービングユニットから引き抜きます。




- 3 保持板を、反時計回りに回して(図①)シェービングヘッドから外します(図②)。他の保持板も同様に外します。

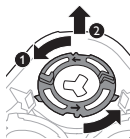


- 4 シェービングヘッドホルダーからシェービングヘッドの内刃と外刃を取り外し、新しい替刃に交換してください。

※外刃とシェービングヘッドホルダーの凸凹が合うように入れてください。



- 5 保持板をシェービングヘッドに戻し(図①)時計回りに回して(図②)シェービングヘッドホルダーにセットします。他の保持板も同様にセットします。

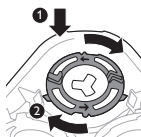

- 6 シェービングヘッドホルダーをシェービングユニットに取り付け、シェービングヘッドホルダーを閉じます。



- 7 ON/OFFスイッチを約7秒間、シェービングヘッド交換表示が点滅するまで押し続け、シェーバーをリセットしてください。



シェーバーを 廃棄するとき

※お客様による充電電池の
修理交換はできません。

リチウムイオン電池のリサイクルについて

このシェーバーはリチウムイオン電池を使用しています。
リチウムイオン電池はリサイクル可能な貴重な資源です。
ご使用済みの製品の廃棄に際しては、リチウムイオン電池
を取り出し、各自治体の処理方法に従い、リサイクル協力店
にお持ちください。




注意

- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 本体内部の金具は鋭いので、ご注意ください。


充電電池の取り外し方

スイッチをONにして、完全に動作しなくなるまで充電電池を放電させてから、行ってください。


- 1** シェービングユニットをはずし、本体下部のネジをドライバーではずし、ユニットカバーをはずします。

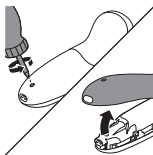


- 2** フロントカバーを曲げて、モーターユニットをはずします。

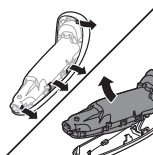

- 3** モーターユニットのカバーにあるツメをはずし、カバーを開けます。

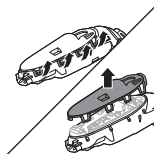

- 4** 充電電池ホルダーを持ち上げて工具でワイヤーを切断し、取り出します。

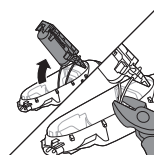

※充電電池を取り外した後は、通電しないでください。

故障かな？と思ったら、
お調べください。

故障かな？
と思ったら

だんだん切れ味が悪くなった

- ▶シェービングヘッド部が汚れていませんか？
- ▶シェービングヘッド部が損傷または摩耗していませんか？
損傷または摩耗しているときは、シェービングヘッドを交換してください。
(替刃品番：SH50/51)
- ▶シェービングヘッドに長いヒゲがからまっていますか？
P14・15「分解掃除の仕方」の項をお読みください。

充電しても使用時間が極端に短い

- ▶シェーバーが完全に止まるまで作動させてから、もう一度充電してください。
それでも改善されないときは、充電電池の寿命です。

シェーバーのスイッチを押しても作動しない

- ▶充電はしましたか？
1時間以上の充電をしてください。
- ▶カギマークが表示されていませんか？
 カギマークが表示されたらロックを解除してください。P7「ロック機能」の項をお読みください。
- ▶刃が動かなくなるほど汚れているか、破損していませんか？
シェービングヘッドをお手入れするか、交換してください。


シェーバー本体のモーターは回転しているが、内刃が回転しない

- ▶外刃にキズ、ヘコミはありませんか？
シェービングヘッドを交換してください。
(替刃品番：SH50/51)

充電できない


- ▶ **充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？**
シェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか？ 確認してください。
- ▶ **充電アダプタの電源コードが断線していませんか？**
新しい充電アダプタ (品番: HQ8505) をお買い求めください。

以上の点検により、正常な状態に戻らない場合は、
お買い求めの販売店か小泉成器修理センターにお問い合わせ願います。

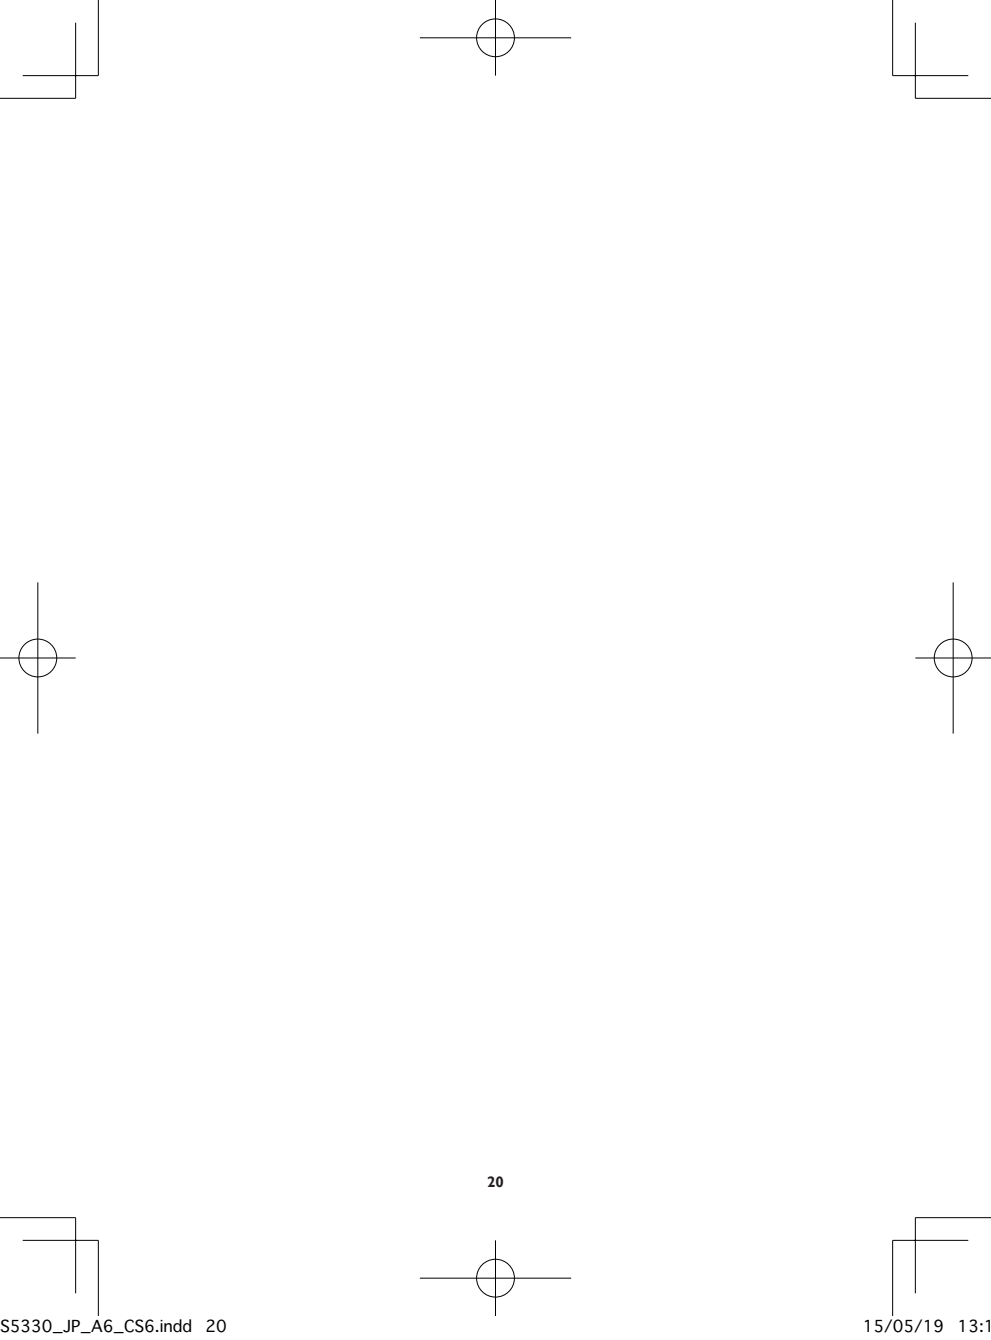

S5330/12

ENGLISH

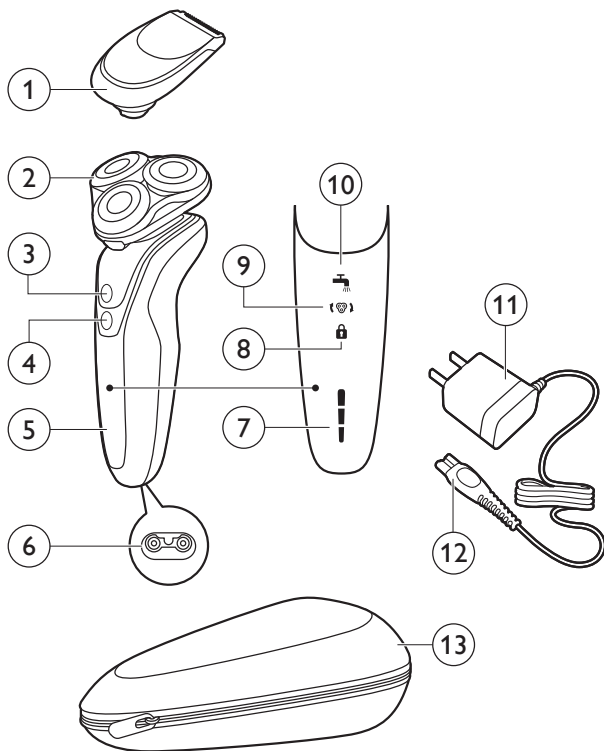

ENGLISH

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

General description (Fig. 1)

- 1 Click-on trimmer attachment
- 2 Click-on shaving unit
- 3 On/off button
- 4 Turbo button
- 5 Handle
- 6 Socket for small plug
- 7 Battery charge indicator
- 8 Travel lock symbol
- 9 Replacement reminder
- 10 Cleaning reminder
- 11 Adapter
- 12 Small plug
- 13 Pouch

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the adapter dry.

Warning

- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory



ENGLISH

or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.



Caution

- Never immerse the cleaning system or the charging stand in water and do not rinse it under the tap.
- Never immerse the shaver in water. Do not use the shaver in the bath or in the shower.
- Never use water hotter than 80°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- If your shaver comes with a cleaning system, always use the original Philips cleaning fluid (cartridge or bottle, depending on the type of cleaning system).
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- If your cleaning system uses a cleaning cartridge, always make sure that the cartridge compartment

ENGLISH

is closed before you use the cleaning system to clean or charge the shaver.

- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This shaver can be safely cleaned under the tap.
- The appliance is suitable for mains voltages ranging from 100 to 240 volts.
- The adapter transforms 100-240 volts to a safe low voltage of less than 24 volts.




The display

Charging


Battery charge indicator

- Charging takes approx. 1 hour
- Quick charge: When the appliance is connected to the mains, the lights of the battery charge indicator light up one after the other continuously. When the appliance contains enough energy for one shave, the bottom light of the battery charge indicator flashes slowly.

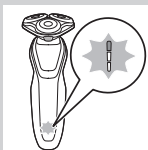

- If you leave the appliance connected to the mains, the charging process continues. To indicate that the appliance is charging, first the bottom light flashes and then lights up continuously. Then the second light flashes and then lights up continuously, and so on until the appliance is fully charged.

Battery fully charged

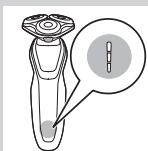

Note: You can also use this appliance directly from the mains.

Note: When the battery is full, the display switches off automatically after 30 minutes.


- When the battery is fully charged, all lights of the battery charge indicator light up continuously.

Battery low



- When the battery is almost empty, the battery charge indicator flashes orange.


Remaining battery capacity

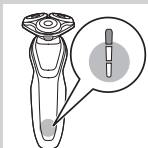

- The remaining battery capacity is indicated by the lights of the battery charge indicator that light up continuously.

ENGLISH


Cleaning reminder

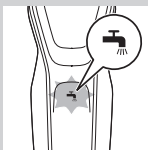

For optimal shaving performance, we advise you to clean the shaver after every use.

- When you switch off the shaver, the cleaning reminder flashes to remind you to clean the shaver.

Travel lock

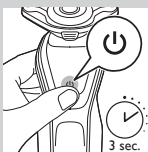

You can lock the shaver when you are going to travel. The travel lock prevents the shaver from being switched on by accident.

Activating the travel lock

- 1** Press the on/off button for 3 seconds to enter the travel lock mode.



- While you activate the travel lock, the travel lock symbol lights up continuously. When the travel lock is activated, the travel lock symbol flashes.

Deactivating the travel lock

- 1** Press the on/off button for 3 seconds.



- The travel lock symbol flashes and then lights up continuously. The shaver is now ready for use again.

Replacing shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years.




- The appliance is equipped with a replacement reminder which reminds you to replace the shaving heads. The replacement reminder lights up white continuously.

Note: After replacing the shaving heads, you need to reset the replacement reminder by pressing the on/off button for 7 seconds.

Turbo setting

- The appliance is equipped with a Turbo setting. This setting is intended for quicker and more intense shaving and makes hard-to-reach areas easier to shave.

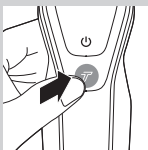

Activating the Turbo setting

- 1 To activate the Turbo setting, press the Turbo button once.

Deactivating the Turbo setting

- 1 To deactivate the Turbo setting, simply press the Turbo button once again.

Charging


Charging takes approx. 1 hour. A fully charged shaver provides up to 45 shaving minutes.

Note: You can also use this appliance directly from the mains.

Charge the shaver before you use it for the first time and when the display indicates that the battery is almost empty.

ENGLISH


Charging with the adapter

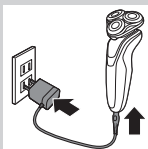

- 1 Insert the small plug into the appliance and put the adapter in the wall socket.

Using the shaver

Switching the appliance on and off

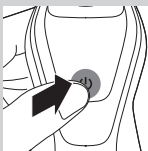

- 1 To switch on the appliance, press the on/off button once.
- 2 To switch off the appliance, press the on/off button once.
 - The display lights up for a few seconds to show the remaining battery status.

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. We advise you to shave regularly (at least 3 times a week) with this shaver for a period of 3 weeks to allow your skin to adapt to the new shaver.

Note: You can also use the shaver directly from the mains.

- 1 Switch on the appliance.




- 2** Move the shaving heads over your skin in circular movements.

Note: Do not make straight movements.

- 3** Clean the shaver after use (see chapter 'Cleaning and maintenance').

Turbo setting

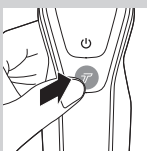

The appliance is equipped with a Turbo setting for easy shaving of hard-to reach areas.

- 1** Switch on the shaver.
- 2** Press the Turbo button once to switch on the Turbo setting if you want to shave hard-to-reach areas more quickly.




- 3** Move the shaving heads over your skin in circular movements.

Note: Do not make straight movements.

- 4** To deactivate the Turbo setting simply press the Turbo button once.

Using the click-on attachments

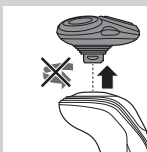


Removing or attaching the click-on attachments

- 1** Make sure the appliance is switched off.
- 2** Pull the attachment straight off the appliance.

Note: Do not twist the attachment while you pull it off the appliance.

ENGLISH

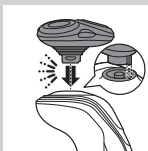

- 3 Insert the lug of the attachment into the slot in the top of the appliance. Then press down the attachment to attach it to the appliance ('click').

Using the trimmer attachment

You can use the trimmer attachment to groom your sideburns and moustache.



- 1 Make sure the appliance is switched off.
- 2 Insert the lug of the attachment into the slot in the top of the shaver. Then press down the trimmer attachment to attach it to the appliance ('click').
- 3 Switch on the appliance.
- 4 You can now start trimming.
- 5 Clean the attachment after use (see chapter 'Cleaning and maintenance').



Cleaning and maintenance


Cleaning the shaver under the tap

Clean the shaver after every shave for optimal shaving performance.

Be careful with hot water. Always check if the water is not too hot, to prevent your hands from getting burnt.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.


ENGLISH

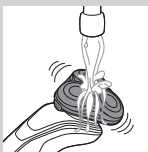

- 1** Rinse the shaving unit under a warm tap for some time.



- 2** Press the release button and open the shaving unit.

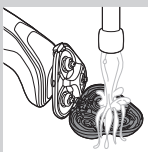

- 3** Rinse the shaving head holder under a warm tap for 30 seconds.

- 4** Carefully shake off excess water and let the shaving head holder dry.

- 5** Close the shaving head holder ('click').

Thorough cleaning method




Make sure the appliance is switched off.

- 1** Press the release button and open the shaving unit.




- 2** Pull the shaving head holder off the bottom part of the shaving unit.

ENGLISH

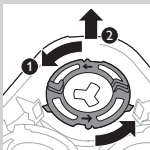


- 3** Turn the retaining rings anticlockwise and remove them.

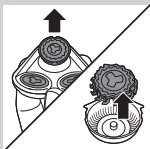


- 4** Remove the shaving heads from the shaving head holder. Each shaving head consists of a cutter and guard.


Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

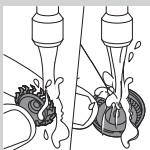

- 5** Clean the cutter and guard under the tap.

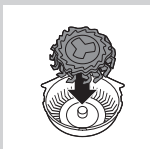


- 6** After cleaning, place the cutter back into the guard.

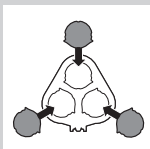


- 7** Put the shaving heads back into the shaving head holder.


ENGLISH

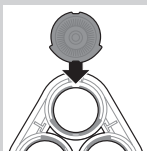


Note: Make sure the projections of the shaving heads fit exactly into the recesses of the shaving-head holder.

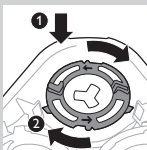


8 Place the retaining rings back onto the shaving head holder and turn them clockwise.

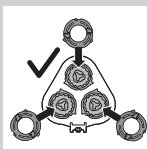

- Each retaining ring has two recesses and two projections that fit exactly in the projections and recesses of the shaving head holder.

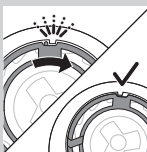

- Turn the ring clockwise until you hear 'click' and the ring is fixed.

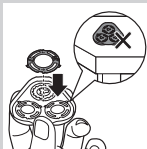

Note: Hold the shaving head holder in your hand when you reinsert the shaving heads and reattach the retaining rings. Do not place the shaving head holder on a surface when you do this, as this may cause damage.

ENGLISH




- 9 Reinsert the hinge of the shaving head holder into the slot of the shaving unit. Close the shaving head holder ('click').

Cleaning the click-on attachments

Never dry the trimmer attachment with a towel or tissue, as this may damage the trimming teeth.

Cleaning the trimmer attachment

Clean the trimmer attachment every time you have used it.

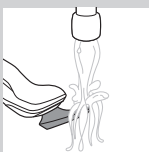

- 1 Switch on the appliance with the trimmer attachment attached.
- 2 Rinse the trimmer attachment under a hot tap for some time.
- 3 After cleaning, switch off the appliance.
- 4 Carefully shake off excess water and let the trimmer attachment dry.



Tip: For optimal trimmer performance, lubricate the trimmer teeth with a drop of sewing machine oil every six months.

Storage

Note: We advise you to let the appliance dry before you store it in the pouch.



- Store the shaver in the pouch supplied.


Replacement

Replacing the shaving heads


For maximum shaving performance, we advise you to replace the shaving heads every two years.

Replacement reminder

The shaving unit symbol will light up to indicate that the shaving heads need to be replaced. Replace damaged shaving heads immediately. Only replace the shaving heads with original Philips shaving heads as specified in chapter 'Ordering accessories'.

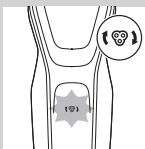

- 1** The shaving unit symbol lights up continuously when you switch off the shaver to indicate that the shaving heads need to be replaced.

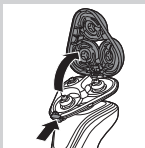


- 2** Press the release button and open the shaving unit.




- 3** Pull the shaving head holder off the bottom part of the shaving unit.


ENGLISH

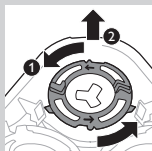


- 4** Turn the retaining rings anticlockwise and remove them.

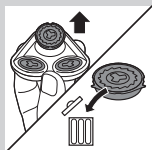


- 5** Remove the shaving heads from the shaving head holder and throw them away.

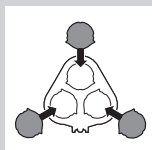

- 6** Place new shaving heads in the holder.

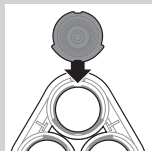


Note: Make sure the projections of the shaving heads fit exactly into the recesses of the shaving head holder.

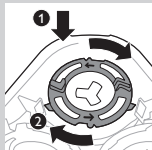


- 7** Place the retaining rings back onto the shaving heads and turn them clockwise.


ENGLISH

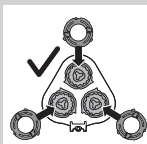

- Each retaining ring has two recesses and two projections that fit exactly in the projections and recesses of the shaving head holder.

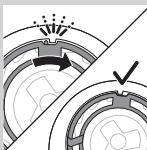


- Turn the ring clockwise until you hear 'click' and the ring is fixed.

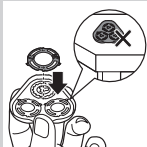

Note: Hold the shaving head holder in your hand when you reinsert the shaving heads and reattach the retaining rings. Do not place the shaving head holder on a surface when you do this, as this may cause damage.



- 8** Reinsert the hinge of the shaving head holder into the slot of the shaving unit. Close the shaving head holder ('click').

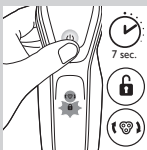

- 9** To reset the replacement reminder, press and hold the on/off button for approx. 7 seconds.

Ordering accessories

To buy accessories or spare parts, visit **www.shop.philips.com/service** or go to your Philips

ENGLISH



dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).


Shaving heads

- We advise you to replace your shaving heads every two years. Always replace the shaving heads with original SH50/51 Philips shaving heads.

Recycling

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.


Removing the rechargeable shaver battery

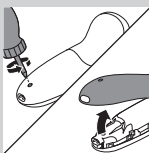


Only remove the rechargeable battery when you discard the shaver. Make sure the battery is completely empty when you remove it.

Be careful, the battery strips are sharp.


- 1** Remove the screw in the backpanel with a screwdriver. Then remove the back panel.

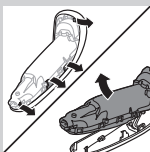

- 2** Bend the hooks aside and remove the power unit.

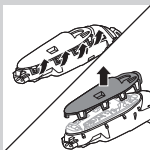

- 3** Break the snap hooks and remove the front panel of the power unit.

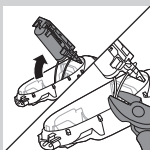

- 4** Take out the battery holder and cut the battery tags with a pair of cutting pliers.

Guarantee and support

If you need information or support, please visit **www.philips.com/support** or read the separate worldwide guarantee leaflet.

Guarantee restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/**


ENGLISH

support for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The shaver does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads (see chapter 'Replacement').
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads by following the steps of the thorough cleaning method (see chapter 'Cleaning and maintenance').
The shaver does not work when I press the on/off button.		Clean the shaver thoroughly before you continue shaving (see chapter 'Cleaning and maintenance').
	The rechargeable battery is empty.	Recharge the battery (see chapter 'Charging').
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads or replace them (see chapters 'Cleaning and maintenance' and 'Replacement').

ENGLISH

Problem	Possible cause	Solution
I replaced the shaving heads, but the replacement reminder symbol is still showing.	You have not reset the shaver.	Reset the shaver by pressing the on/off button for approx. 7 seconds (see chapter 'Replacement').
A shaving head symbol has suddenly appeared on the display.	This symbol is a replacement reminder.	Replace the shaving heads (see chapter 'Replacement').

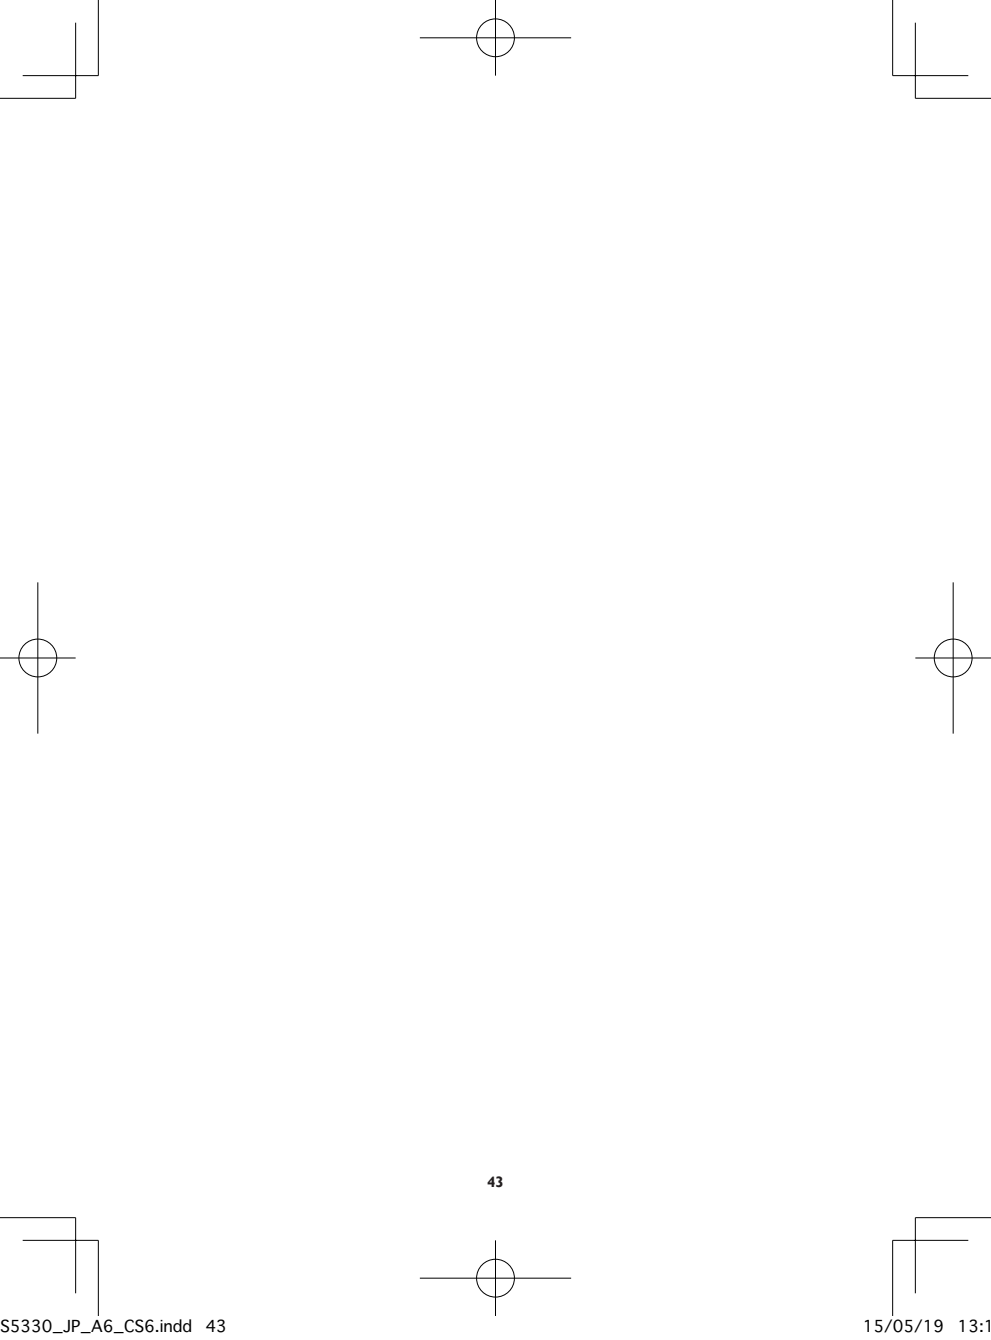

保証書と修理サービスについて (必ずお読みください)

保証と アフターサービス

〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのと大切に保管してください。

保証 期間	お買い上げ日から2年間
対象 部分	本体、充電アダプタ(シェーピングユニット、トリマーを除く)

【補修用性能部品の最低保有期間】

- 補修用性能部品の最低保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、小泉成器修理センターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、お買い上げの販売店へご相談ください。

【保証期間中は】

- 製品に保証書を添えてお買い上げの販売店にご持参ください。
保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN
The Netherlands Fax:+31 51 259 2785

【お客様の個人情報のお取り扱いについて】

- お受けしましたお客様の個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

便 利 メ モ

お買い上げ日	年 月 日	お買い上げ店名	TEL. ()
--------	-------	---------	----------

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、スイッチを切り、充電アダプタをコンセントから外して、必ず販売店にご相談ください。



愛情点検

仕 様

品 番	S5330/12
電 源 方 式	充電交流式 (専用充電アダプタ使用)
消 費 電 力	9W (AC100V充電時)
定 格 電 圧	AC100-240V (50/60Hz)
本 体 質 量	173g
充 電 時 間	約1時間
替 刃	SH50/51

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス エレクトロニクス ジャパン

日本販売代理店 小泉成器株式会社 〒541-0051 大阪市中央区備後町3-3-7

無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
 2. 保証期間内に故障して無料修理をお受けになる場合には、商品と保証書をご持参、ご提示のうえ、お買い上げの販売店にご依頼ください。なお、商品を直接メーカーへ送付した場合の送料等はお客様の負担となります。
 3. ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、小泉成器修理センターにご依頼ください。
 4. 保証期間内でも次の場合には有料修理になります。
 - ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
 - ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
 - ④ 一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
 - ⑤ 保証書の提示がない場合。
 - ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。
- ※ 保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
- 保証期間経過後の修理についてご不明の場合は、お買い上げの販売店または小泉成器修理センターにお問い合わせください。
- ※ 保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。
- ※ お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

持込修理

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。
お買い上げの日から下記期間中に故障が発生した場合は、本書をご提示のうえ、お買い
上げの販売店に修理をご依頼ください。

お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品 名	電動シェーバー
品 番	S5330/12
保 証 期 間	ご購入上げ日より2年
対 象 部 分	本体、充電アダプタ(シェービングユニット、トリマーを除く)
お 買 い 上 げ 日	年 月 日
お 客 様	ご住所 〒
	ご芳名
	電話番号
★ 販 売 店	販売店名・住所・電話番号

- ★ 保証書は再発行しませんので、大切に保管してください。
- ★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印し、お客様にお渡しください。

フィリップスお客様情報センター
ナビダイヤル(全国共通)

ナビダイヤルにかからない時は
TEL 06(6261)8230 FAX 06(6268)1432
日本販売代理店 小泉成器株式会社
〒541-0051 大阪市中央区備後町3-3-7

0570(07)6666

小泉成器修理センター
ナビダイヤル(全国共通)

ナビダイヤルにかからない時は
小泉成器東日本修理センター TEL 048(718)3340
〒344-0127 埼玉県春日部市水角1190
小泉成器西日本修理センター TEL 06(6613)3145
〒559-0033 大阪市住之江区南港中1丁目3番98号

0570(09)8888

小泉成器部品センター
ナビダイヤル(全国共通)

ナビダイヤルにかからない時は
TEL 06(6613)3211
〒559-0033 大阪市住之江区南港中1丁目3番98号

0570(09)2222

受付時間:平日9:00~17:30 (土・日・祝日・夏期休暇・年末年始を除く)

この印刷物は再生紙を使用しております。



4222.002.5786.1

©2015 Philips Electronics Japan, Ltd.