
www.philips.com/welcome

HQ988, HQ916, HQ915, HQ912



PHILIPS

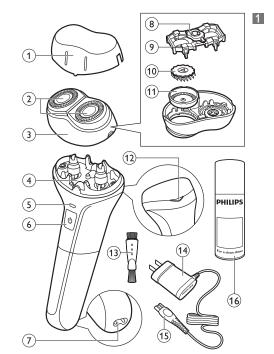


ENGLISH


Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- Protection cap
- 2 Shaving heads
- Shaving unit
- Hair chamber
- Charging light (HQ916: with battery-low indication)
- On/off button
- Socket for small plug
- Wheel of retaining frame
- Retaining frame
- 10 Cutter



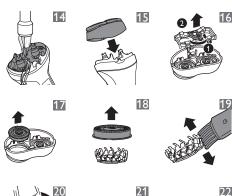





















- **12** Release button
- **13** Cleaning brush
- 14 Adapter
- 15 Small plug
- **16** Philips Cleaning Spray (HQ110) (Optional)

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Warning: Keep the adapter dry.
- This symbol means: Forbidden to rinse the adapter under a running tap (Fig. 2).

Warning

- The adapter contains a transformer, Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This washable shaver is not suitable for shaving in the shower (Fig. 3).
- Warning: Do not use this appliance close to a bathtub, shower or other containers filled with
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- Do not use the shaver or the adapter if it is damaged.
- Only use the adapter supplied.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- Charge, use and store the shaver at a temperature between 5°C and 35°C.
- Warning: Remove the detachable cord from the handheld part before cleaning this part in
- Be careful with hot water. Always check if the water is not too hot, to avoid burning your hands.
- Do not immerse the shaver in water or another liquid
- Do not use the shaver in combination with pre-shave lotions, creams, foams, gels or other cosmetic products.



www.philips.com











General

- This shaver can be safely cleaned under the tap.
- This symbol means: Suitable to be cleaned under a running tap (Fig. 4).
- The adapter transforms 100-240 volts to a safe low voltage of less than 24 volts.

Compliance with standards

- This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.
- This shaver complies with the applicable IEC safety standards.

Charging

Make sure the shaver is switched off when you start to charge it.

When you charge the shaver for the first time or after a long period of non-use, let it charge continuously for 16 hours. Charging normally takes approx. 8 hours.

For optimal performance, only charge the shaver when the battery is low.

Do not leave the appliance connected to the mains for more than 24 hours.

Charge indications

Charging

- When the shaver is charging, the charging light lights up green continuously (Fig. 5).

Battery low

- HQ916: the charging light lights up orange continuously.
- HQ988/HQ915/HQ912: the motor stops or starts running slower.

Charging the appliance

Charge the appliance when the charging light lights up orange (HQ916) or when the motor stops or starts running slower (HQ988/HQ915/HQ912).

- 1 Put the small plug in the shaver (Fig. 6).
- 2 Put the adapter in the wall socket.
- The charging light goes on to indicate that the appliance is charging (Fig. 5).

Note: Charge the shaver for at least 8 hours but not more than 24 hours.

3 Remove the adapter from the wall socket and pull the small plug out of the shaver when the battery is fully charged (Fig. 7).

Note:The shaver does not run from the mains.When the battery is empty, you have to recharge the battery before you can use the shaver again.

Cordless shaving time

When the shaver is fully charged, it has a shaving time of approximately 30 minutes.

Using the appliance

Note:The shaver cannot be used directly from the mains.

- 1 Remove the protection cap.
- 2 Press the on/off button to switch on the shaver (Fig. 8).
- Move the shaving heads over your skin. Make both straight and circular movements (Fig. 9).

Note: Shave on a dry face only. Do not use the shaver in combination with gel, foam or water.

Note: Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

- 4 Press the on/off button to switch off the shaver.
- 5 Clean the shaver after every shave (see chapter 'Cleaning and maintenance').
- 6 Put the protection cap on the shaver to prevent damage and to avoid dirt accumulation in the shaving heads (Fig. 10).

Note: Make sure that the lug of the protection cap covers the release button.

Cleaning and maintenance

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Clean the shaver after every shave to guarantee better shaving performance. For the best cleaning result, we advise you to use Philips Cleaning Spray (HQ110). Ask your Philips dealer for information.

Note: Philips Shaving Head Cleaning Spray (HQ110) may not be available in all countries. Contact the Consumer Care Centre in your country about the availability of this accessory.

After every shave: shaving unit and hair chamber

Warning: Remove the detachable cord from the handheld part before cleaning this part in water.

Be careful with hot water. Always check if the water is not too hot, to avoid burning your hands.

- 1 Switch off the shaver, remove the adapter from the wall socket and pull the small plug out of the shaver.
- 2 Rinse the outside of the shaving unit under a hot tap for some time (Fig. 11).
- 3 Press the release button (1) and pull the shaving unit in a straight upward movement off the shaver (2). (Fig. 12)
- 4 Rinse the inside of the shaving unit under a hot tap for some time (Fig. 13).
- 5 Rinse the hair chamber under a hot tap for some time (Fig. 14).
- 6 Put the shaving unit back onto the shaver (Fig. 15).

Every two months: shaving heads

Note: Do not use cleaning agents or alcohol to clean the shaving heads. Only use Philips Cleaning Spray (HQ110).

- 1 Switch off the shaver, remove the adapter from the wall socket and pull the small plug out of the shaver.
- 2 Press the release button (1) and pull the shaving unit in a straight upward movement off the shaver (2) (Fig. 12).
- 3 Turn the orange wheel anticlockwise (1) and remove the retaining frame (2) (Fig. 16).
- 4 Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard (Fig. 17).

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- 5 Remove the guard from the cutter (Fig. 18).
- 6 Clean the cutter with the short-bristled side of the cleaning brush. Brush carefully in the direction of the arrows (Fig. 19).
- 7 Clean the guard with the long-bristled side of the cleaning brush (Fig. 20).
- 8 Put the cutter back into the guard after cleaning (Fig. 21).
- 9 Put the shaving heads back into the shaving unit (Fig. 22).
- 10 Put the retaining frame back into the shaving unit (1) and turn the orange wheel clockwise (2) (Fig. 23).

11 Put the shaving unit back onto the shaver (Fig. 15).

Storage

Store the appliance in a dry place. Store the appliance at a temperature between 5°C and 35°C .

- 1 Switch off the shaver.
- 2 Put the protection cap on the shaver after use to prevent damage and to avoid dirt accumulation in the shaving heads (Fig. 10).

Note: Make sure that the lug of the protection cap covers the release button.

Replacement

Replace the shaving heads every two years for optimal shaving results.

Replace damaged or worn shaving heads with Philips HQ56 shaving heads only.

For instructions on how to remove the shaving heads, see chapter 'Cleaning and maintenance', section 'Every two months: shaving heads'.

-Accessories

To retain the top performance of your shaver, make sure you clean it regularly and replace its shaving heads at the recommended time.

Shaving heads

 We advise you to replace your shaving heads every two years. Always replace them with Philips HQ56 shaving heads only (Fig. 24).

Cleaning

- Use Philips Cleaning Spray (HQ110) to clean the shaving heads thoroughly.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 25).
- The built-in rechargeable battery contains substances that may pollute the environment. Remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way (Fig. 26).

Removing the rechargeable battery

Only remove the rechargeable battery if it is completely empty.

- 1 Remove the adapter from the wall socket and pull the small plug out of the shaver.
- 2 Let the shaver run until it stops and undo the screw at the bottom of the shaver (Fig. 27).
- Remove the battery compartment (1) and remove the battery (2) (Fig. 28).

Do not connect the shaver to the mains again after you have removed the battery.

■Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at www. philips.com or contact the Philips Consumer Care Centre in your country. You find its phone number in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Guarantee restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Centre in your country.

| Problem | Possible cause | Solution |
|--|--|---|
| The shaver does not shave as well as it used to. | The shaving heads are dirty. You have not cleaned the shaver well enough or you have not cleaned it for a long time. | Clean the shaving heads thoroughly before you continue shaving. See chapter 'Cleaning and maintenance'. |
| | Long hairs obstruct the shaving heads. | Clean the cutters and guards with the cleaning brush supplied. See chapter 'Cleaning and maintenance', section 'Every two months: shaving heads'. |

| Problem | Possible cause | Solution |
|---|--|---|
| | The shaving heads are damaged or worn. | Replace the shaving heads. See chapter 'Replacement'. |
| The shaver does not work when I press the on/off button. | The rechargeable battery is empty. | Recharge the battery. See chapter 'Charging'. |
| My skin is irritated after shaving. | Your skin needs time to get used to the Philips shaving system. | Skin irritation during the first 2-3 weeks of use is possible. After this period, the skin irritation usually disappears. |
| The rotation speed of the shaving heads is slower than usual. | Too much dirt has collected in the shaving heads. | Clean the shaving heads. See chapter 'Cleaning and maintenance'. |
| | The rechargeable battery is low. | Recharge the battery. See chapter 'Charging'. |
| The charging light lights up orange (HQ916 only). | The rechargeable battery is low. | Recharge the battery. See chapter 'Charging'. |
| The appliance becomes warm during | This is normal. | No action required. |

charging.

| Problem | Possible cause | Solution |
|--------------------------------------|--|---|
| The appliance makes a strange noise. | Too much dirt has collected in the shaving heads. | Clean the shaving heads. After cleaning, lubricate the central point on the inside of the guards with Philips Cleaning Spray (HQ110). See chapter 'Cleaning and maintenance'. |
| | The shaving heads are damaged or worn. | Replace the shaving heads. See chapter 'Replacement'. |

简体中文

■简介

感谢您的惠顾,欢迎光临飞利浦!为了您能充分享受飞利浦提供的支持,请在www.philips.com/welcome上注册您的产品。

■一般说明 (图 1)■

- 1 保护盖
- 2 剃须刀头
- 3 剃毛刀头部件
- 4 毛发储藏室
- 5 充电指示灯(HQ916: 带电池电量不足指示灯)
- 6 开/关按钮
- ' 小插头的转换插座
- B 固定架的滚轮
- 固定架
- 10 刀片
- 11 网罩
- 12 释放钮
- 13 清洁刷
- 14 适配器
- 15 小插头
- 16 飞利浦清洁喷雾剂 (HQ 110) (可选)

■注意事项

使用本产品之前,请仔细阅读本使用说明书, 并妥善保管以备日后参考。

危险

- 警告: 保持适配器干燥
- 警告符号注释:禁止用在打开的水龙头下进行清洗适配器。(图 2)

警告

- 电源适配器内含有一个变压器。切勿自行更换 插头,否则将导致严重后果。电源软线不能更 换,如果软线损坏,此器具(电源适配器)应 废弃
- 警告符号注释: 禁止在洗澡或淋浴时使用。(图 3)
- 警告:不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。(图3)
- 本产品不打算由肢体不健全、感觉或精神 上有障碍或缺乏相关经验和知识的人(包括儿童)使用,除非有负责他们安全的人 对他们使用本产品进行监督或指导。
- 应照看好儿童,确保他们不玩耍本产品。

注意

- 如果剃须刀或适配器已损坏,请勿再使用。
- 只能使用随附的适配器。
- 如果适配器已损坏,则务必更换原装型号 适配器,以免发生危险。
- 必须在 5 摄氏度至 35 摄氏度之间的温度 下充电、使用和存放剃须刀。
- 警告:将手持部分与电源软线分开后,才 能在水中清洗手持部分。
- 使用热水时一定要小心。切记先检查水温 是否太高,以防手被烫伤。
- 不要将剃须刀浸入水中或其他液体中
- · 请勿将本剃须刀与剃须润滑液、面霜、泡 沫、凝胶或其它护肤产品结合使用。

概述

- 这款剃须刀可放心在水龙头下清洗。
- 符号注释:适合用在打开的水龙头下进行 清洗。(图 4)
- 电源适配器可将 100-240 伏的电压转换为 24 伏以下的安全低电压。

符合标准

- 这款飞利浦产品符合关于电磁场 (EMF) 的 相关标准。据目前的科学证明,如果正确 使用并按照本用户手册中的说明进行操 作,本产品是安全的。
- 这款剃须刀符合 IEC 家电安全标准。

■充电■

请确保开始充电前,剃须刀电源已关闭。如果是第一次为剃须刀充电,或长时间未使用后充电,应让其连续充电 16 小时。充电通常需要约 8 小时。

为确保最佳性能,只能在电池电量不足时为剃 须刀充电。

不要将本产品与电源接通超过 24 小时。

充电.

剃须刀正在充电时, 充电指示灯将呈绿色 持续亮起。(图 5)

电池电量不足

- HQ916: 充电指示灯呈橙色持续亮起。
- HQ988/HQ915/HQ912: 马达停止运转, 或者运转开始变得缓慢。

为产品充电

当充电指示灯呈橙色亮起时 (HQ916),或者 当马达停止运转或开始运转缓慢时 (HQ988/ HQ915/HQ912), 应为产品充电。

- 将小插头插入剃须刀。(图 6)
- 2 将电源适配器插入电源插座。
- 充电指示灯亮起,表示剃须刀正在充电。

注意: 至少让剃须刀充电 8 小时, 但不要超 过 24 小时。

3 电池充满后,从电源插座中拔下适配器, 并从剃须刀上拔出小插头。(图 7)

注意: 本剃须刀不能插电使用。当电池电量 耗尽时,请在再次使用剃须刀前为电池充电。

不接电源的剃须时间

当剃须刀充满电时, 剃须时间大约为 30 分

---使用本产品--

注意: 剃须刀不能连在电源上直接使用。

- 1 取下保护盖。
- 2 按下开/关按钮启动剃须刀。(图 8)
- 3 将剃须刀头在皮肤上移动。作直线和迂回 动作。(图 9)

注意: 仅限在干爽的面部剃须。请勿将本剃 须刀与凝胶、剃须泡沫或水结合使用。

注意: 您的皮肤可能需要 2 到 3 周才能适应 飞利浦剃须系统。

- 4 按开/关按钮关闭剃须刀电源。
- 5 每次剃须后均应清洁剃须刀(见"清洁和 保养"一章)。
- 6 请盖上剃须刀保护盖,以防止损坏剃须刀 头并避免其内积聚灰尘。(图 10)

注意: 确保保护盖的凸缘盖住释放钮。

■清洁和保养■

不要使用钢丝绒、研磨性清洁剂或腐蚀性液体 (例如汽油或丙酮) 来清洁产品。

每次剃须后均应清洁剃须刀, 以保证更好的剃 须效果。为了获得最佳的清洁效果,建议您使 用飞利浦清洁喷雾剂 (HQ110)。有关详情,请 咨询飞利浦经销商。

注意: 并非所有国家/地区都销售飞利浦剃须 刀头清洁喷雾剂 (HQ110)。请向当地的客户服 务中心了解是否有售。

每次剃须后:清洗剃须刀头部件和胡茬储

警告: 将手持部分与电源软线分开后, 才能在 水中清洗手持部分。

使用热水时一定要小心。切记先检查水温是否 太高, 以防手被烫伤。

- 美闭剃须刀电源,从电源插座上拔下适配 器, 并从剃须刀上拔下小插头。
- 2 将剃须刀头部件的外部放在热水龙头下冲 洗片刻。(图 11)
- 3 按释放按钮 (1), 垂直向上移动剃须刀头部 件,将其从剃须刀(2)中拉出。(图 12)
- 4 将剃须刀头部件的内部放在热水龙头下冲 洗片刻。(图 13)
- 5 将胡茬储藏室放在热水龙头下冲洗片刻。
- 6 将剃须刀头组件重新安装到剃须刀上。 (图 15)

每两个月: 清洁剃须刀头

注意: 请勿使用清洁剂或酒精来清洁剃须刀 头。只能使用飞利浦清洁喷雾剂 (HQ110)。

- 美闭剃须刀电源,从电源插座上拔下适配 器,并从剃须刀上拔下小插头。
- 2 按释放按钮 (1), 垂直向上移动剃须刀头部 件,将其从剃须刀(2)中拉出。(图 12)
- 3 逆时针转动橙色轮轴 (1) 并取下固定架 (2) 。(图 16)
- 4 一次取下并清洁一个剃须刀头。每个剃须 刀头包含一组刀片和网罩。(图 17)

注意: 不要同时清洁多组刀片和网罩, 因为 它们都是相互匹配的。如果不小心将刀片和网 罩弄混,则需要数周时间才能恢复产品的最佳 剃须性能。

5 从刀片上卸下网罩。(图 18)

- 6 用清洁刷的短毛一侧清洁刀片。按箭头方 向小心地清洁。(图 19)
- 7 用清洁刷的长毛一侧清洁网罩。(图 20)
- 图 清洁后,将刀片重新装回至网罩。(图 21)
- 9 将剃须刀头重新放入剃须刀头部件。 (图 22)
- 10 将固定架放回剃须刀头部件内 (1), 并沿顺 时针方向转动橙色轴轮(2)。(图 23)
- 11 将剃须刀头组件重新安装到剃须刀上。 (图 15)

—存储**■**

将本产品存放在干燥的地方。 必须在 5 摄氏度至 35 摄氏度之间的温度下存 放本产品。

- 1 关闭剃须刀。
- 2 使用后请盖上剃须刀保护盖,以防止损坏 剃须刀头并避免其内积聚灰尘。(图 10)

注意: 确保保护盖的凸缘盖住释放钮。

每两年更换一次刀头以获得最佳的剃须效果。 损坏或磨损的剃须刀头只能用 HQ56 飞利浦 剃须刀头更换。

有关如何拆卸剃须刀头的说明, 请参阅"清洁 和保养"一章中的"每两个月:清洁剃须刀 头"部分。

为了保持剃须刀的最佳性能, 请确保定期清洁 并在推荐的时间更换剃须刀头。

剃须刀头

- 建议您每两年更换一次剃须刀头。务必仅 使用 HQ56 飞利浦剃须刀头进行更换。 (图 24)

使用飞利浦清洁喷雾剂 (HQ110) 彻底清洁 剃须刀头。

- 弃置产品时,请不要将其与一般生活垃圾 堆放在一起; 应将其交给官方指定的回收 点。这样做有利于环保。(图 25)
- 内置充电电池含有可能会污染环境的物 质。弃置产品并将产品送到官方指定的回 收站之前,应将电池取出。到官方指定的 电池回收站处理电池。如果您在取出电池 时遇到问题, 您也可以将产品送至飞利浦 维修中心。维修中心的员工会帮您取出电 池, 并以环保的方式进行处理。(图 26)

卸下充电电池

电池电量完全耗尽后方可取出充电电池。

- 从电源插座上拔下适配器,并从剃须刀上 拔出小插头。
- 2 让剃须刀运行直到停止, 拧下剃须刀底部 的螺钉。(图 27)
- 3 卸下电池仓 (1), 取出电池 (2)。 (图 28) 取出电池之后,不要再将剃须刀与电源连接 在一起。

--保修与服务--

如果您需要服务或更多信息,或者有任何疑 问,请访问飞利浦网站:www.philips.com。 您也可与您所在国家/地区的飞利浦客户服务 中心联系(可从全球保修卡中找到其电话号 码)。如果您所在的国家/地区没有飞利浦客 户服务中心,请与当地的飞利浦经销商联系。

保修条款

由于剃须刀头(刀片和网罩)属于易磨损物 品,因此不在国际保修条款的涵盖范围之列。

---故障种类和处理方法--

本章归纳了使用本产品时最可能遇到的问题。 如果您无法根据下面的信息解决问题, 请联系

| 您所在国家/地区的飞利浦客户服务中心。 | | | | |
|---------------------|------------------------|--------------------------------|-------------------------------|--|
| | 问题 | 可能的原因 | 解决方法 | |
| | 剃须刀的剃 须效果没有 以前好。 | 剃变没须干长清须须脏有刀净时洁刀。将清,间过之,将清,间过。 | 先彻底清洁剃须刀头,再继续剃须。请参阅"清洁和维护"一章。 | |
| | | 过长的胡 须堵塞了 剃须刀 | 用随附的清洁刷清洁刀片和网罩。见"清洁 | |

剃须刀头 已损坏或 磨损。

两个月: 剃须刀 头"部分。

更换剃须刀头。 见"更换"一 章。

按下开/关钮 时,剃须刀 不工作。

充电电池 的电量已 耗尽。

给电池充电。 见"充电"一

| | 问题 | 可能的原因 | 解决方法 |
|--|-----------------------------------|---|---|
| | 我在剃须后 出现皮肤过 敏。 | 您需的过程 您需明时 您要明 的 您 完 的 活 河 利 河 利 河 、 利 河 、 利 河 利 河 利 河 利 利 利 利 利 | 在前 2-3 周的使用过程中,可能会出现皮肤过敏。在此之后,皮肤过敏通常会消失。 |
| | 剃须刀头的 转速比平时 慢。 | 剃须刀头 中积聚了 太多的灰 尘。 | 清洁剃须刀头。 请参阅"清洁和 保养"一章。 |
| | | 充电电池 的电量不 足。 | 给电池充电。 见"充电"一 章。 |
| | 充电指示灯 呈橙色亮起 (仅限于 HQ916)。 | 充电电池 的电量不 足。 | 给电池充电。 见"充电"一 章。 |
| | 产品在充电 过程中变 热。 | 这是正常 的。 | 不需要采取措 施。 |
| | 产品发出奇怪的噪音。 | 剃须刀头 中积聚了 太多的灰 尘。 | 清洁剃须刀头。 清洁后,用飞 利浦清洁喷雾 剂 (HQ110) 润 滑网罩内侧的 滑网。请参阅" , 清洁和保养"一章。 |
| | | 剃须刀头 已损坏或 | 更换剃须刀头。 见"更换"一 |

章。

磨损。

PHILIPS

产品 : 飞利浦电动剃须刀

型号 : HQ988 额定电压 : 220V~

额定输入功率: 2 W

生产日期 : 请见产品胡茬储藏室

产地 : 中国

珠海经济特区飞利浦家庭电器有限公司

中国珠海市三灶镇琴石工业区

邮政编码: 519040

全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.9-2008

制诰

PHILIPS

产品 : 飞利浦电动剃须刀

型号 : HQ916 IPX4

IPX4

额定电压 : 220V~ 额定电压 : 50Hz 额定输入功率: 2W

生产日期 : 请见产品胡茬储藏室

产地 : 中国

珠海经济特区飞利浦家庭电器有限公司

中国珠海市三灶镇琴石工业区

邮政编码: 519040

全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,GB4706.9-2008 制造

PHILIPS

产品 :飞利浦电动剃须刀

型号 : HQ915 额定电压 : 220V~ 额定频率 : 50Hz

生产日期 :请见产品胡茬储藏室

产地 :中国

珠海经济特区飞利浦家庭电器有限公司

中国珠海市三灶镇琴石工业区邮政编码:519040

全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.9-2008制造

PHILIPS

产品 : 飞利浦电动剃须刀

型号 : HQ912 IPX4 额定电压 : 220V~ 额定电压 : 50Hz

额定输入功率: 2W

生产日期 : 请见产品胡茬储藏室

产地 : 中国

珠海经济特区飞利浦家庭电器有限公司

中国珠海市三灶镇琴石工业区

邮政编码: 519040

全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,GB4706.9-2008 制造