

Philips EasySpeed
Bagless vacuum cleaner

1400W

Microfilter
1,4L

FC5225/61



Tough on dust, Easy on you

Compact and Powerful

The new Philips EasySpeed vacuum cleaner will make cleaning easier for you. Easy to carry, maneuver, store and powerful. Easy to empty dust container helps avoiding dust clouds. You can enjoy better cleaning results in an easy way

Easy to clean

- Advanced dust container design for hygienic emptying
- Extra handle for easy carrying
- Easy to clean washable filter

Extra reach for perfect cleaning results

- Reach all corners thanks to the extra long ergonomic grip

Powerful cleaning performance

- 1400 Watt motor for high performance

Powerful cleaning performance

- PowerCyclone 5 technology separates dust and air in one go

Compact storage

- Small sized appliance for compact storage

PHILIPS

Highlights

Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.

Easy Carrying



Extra handle for easy carrying.

Easy to clean filter



Washable foam filter for life-long performance.

Extra long ergonomic grip




This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

Light weight and compact




You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

Small in size

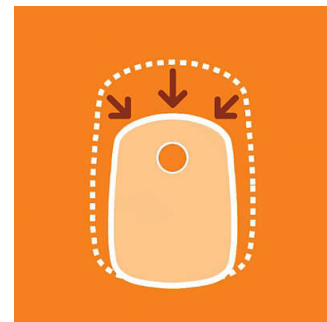

Thanks to its small size the appliance can easily be stored, saving valuable space.

1400 Watt Motor

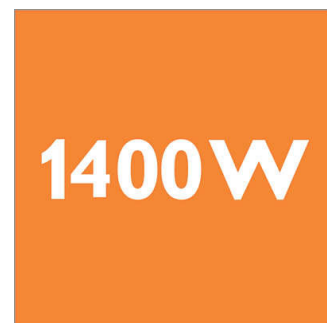

1400 Watt motor for high performance

Specifications

Design

- Color: Bright Yellow

Performance

- Input power (IEC): 1200 W
- Input power (max): 1400 W
- Suction power (max): 300 W

Usability

- Tube coupling: Conical
- Action radius: 8 m
- Cord length: 5 m
- Carrying handle: Top and front
- Tube type: Plastic 2-P tube
- Wheel type: Plastic

Nozzles and accessories

- Accessories included: 2-in-1 brush/crevice tool
- Standard nozzle: Hard and Soft Floor Nozzle
- Accessory storage: On tubeclip

Weight and dimensions

- Weight of product: 5 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 0.5 L
- Exhaust filter: Microfilter
- Motor filter: Washable filter



Issue date 2022-05-13

Version: 1.1.1

EAN: 08 71010 36568 90

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com