



Philips Philips 4300
Series
Fully automatic
espresso machines

- 8 Beverages
- LatteGo milk solution
- Black
- TFT display

EP4346/70



8 delicious fresh bean coffees, easier than ever

LatteGo, the fastest to clean milk system ever*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds*

A variety of coffees customized to your taste

- Silky-smooth cappuccino; freshly brewed by yourself at home.
- Easy selection of your coffee with the intuitive display
- Adjust aroma and volume with the coffee customizer
- Your perfect cup, every time, thanks to 2 user profiles
- Enjoy 8 coffees at your fingertips, including latte macchiato

High quality coffee from fresh beans

- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup**
- Easily adjust to your taste with 12-step grinder levels

Effortless use and cleaning for everyday enjoyment

- Easy cleaning thanks to fully removable brew group
- Up to 5000 cups*** without descaling thanks to AquaClean
- Dishwasher safe parts for your convenience
- Exceptionally easy to clean with LatteGo: 2 parts, no tubes

PHILIPS

Fully automatic espresso machines
8 Beverages LatteGo milk solution, Black, TFT display

Highlights

8 delicious coffees



Every moment has its own kind of coffee to enjoy. From powerful espresso to indulgent cappuccino, your fully automatic espresso machine delivers a perfect in-cup result without any fuss in no time.

LatteGo milk system



Enjoy silky-smooth cappuccino, even with your favourite plant-based milk alternatives. Thanks to the cyclonic frothing technology, LatteGo transforms various types of milk and plant-based alternatives with the right amount of fat and protein into the best possible dense layer of foam.

Intuitive display



There's little standing between you and your next delicious cup of coffee with our easy to use display. In a few steps you can customize your fresh-bean flavor and flow smoothly from craving to cup.

Coffee customizer




Make any coffee your own with the coffee customizer's easily adjustable settings for intensity, coffee and milk length.

User profiles

Enjoy coffee you love the same way every time with two user profiles that store your customized recipes. With an extra guest profile, your visitors can savor a coffee exactly the way they like, without changing yours.

Perfect temperature and aroma

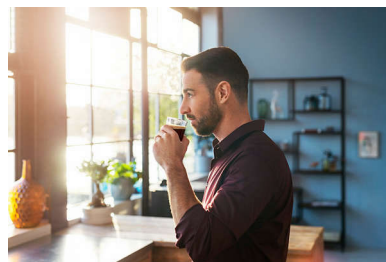

The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into

EP4346/70


anything from ultra-fine powder to coarse grindings.

100% ceramic grinders



Bring out the full flavor of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures they last for at least 20.000 cups, from coarse to ultra-fine.

Exceptionally easy to clean

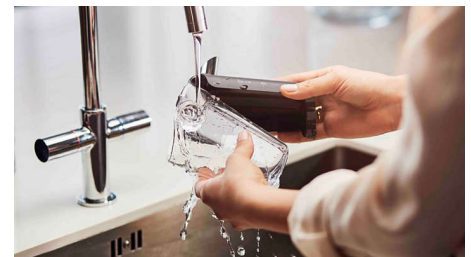

For your convenience, you can put LatteGo drip tray and the coffee ground container in the dishwasher. This will save time and ensure a hygienic cleaning.

AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups***, while enjoying clear and purified water.

Specifications

Country of origin

- Designed in: Italy
- Made in: Romania

Customization

- Aroma Strength Settings: 5
- Grinder Settings: 12
- Coffee and Milk Length: Adjustable
- Pre Brew Aroma control
- User Profiles: 2, Guest
- Temperature settings: 3

Variety

- Beverages: Espresso, Hot water, Cappuccino, Coffee, Milk froth, Ristretto, Latte Macchiato, Café au Lait, Americano, Caffé crema
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

Accessories

- Included: Measuring scoop, Water hardness test strip, AquaClean filter, Grease tube, LatteGo storage lid

Technical specifications

- Cord length: 100 cm

- Color(s): Black
- Voltage: 230 V
- Frequency: 50 Hz
- Capacity milk carafe: 0.26 L
- Capacity water tank: 1.8 L
- Capacity waste container: 12 servings
- Coffee bean capacity: 275 g
- Weight of product: 8 kg
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Max. cup height: 150 mm
- Pump pressure: 15 bar
- Finishing: Spraypainted Silver specchiato
- Product dimensions: 246x372x433 mm

General specifications

- Adjustable spout height: 85 - 145 mm
- Milk Solution: LatteGo
- Dishwasher safe parts: LatteGo, Drip tray
- Ease of cleaning & maintenance: AquaClean filter compatible
- Type of display: TFT

Service

- 2-year guarantee

Sustainability

- ECO setting
- Power consumption brewing: 1500 W
- Recyclable packaging material: > 95%



Issue date 2024-02-01

Version: 7.7.2

EAN: 87 10103 93820 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Based on consumer testing in Germany comparing leading One touch (Coffee + Milk) Full Automatic Espresso Machines (2018).

* *Based on 70-82 °C.

* **Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.