

PHILIPS

Vacuum Beard Trimmer

Beardtrimmer series 7000

0.5mm precision settings

Self-sharpening metal blades

60 min use/ 1hr charge

Incl. body groomer BG105



BT7501/85



Less mess vacuum trimmer

Philips' No. 1 in tidy trimming

Trim your beard, moustache and sideburns while keeping tidy. The new Philips Vacuum Trimmer has an improved, high performance system with 50% stronger* airflow. It captures cut hair effectively, giving you a mess-free trim.

Less mess vacuum trimmer

- Improved airflow for a mess-free trim

Skin-friendly performance

- Guards while you trim
- Trims hair in every direction

Even trimming results

- Trims evenly and captures low-lying hairs
- Self-sharpening blades for zero maintenance

Easy to use

- Adjusts to different length settings
- Lights indicate when battery is low, empty, full or charging
- 60 min runtime after a 1 hour charge, or plug it in
- Simple maintenance
- Warranty for purchase protection


Highlights

High performance vacuum system



The high performance vacuum system of the Philips beard trimmer 7000 provides 50% stronger, improved airflow* to capture up to 95% of cut hair**, and give you a mess-free trim.

Lift & Trim PRO system

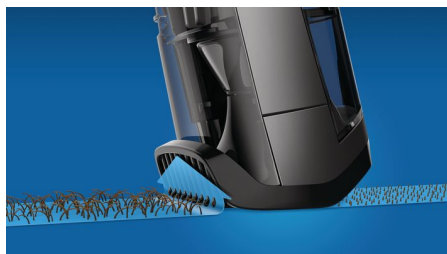

Stubble doesn't stand a chance. The Lift&Trim Pro system captures all your low-lying hairs and lifts them up toward the blades for a precise cut – whilst still being an ideal trimmer for long beards too.

Self-sharpening metal blades



Suitable for even the thickest hair, the double-sharpened blades guarantee precision edges and superior trimming every time. No oil or replacement blades required.

20 lock-in length settings



Cut to the exact length you're after. Just spin the precision dial to one of 20 length settings between 0,5 - 10mm in 0.5mm increments.

60 min corded/cordless use



Charge your beard trimmer for 1 hour to get up to 60 minutes of cordless use, or simply use it plugged into the wall. Otherwise the quick charge function gives you a full trim after just 5 minutes of charging.

Battery indicators



The battery indicators in this trimmer let you know what your battery status is: Low, empty, charging or full. This way, you can charge your trimmer on time and fully, so you won't end up with an empty battery in the middle of your trim.

Easy to clean




Detach the head of your Philips beard trimmer and rinse it under the tap for easy cleaning. Then dry it before you put it back on the appliance.

Built to last



All of our grooming products are built to last. They come with a 2 year warranty, never need to be oiled and are compatible with any voltage worldwide.

Skin protection system

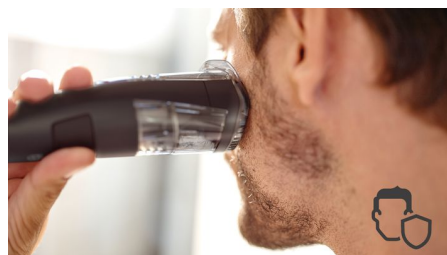

The unique skin protection system guards even your most sensitive body areas, allowing you to comfortably trim hair as close as 0.5mm without direct contact between the sharp edge of the blades and your skin.

Bidirectional trimmer and comb

Cut hair that grows in any direction using the bidirectional trimmer and 3mm comb. Pre-trimming is recommended for thicker hair.

Specifications

Cutting system

Precision (size of steps): By 0.5 mm

Range of length settings: 0.5 up to 10 mm

Cutting element: Stainless steel blades

Ease of use

Zoom wheel: Easily adjust length settings

Cleaning: Rinseable blades and guards

Operation: Corded & Cordless use

Create the look you want

Number of length settings: 20 integrated length settings

Design

Color: Black

Finishing: Soft touch

Power system

5 min quick charge

Power

Run time: 60 minutes

Charging: 1 hour full charge

Battery Type: NiMH

Automatic voltage: 100-240 V

Service

2-year warranty

No oil needed

Accessories

Comb: Lift & Trim system

Bypacked accessories: Body groom (BG1000 series)

Pouch: Soft storage pouch

Maintenance: Cleaning brush

