

PHILIPS

Vacuum Beard Trimmer

Beardtrimmer series 7000

0.5mm precision settings

Self-sharpening metal blades

Up to 75 min use/ 1 hr charge

High performance vacuum system



BT7512/15



Less mess vacuum trimmer

Philips' No. 1 in tidy trimming

Trim your beard, moustache and sideburns while keeping tidy. The new Philips Vacuum Trimmer has an improved, high performance system with 50% stronger* airflow. It captures cut hair effectively, giving you a mess-free trim.

Less mess vacuum trimmer

- Improved airflow for a mess-free trim

Even trimming results

- Trims evenly and captures low-lying hairs
- Self-sharpening blades for zero maintenance
- The precise beard trimmer for perfect edges

Easy to use

- Adjusts to different length settings
- Lights indicate when battery is low, empty, full or charging
- Up to 75 min runtime after a 1 hour charge, or plug it in
- Simple maintenance
- Warranty for purchase protection


Highlights

High performance vacuum system



The high performance vacuum system of the Philips beard trimmer 7000 provides 50% stronger, improved airflow* to capture up to 95% of cut hair**, and give you a mess-free trim.

Lift & Trim PRO system

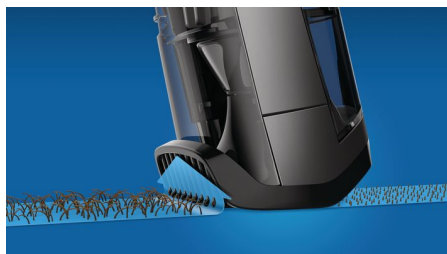

Stubble doesn't stand a chance. The Lift&Trim Pro system captures all your low-lying hairs and lifts them up toward the blades for a precise cut – whilst still being an ideal trimmer for long beards too.

Self-sharpening metal blades




Suitable for even the thickest hair, the double-sharpened blades guarantee precision edges and superior trimming every time. No oil or replacement blades required.

20 lock-in length settings



Cut to the exact length you're after. Just spin the precision dial to one of 20 length settings between 0,5 - 10mm in 0.5mm increments.

Precision trimmer

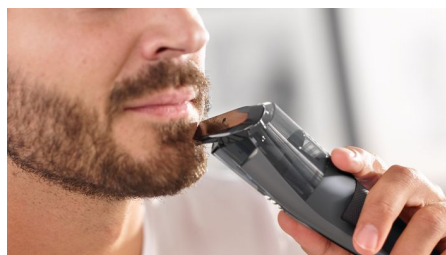

Add extra definition to the details, even in hard to reach areas, with the click-on precision trimmer.

75 min corded/cordless use



Charge your beard trimmer for 1 hour to get up to 75 minutes of cordless use, or simply use it plugged into the wall. Otherwise the quick charge function gives you a full trim after just 5 minutes of charging.

Battery indicators



The battery indicators in this trimmer let you know what your battery status is: Low, empty, charging or full. This way, you can charge your trimmer on time and fully, so you won't end up with an empty battery in the middle of your trim.

Easy to clean



Detach the head of your Philips beard trimmer and rinse it under the tap for easy cleaning. Then dry it before you put it back on the appliance.

Built to last



All of our grooming products are built to last. They come with a 2 year warranty, never need to be oiled and are compatible with any voltage worldwide.

Specifications

Cutting system

Precision (size of steps): By 0.5 mm

Range of length settings: 0.5 up to 10 mm

Cutting element: Stainless steel blades

Ease of use

Zoom wheel: Easily adjust length settings

Display: Battery level indicator

Cleaning: Rinseable blades and guards

Operation: Corded & Cordless use

Create the look you want

Number of length settings: 20 integrated length settings

Design

Color(s): Graphite

Finishing: Soft touch

Power system

5 min quick charge

Power

Run time: Up to 75 minutes

Charging: 1 hour full charge

Battery Type: NiMH

Automatic voltage: 100-240 V

Service

2-year warranty

No oil needed

Accessories

Precision trimmer

Comb: 3mm precision comb, 5mm precision comb

Stand: Charging stand

Pouch: Soft storage pouch

Maintenance: Cleaning brush

