

# PHILIPS

## Hair clipper plus

With contour following comb



QC5335



## Maximum precision, minimum effort

### Advanced contour following system

Effortless precision for a comfortable and even hair cut

#### Maximum precision


- Advanced contour-following comb for speed and comfort
- Skin-friendly blades and combs are gentle on skin
- High precision: 20 lock-in precision length settings

#### Minimum effort

- Adjustable guide combs for extra convenience
- Efficient Power System: 8 hours/45 minutes
- Corded and cordless use
- Battery charging, full and low indication
- Self-sharpening blades
- Lubrication for life
- Product comes in a luxury case for storage and protection

# Highlights

## Contour-following comb

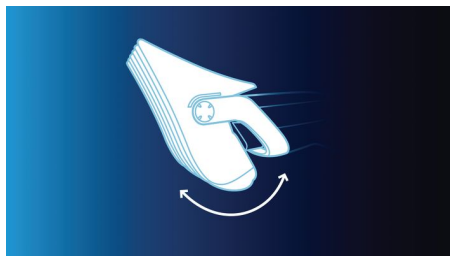


The 2D combs gently follow the contours of your head for a smooth, even and comfortable hair cut.

## Skin friendly



The rounded edges on the blades and combs are designed to avoid scratching the skin for a more comfortable experience.

## Adjustable guide combs

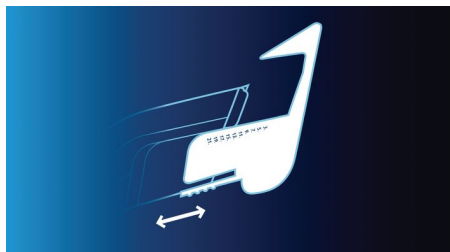


Easily select and set your desired hair length without the hassle of having to change attachments.

## Efficient Power System




The battery is fully charged in 8 hours and provides power for up to 45 minutes of cordless use.

## Cordless and corded use

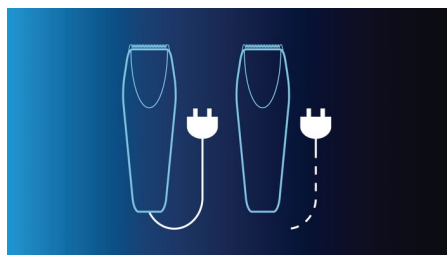

For flexibility and convenience the headroom can be used with or without the power cord.

## Battery indicator

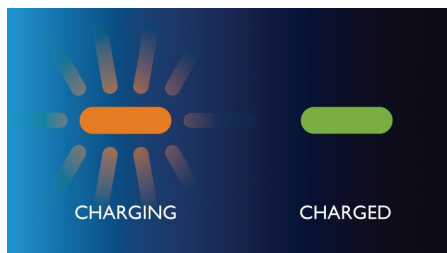

A light display flashes white to indicate that the battery is charging and turns constant when it is fully charged.

## Self-sharpening blades




The self-sharpening, stainless steel blades stay sharp longer and ensure top cutting performance.

## Lubrication for life



No need for oil maintenance.

## Luxury storage case

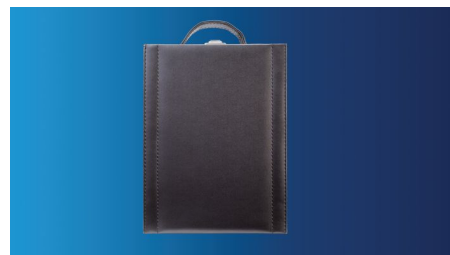

Safely keep your product and accessories together in the luxury case. Includes a styling comb, scissors and a cleaning brush.

## Range of 20 length settings

Two combs provide a full range of 20 length settings ranging from 3 to 41 mm with a precision of 2 mm between each step up.

# Specifications

## Cutting system

Cutter width: 41 mm

Number of length settings: 20

Range of length settings: 3–41 mm

Precision (size of steps): by 2 mm

Self-sharpening stainless steel blades

Maintenance free – No Oil needed

## Ease of use

Display: Charging indicator

Adjustable guide combs

## Power system

Battery type: NiMH

Charging time: 8 hours

Running time: 45 minutes

## Design

Easy grip: Side panels

Shape: Ergonomic

## Accessories

Cleaning brush

Barber tools: Styling comb and scissors

Luxury case

## Service

2-year worldwide guarantee

