




Philips PowerTouch  
dry electric shaver

DualPrecision blades

Flexing heads

PowerTouch

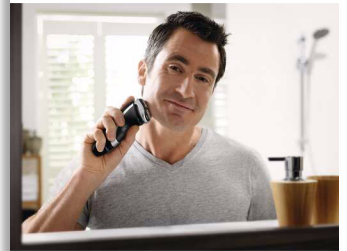

PT735

## A closer, cleaner shave

The new Philips PowerTouch system adds power to your morning. Now with more minutes, full washability and proven Super Lift&Cut shaving performance, PowerTouch ensures that you are always ready to quickly finish your morning routine.

### **The fastest way through your morning routine**

- 40+ minutes of cordless shaving, 8 hours charge
- Washable shaver with QuickRinse system

### **A comfortable and close end result**

- DualPrecision cutting shaves even the shortest stubble
- Super Lift & Cut system for a comfortably close shave
- Dynamic contour response adjusts to curves in the face and neck



**PHILIPS**  
sense and simplicity

# Highlights

## Efficient Power System: 40+ min




40+ minutes of cordless power for 14 shaves. Fully charges in 8 hours so it is always ready when you are

## Super Lift&Cut Action



The dual-blade system built into our electric shaver lifts hairs to cut comfortably below skin level for a closer shave

## Dynamic contour response

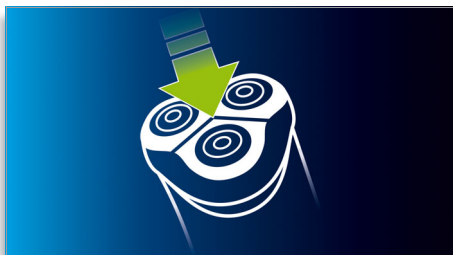


Automatically adjusts to every curve of your face and neck for a smoother shave

## DualPrecision Cutting



DualPrecision shaving heads have slots to shave the normal hairs and holes to shave even the shortest stubble

## Fully washable shaver

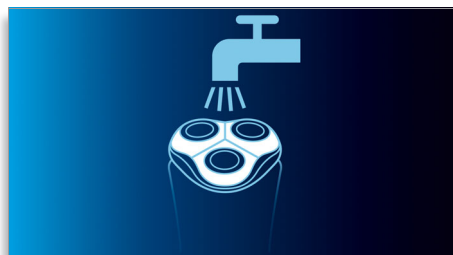

Fully washable shaver with QuickRinse system rinses clean in less time

# Specifications

## Shaving Performance

- Shaving System: DualPrecision cutting, Super Lift&Cut
- Contour-following: Dynamic contour response

## Ease of use

- Shaving time: 40+ minutes
- Charging: Rechargeable, Cordless & corded operation, Quick charge 3 min for 1 shave
- Charging time: 8 hours
- Display: 1 LED indication, Charging indication, Battery low indication, Battery full indication, Quick charge indication
- Cleaning: Fully washable shaver, Quick rinse hair chamber

## Design

- Handle: Easy grip, Rubber grip
- Finishing: Hi gloss plastic front shell, Lacquered deco ring
- Colour: Atlantic blue and silver

## Accessories

- Maintenance: Cleaning brush, Protection cap

## Power

- Battery type: Li-Ion
- Automatic voltage: 100-240 V
- Stand-by power: < 0.2 W
- Max power consumption: 5.4 W

## Service

- 2-year guarantee
- Replacement head: Replace every 2 yrs with HQ8

