



Philips
beard styler and shaver

Pro



QS6160

Express your style

Trim, style and shave—with one single product

Create the exact look you want with Styleshaver. With just a flip of the wrist, this dual-ended electric beard styler and shaver has everything you need to create a perfectly styled beard, 3-day beard or a clean shave, even on tough beards

Easy to use

- 50 minutes cordless power after a 1-hour quick charge.
- 100% waterproof for easy cleaning
- 2-year guarantee, worldwide voltage, no oil needed
- Power light clearly shows which end is running
- Travel lock prevents the product from turning on by accident
- Battery light shows the battery status
- Charging stand and pouch: stay charged and ready to go

Trim + style + shave

- Beard trimmer with 12 length settings from 0.5 mm to 10 mm
- Detail comb for precision, and beard comb for control
- Dual shaver with trimmer shaves even the toughest beards
- Reversible trimmer: 32 mm and 15 mm sides for perfect details


Skin-friendly performance

- Skin-friendly, high-performance trimmer blades

PHILIPS
sense and simplicity

Highlights

1-hour charge

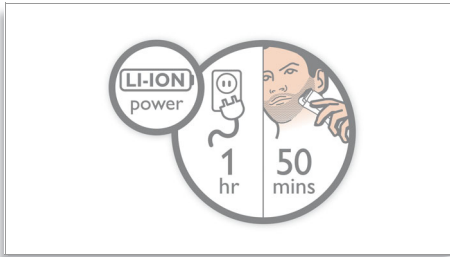

The powerful lithium ion battery lasts for 50 minutes after a 1 hour charge. A quick 10 minute charge gives you 10 minutes of grooming time, so it's always ready when you are.

100% waterproof



Shave or trim your beard where you want to, wet or dry. When you're done, just rinse it off under the tap.

Beard and stubble trimmer



A full size (32 mm) beard and stubble trimmer with 12 adjustable length settings from 0.5 mm to 10 mm makes it easy to get exactly the length you want. Turn the wheel to lock-in your perfect length setting. The durable metal trimmer with skin-friendly rounded edges guarantees a precise and even trim.

Built to last



All of our grooming products are built to last. They come with a 2 year worldwide guarantee, worldwide voltage compatibility, and they never need to be oiled.

Detail and beard combs



The detail comb gives you more precision as you trim. Use it instead of the beard comb to get into tight spots, or to round off the edges of your beard. The beard comb gives you more control for an even trim.

Dual foil shaver with trimmer



The dual foil shaver makes it easy to clean up stubble around your beard, even on your neck. The mid-trimmer catches longer, tougher hairs and the 2 floating foils shave everything else perfectly smooth.

Power light

The trimmer button lights up when the trimmer is on, and the shaver button lights up

when the shaver is on, so you always know which end is running.

Reversible trimmer



Take off the adjustable length comb, and there's a reversible precision trimmer underneath. One side is a 32 mm high-performance trimmer. Turn it around, and there is a 15 mm wide precision trimmer – perfect for getting into small spaces, like under your nose or around your mouth. It's designed to cut very close while still protecting your skin, and its small size and angled design make it easy to see what you are doing for fine lines and details.

Travel lock



Press any button for 3 seconds to activate the travel lock, so the product doesn't get turned on accidentally. A red lock symbol between the buttons shows when the travel lock is on.

Battery light



Battery light glows light blue when full and blinks orange when 10 minutes remain.

Specifications

Service

- 2-year guarantee

Accessories

- Cleaning brush

Create the look you want

- Styles: Detailed styling, Short beard, Stubble look, Long beard, Moustache

Cutting system

- Comb type: Stubble, Beard
- Non-scratch teeth: For more comfort
- Precision (size of steps): by 0.5 mm
- Number of length settings: 12

Design

- Colour: Brushed metallic
- Handle: Rubber grip

Ease of use

- Secured length settings
- Wet and Dry: 100 % waterproof for easy use and cleaning
- Zoomring: Easily adjust length settings
- Power LED
- Travel lock
- LED indicator: Charging and battery level

Power system

- Battery type: Li-Ion
- Charging time: 1 hour, Quick charge
- Running time: 50 minutes



Issue date 2012-07-24

Version: 2.0.1

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com