

PHILIPS

Electric shaver

arcitec

Special Edition



RQ1053



Realize your style

Perfectly close, even on the neck

For men who only want the very best, The Philips arcitec electric shaver RQ1053 combines Flex & Pivot Action with the Triple-track shaving heads for a perfectly close shave, even on the neck.

Perfectly close, even on the neck

- Flex & Pivot Action follows every curve

A fast and close shave

- Triple-Track shaving heads with 50% more shaving surface

Comfortably close

- Super Lift & Cut technology

Shaves even the shortest stubble

- Precision Cutting System

Perfect moustache and sideburn trimming

- Precision tube trimmer

Highlights

Flex & Pivot Action




Three independently flexing heads in a shaving unit that swivels with a full range of motion. This unique combination ensures optimum skin contact in curved areas to catch even the most problematic neck hair.

Triple-Track shaving heads



The three shaving tracks of the Triple-Track shaving heads offer 50% more shaving surface than standard, single track rotary shaving heads.

Super Lift & Cut technology

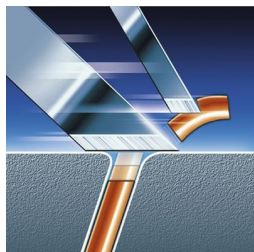

The dual blade system of this electric shaver lifts hairs to cut comfortably below skin level.

Precision Cutting System



The electric shaver has ultra thin heads with slots to shave the long hairs and holes to shave even the shortest stubble.

Precision tube trimmer



Patented tube trimmer technology for great precision and maneuverability. Perfect for contouring and trimming moustache and sideburns.

Washable shaver



The waterproof shaver can be easily rinsed under the tap.

Specifications

Shaving system

- Flex & Pivot Action
- Triple-Track shaving heads
- Precision Cutting System
- Super Lift & Cut technology
- Precision tube trimmer
- Washable
- Corrosion free heads
- Vibration free
- Shaving unit: RQ 10
- Pivoting shaving unit

Power system

- Rechargeable
- Charging time: 1 hour(s)
- Shaving time: up to 21 day(s)
- Quick charge
- Automatic selection: 100-240 V
- Rechargeable Green Li-ion energy cells

Electronic features

- Battery full indicator
- Battery low indicator
- Travel lock
- Cleaning indicator
- Charge indicator
- Electronic on/off switch
- Shaving unit replacement indicator

Accessories

- Protection cap
- Cleaning brush

Packaging

- Fusion box

