

PHILIPS

Wet and dry electric shaver

Shaver series 7000

SkinGlide Rings

50 min cordless use/1h charge

SmartClick precision trimmer

SmartClean System



S7310/26



Smooth shave: Gentle to sensitive skin Philips' no.1 on sensitive skin*

Take the edge off shaving. Specially designed to be comfortable on sensitive skin, the Philips Shaver series 7000 features comfort rings with a unique microbead coating which enables the shaver to glide effortlessly across your face.

Designed for maximum skin comfort

- SkinGlide rings with anti-friction coating for smooth glide
- 5 direction flex heads follow contours with less pressure
- Aquatec gives you a comfortable dry or refreshing wet shave

A close and smooth shave

- Blades protect skin and cut close even with 3-day stubble
- Lifts hairs to cut comfortably close

Easy to use

- Intuitive display with 1-level battery indicator
- 50 minutes of cordless shaving
- Shaver can be rinsed clean under the tap
- Comes with a 2-year guarantee

Get the most out of your shaver

- SmartClick precision trimmer for mustache and sideburns
- Keep your shaver like new with SmartClean



reddot award 2016
winner

Highlights

SkinGlide rings



Experience a more comfortable shave with anti-friction SkinGlide rings coated with microspheres. Thousands of tiny glass-like rounded spheres reduce friction and surface resistance between the shaver and the skin. This gives the shaver a smooth, easy glide and helps protect against skin irritation.

GentlePrecision PRO blades



Our updated cutting system has skin protection technology, designed to only cut hair not skin. V shaped blades guide the skin away from the blades for a close smooth shave - even on 3-day stubble.

5-direction Dynamic Flex Heads



Our shaver heads flex easily in 5 directions, gently following all the contours of the face and neck. Less pressure is needed to shave closely and skin stress is minimized.

Aquatec Wet & Dry




Adapt your shave routine to your needs. With the Aquatec Wet & Dry, you can go for a comfortable dry shave or a refreshing wet shave. You can shave with gel or foam even under the shower.

1 level battery indicator



The intuitive display shows relevant information, enabling you to get the best performance out of your shaver: 1-level battery indicator - cleaning indicator - battery low indicator - replacement head indicator - travel lock indicator

50 minutes of cordless shaving

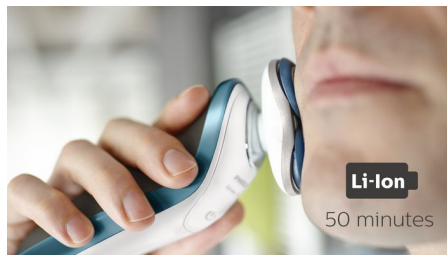

The energy-efficient, powerful lithium-Ion battery system gives you two convenient options: Charge it for an hour for up to 50 minutes of shaving time, or a quick charge for one full shave. All Shaver series 7000 models are designed to operate only in cordless mode to ensure safety in wet environments.

SmartClick Precision Trimmer



Finish your look with the click-on precision trimmer. It's ideal for maintaining your mustache and trimming your sideburns.



iF DESIGN AWARD 2016
Shaver series 7000iF DESIGN AWARD 2016



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



reddot award 2016
winner

Red Dot Award 2016: Winner

Shaver series 7000Red Dot Award 2016: Winner

Specifications

Shaving Performance

Contour following: 5-direction DynamicFlex Heads

SkinComfort: SkinGlide Rings, AquaTec Wet & Dry

Shaving system: GentlePrecisionPRO Blades, Super Lift & Cut Action

Accessories

SmartClean: Cleans, Charges, Lubricates, Cleaning cartridge (included)

SmartClick: Precision trimmer

Pouch: Travel pouch

Ease of use

Display: 1 level battery indicator, Battery low indicator, Cleaning indicator, Replace shaving heads indicator, Travel lock indicator

Cleaning: Fully washable

Design

Handle: Ergonomic grip & handling

Frame color: Ocean blue

Front color: Ceramic white

Power

Automatic voltage: 100-240 V

Battery Type: Lithium-ion

Charging: 1 hour full charge, Quick charge 5 min for 1 shave

Max power consumption: 5.4 W

Run time: 50 min / 17 shaves

Stand-by power: 0.15 W

Service

2-year guarantee

Replacement head: Replace every 2 yrs with SH70

