



Philips Headgroom  
Do it yourself head  
groomer

**180° rotating head**

corded and cordless



QC5550

## The best balder

Zero millimetre, 100% reach

A perfectly smooth and precisely shaved head with the Philips do-it-yourself Headgroom

### Shave or trim. Perfect results without help.

- Shave: Balder attachment for a smooth and precise shave
- 180° rotating head for 100% reach
- Adjustable zoom ring for easy length settings
- Contour-following combs for speed and comfort
- Skin-friendly blades and combs are gentle on skin
- Quick Charge Power System: 1hr/60 minutes cordless use
- Fully washable for easy cleaning
- Soft touch grip for easy and comfortable handling
- Includes hand-held mirror and storage pouch
- Corded and cordless use
- Battery charging, full and low indication
- Self-sharpening blades
- Lubrication for life

**PHILIPS**

**NORELCO**

sense and simplicity

Do it yourself head groomer  
180° rotating head corded and cordless

QC5550/40

# Highlights

## Balder attachment




3. Shave your own head easily and comfortably. The balder attachment clips on and off easily and guarantees a smooth shave without the nicks and cuts that can be caused by blades.

## 180° rotating head




Makes trimming or shaving your own head easier than ever. Simply select the right angle to comfortably reach all parts of your head without help.

## Adjustable zoom ring

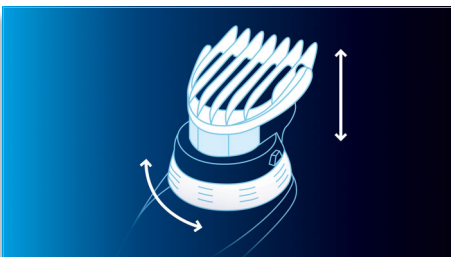


Easily select and set your desired hair length by turning the integrated zoom ring. The length settings are clearly visible on the side of the combs.

## 2D Contour-following comb

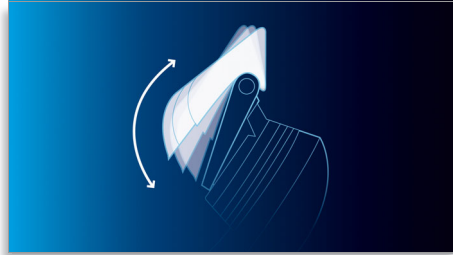

The 2D combs gently follow the contours of your head for a smooth, even and comfortable hair cut.

## Skin-friendly

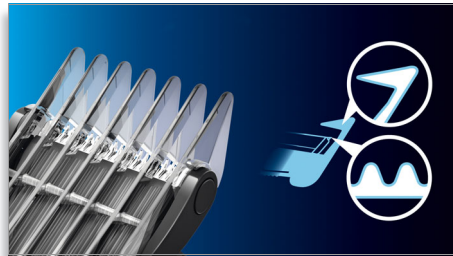


The rounded edges on the blades and combs are designed to avoid scratching the skin for a more comfortable experience.

## Quick charge battery



The lithium-Ion battery is fully charged in one hour and provides constant power for up to 60 minutes of cordless use.

## 100% Washable

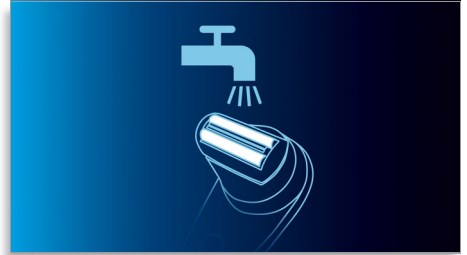

Conveniently washes under the tap for a thorough clean.

## Soft touch grip



The soft touch grip provides comfort and control when using the product.

## Includes mirror and pouch



The hand-held mirror provides extra visibility when trimming or shaving the back of your head. Safely keep your product and attachments together in the soft storage pouch.

# Specifications

## Cutting system

- Cutter width: 41 mm
- Number of length settings: 11
- Range of length settings: from 0 to 15 mm
- Precision (size of steps): by 2 mm
- Comb type: Contour following
- Balder attachment (0 mm)
- Precision comb (1 to 3 mm)
- Small comb (3 to 15 mm)

## Ease of use

- Zoomring
- Maintenance free - No Oil need
- Display: Charging indicator
- Cleans under the tap
- Adjustable guide combs

## Power system

- Battery type: Li-Ion
- Charging time: 1 hour
- Running time: 60 minutes
- Usage: Corded/cordless

## Design

- Shape: Ergonomic

## Accessories

- Cleaning brush
- Mirror
- Storage pouch
- 2 guide combs
- Balder attachment

## Service

- 2-year worldwide guarantee



Issue date 2012-12-13

Version: 10.9.1

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)