

# PHILIPS

Dry electric shaver

Shaver series 5000  
PowerTouch

TripleTrack Pivoting heads

60 min cordless use/1h charge

Pop-up trimmer

Charging stand & pouch



PT920/18



## TripleTrack

Shave 50% more in every stroke

PowerTouch adds power to your morning. Now with more minutes per charge, fully washable heads and TripleTrack blades - that give you fast shave. With PowerTouch you'll always fly through your morning routine.

### A comfortable and close end result

- TripleTrack blades cover 50% more skin surface at a time
- Pivot, Flex & Float
- DualPrecision heads shave long hairs and short stubble
- Super Lift & Cut blades raise hairs to cut closer
- Perfect for trimming your sideburns and moustache

### The fastest way through your morning routine

- 60+ shaving minutes, 1-hour charge
- Can be used corded and cordless
- Simply rinses clean
- LED Display



asimpleswitch.com

# Highlights

### TripleTrack blades



The TripleTrack heads - with their 3 rings of shaving blades - cover 50% more skin surface at a time. The DualPrecision slots and holes let you shave both long hairs and stubble in comfort.

### Pivot, Flex & Float



The heads flex to stay in close contact with your skin, and pivot to add an extra dimension of movement? all of which gives you a close, fast and comfortable shave.

### DualPrecision blades



DualPrecision blades comfortably shave both long hairs and short stubble. 1. Slots cut long hairs. 2. Holes cut stubble.

### Super Lift & Cut action



The first blade raises each hair while the second blade comfortably cuts below skin level, for really smooth results.

### Pop-up trimmer




Complete your look by using the pop-up trimmer. Perfect for maintaining a moustache and trimming sideburns.

### 60+ shaving minutes



An energy-efficient, powerful and long-lasting lithium-ion battery gives you more shaves per charge. Charge it for an hour, and you'll have 60+ minutes of shaving time - that's around 20 shaves. The shaver automatically adjusts its power to suit the way you shave, so your actual shaving time may vary. Charge it for 3 minutes and you'll have enough power for one shave.

### Efficient power System

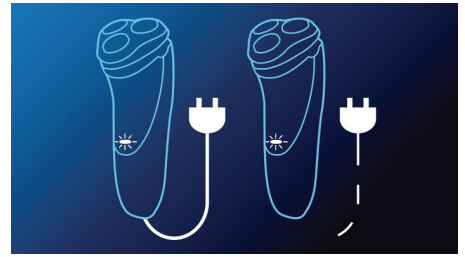

Can be used corded and cordless

### Fully washable shaver



Simply pop the heads open, and rinse thoroughly under the tap.

### LED Display



Indicates: Battery full, Battery low, Charging, Replace shaving heads, Quick charge



[asimpleswitch.com](http://asimpleswitch.com)

### Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Shaving Performance

**Shaving system:** Super Lift&Cut, TripleTrack blades

**Contour following:** Pivoting and Flexing heads

**Styling:** Integrated pop up trimmer

## Ease of use

**Shaving time:** 60+ minutes, up to 21 shaves

**Charging time:** 1 hour, 3 min quick charge for 1 shave

**Display:** Charging indication, Battery low indication, Battery full indication, Quick charge indication, 2 LED indication

**Cleaning:** Quick rinse hair chamber, Fully

washable shaver

**Display indicates:** Battery full, Battery low, Charging, Quick charge

**Operation:** Corded and cordless, Rechargeable battery

## Design

**Handle:** Anti-slip, Ergonomic Easy Grip

## Accessories

**Maintenance:** Cleaning brush, Protective cap

**Pouch:** Travel pouch

**Stand:** Charging stand

## Power

**Battery type:** Lithium-ion

**Automatic voltage:** 100-240 V

**Stand-by power:** < 0.25 W

**Max power consumption:** 5.4 W

## Service

**Guarantee:** 2-year guarantee

**Replacement heads:** Replace every 2 yrs with HQ9

